Performance

Maximum output level XLR +26dBu into 600 ohms max load

Jack +21dBu into 2k ohm max load

Internal headroom Channels +21dB

Mix +23dB

Meters 3 colour LED, quasi peak response

Sensitivity 0VU = +4dBu at XLR output Master meters 12 segment -30 to +16dB

Channel meters 2 segment -12, +16dB (5dB before clip)

Frequency response 20Hz to 50kHz +/-0.5dB

THD+n at +10dBu 1kHz Channel to mix out < 0.004%

Crosstalk at 1kHz Fader shutoff >90dB

Mute shutoff >90dB Inter channel >90dB

Noise, rms 22Hz to 22kHz Mic EIN -127dB

Residual output noise < -96dBu (-100dB S/N)
LR unity fader mix noise < -84dBu (-88dB S/N)
Group unity fader noise < -90dBu (-94dB S/N)

Channel HPF 12dB/octave below 80Hz

Mono EQ HF Shelving, +/-15dB, 12kHz

HM Peak/dip, +/-15dB, 500Hz to 15kHz, Q=1.8 LM Peak/dip, +/-15dB, 35Hz to 1kHz, Q=1.8

LF Shelving, +/-15dB, 80Hz

Stereo EQ HF Shelving, +/-15dB, 12kHz

HM Peak/dip, +/-15dB, 2.5kHz, Q=1.8 LM Peak/dip, +/-15dB, 250Hz, Q=1.8

LF Shelving, +/-15dB, 80Hz

Power supply 100-240V, 50/60Hz auto sensing, IEC input

Power consumption 45W max

Mains fuse T630mA L 20mm

Mechanical

Free standing dimensions W 507 (20") x D 530 (20.9") x H 194 (7.7")

Rack mounted W 483 (19") x D 122 (4.8") x H 444 (17.5")

10U

Underside connectors

Rack mounted W 483 (19") x D 193 (7.6") x H 497 (19.6")

11.2U

Rear connectors


Weight W4-1442 unpacked 13kg (28lbs)

W4-1442 packed 16kg (35lbs)

MixWizard⁴ Weights and Dimensions

Free Standing


The console is supplied ready for free standing operation with its side trims fitted and connector pod positioned for rear access. If you are converting from rack to free standing then make sure the pod is correctly rotated and secured, and the side trims fitted as shown:

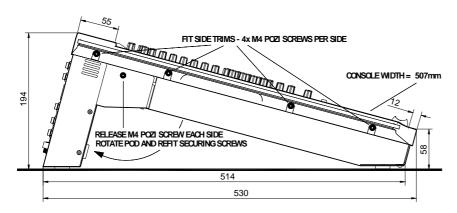

Weights	
WZ ⁴ 16:2 unpacked WZ ⁴ 16:2 packed WZ ⁴ 12:2 unpacked WZ ⁴ 12:2 packed WZ ⁴ 14:4:2 unpacked WZ ⁴ 14:4:2 packed	13kg / 28lb 16kg / 35lb 11kg / 24lb 14kg / 31lb 13kg / 28lb 16kg / 35lb

19" Rack Mount

For rack mounting, remove the two side trims and rotate the pod into the connector position preferred. Allow enough space for the cables and connectors behind the console.

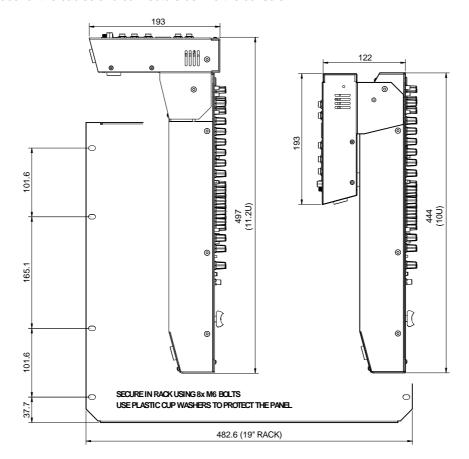



Do not transport the console with its connector pod securing screws removed. Do not attempt to remove the connector pod from the console. Do not obstruct the ventilation slots. Allow adequate space around the console for air flow. If the side trims are to be removed, do not refit their fixing screws to the unit. Retain and store these in case the trims need to be refitted in the future.