


Multifunctional BT Speaker

USER MANUAL

Product Feature (subject to the actual product)

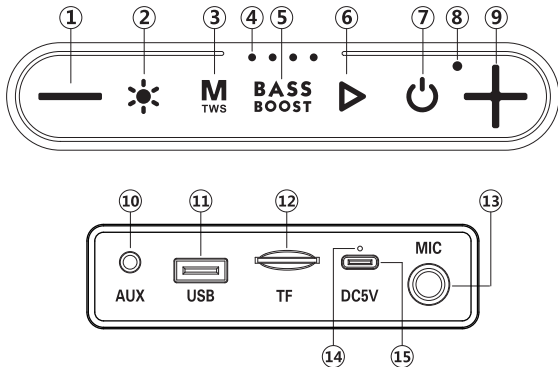

1. **【 — 】** : Short press to decrease volume. Long press to play the previous songs when playing music, Long press to select the previous radio station when in FM mode.
2. **【 ☀ 】** : Short press to turn on the ambient light, long press to directly turn off the ambient light.
3. **【 M_{TWS} 】** : Short press mode conversion: Bluetooth, FM, AUX , U disk, TF card . Long press for TWS function.
4. **【White light】** : Battery indicator.
5. **【BASS BOOST】** : Short press to switch sound effects.
6. **【 ▶ 】** : Short press to play/pause, and long press to automatically search for channels in FM mode. When playing a recording file, long press the play button to delete the recording. When playing music, long press the play button to quickly enter the recording file playback. In the bluetooth mode, long press the play button to directly disconnect the bluetooth connection.
7. **【 ⏻ 】** : Long press to power on/off. (Press and hold for 10 seconds to restore factory settings)
8. **【Blue light】** : Function indicator.
9. **【 + 】** : Short press to increase volume. While playing music, long press to play the next music. Long press to select the next radio station when in FM mode.
10. **【 AUX 】** : AUX audio input
11. **【 USB 】** : Insert the U disk to play MP3 music.
12. **【 TF 】** : Insert TF card to play MP3 music.
13. **【 MIC 】** : Plug in a wired microphone and singing a song.

14. **【Charging indicator】** : The red light is on when charging, the red light is off when fully charged and the green light is on.
15. **【DC 5V】** : Charging jack, use a USB charging cable to connect with the charger for charging.

Bluetooth Connection Operation

Turn on to enter the Bluetooth mode. Then turn on the mobile Bluetooth and search the Bluetooth name of the speaker or find a string of digital code for pairing. If there is a prompt to pair the password, please enter "0000" and click confirm connection.

Bluetooth internal recording operation

1. Insert TF card or U disk, then switch to Bluetooth mode
2. The mobile phone plays the accompaniment music after connecting to the bluetooth
3. Insert in a wired microphone or turn on a wireless microphone.
4. Long press the record button, the Bluetooth internal recording starts to work, and then short press the record button to finish the internal recording and start to play the internal recording file.

Charging Instruction


1. To protect the performance of the battery, avoid using the machine while charging.
2. Note: The machine has no power bank function, it is forbidden to connect other devices through the USB interface.
3. Use a 5V \equiv 2A charger connected with usb charging cable for the device to charge, the red light is on when charging, and the red light is off when fully charged, and the green light is on.

TWS connection operation

1. When in Bluetooth mode, turn on two bluetooth speakers device at the same time. Long press the mode button of any one of the speakers, and both speaker device will be automatic pairing successfully. And long press the mode key to disconnect the TWS interconnect function.
2. When the TWS is connected, turn on the Bluetooth function of the mobile phone. After searching for the name of the Bluetooth speaker, click the name of the Bluetooth speaker on the mobile phone to pair it. After the pairing is successful, open the player of the mobile phone to play music, and the two Bluetooth speakers will play the mobile phone synchronously selected music.
3. When the TWS is connected, and the functions of the other Bluetooth speaker will be synchronized when connected with any one of bluetooth speaker device. Long press the shutdown button of any Bluetooth speaker , and the other Bluetooth speaker will also be shut down synchronously.
4. When the TWS is connected, the optimal distance between the two Bluetooth speakers is about 5 meters.

Remoter Schematic diagram and operation instructions

1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remoter, please aim it at the receiving window of the device. There should be no obstacles between the remoter and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remoter may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remoter no battery, you can replace the No. 7 battery to avoid mixing old and new batteries. Please check the remoter batteries regularly to see if they need to be replaced.

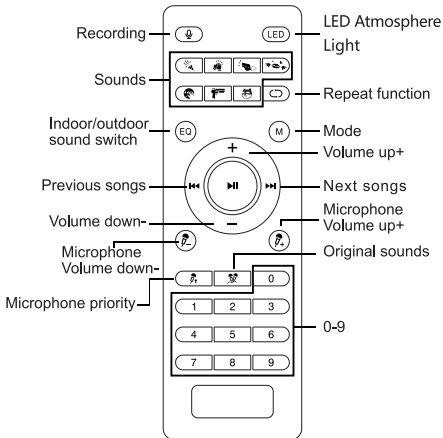

Troubleshooting

1. Automatically shut down when turned on

The battery is low, please fully charge it before use.

2. The player automatically shuts down or restarts

The battery is low, please fully charge it before use.

3. The charging light is not on, not charging

Pls make sure the charging cable is plugged in properly and whether it is damaged or normal, please use a 5V-2A charger to charge the device.

4. Bluetooth status is silent

Pls make sure the Bluetooth is paired correctly, and the Bluetooth device is playing, and the volume is not at the minimum.

5. TF card/U disk playback is silent

Check whether the TF card is inserted in the correct direction and in place, whether the U disk is inserted in place or in good contact; whether the music format in the TF card or U disk is correct (Note: The music in the TF card/U disk mainly supports MP3 compressed audio files and WMA lossless audio files playback); whether the device volume is adjusted to the minimum.

6. Recording doesn't work

Whether there is space in the TF card or U disk, delete some files to reserve storage space. Recording should be in TF card mode, U disk mode and insert a wired microphone or turn on a wireless microphone.

7. The recording cannot be deleted

Please long press the record button or connect to a computer to delete it when playing the recording file.

8. The recording sound is low or there is noise

Insert a wired microphone or turn on a wireless microphone when recording.

9. Power saving mode, automatic shutdown

In the state of Bluetooth mode, the speaker is not connected to any Bluetooth device, and there is no operation for 15 minutes, the speaker will enter the power saving mode and automatically shut down.

Technical Specifications:

Input voltage: 5V --- 2A

Output Power: 2x20W

Frequency effect: 75Hz—12KHz

S/N : ≥80dB

FM frequency : 87.5-108MHz

Battery : 3.7V 18650 4500mAh

Product size: 368x139x182mm

Product Packaging :

1.Host	1 PCS
2.Charging Cable	1 PCS
3. AUX Cable	1 PCS
4. User Manual	1 PCS
5. Remoter	1 PCS