




GGO-650L

gemini



**100W 6.5" Portable Bluetooth Boombox with
LED Party Lighting**

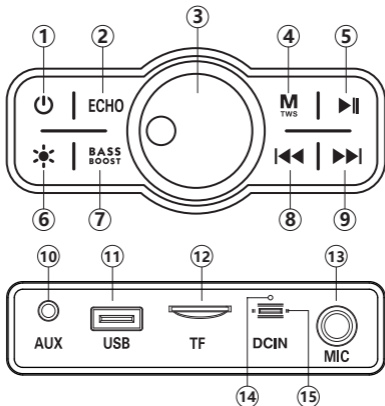

Product Feature (subject to the actual product)

1. **【 ⏻ 】** : Long press to power on/off. (Press and hold for 10 seconds to restore factory settings)
2. **【 ECHO 】** : Short press switch to turn on Microphone Echo effect.
3. **【 VOLUME 】** : Turn left to decrease volume, turn right to increase volume.
4. **【 M_{TWS} 】** : Short press to select mode: Bluetooth, FM, AUX, USB, microSD. Long press for TWS function.

5. **【 ►|| 】** : Short press to play/pause, and long press to automatically search for channels in FM mode. When playing a recording file, long press the play button to delete the recording. When playing music, long press the play button to quickly enter the recording file playback. In the bluetooth mode, long press the play button to directly disconnect the bluetooth connection.
6. **【 ☀ 】** : Short press to turn on the ambient light, long press to turn off the ambient light.
7. **【 BASS BOOST 】** : Short press can enhance the bass effect.
8. **【 |◀◀ 】** : Short press to previous song/select the previous radio station. In USB or microSD card mode, long press to rewind the song.
9. **【 ▶▶| 】** : Short press to skip to next song/select the next radio station. In the state of USB or microSD, long press to fast forward the song.
10. **【 AUX 】** : AUX audio input.
11. **【 USB 】** : Insert the Micro SD USB to play MP3 music. (Max workable capacity for USB is 64 GB ,if more than 64 GB it can not work)
12. **【 TF 】** : Insert MicroSD card to play MP3 music.(Max workable capacity for MicroSD card is 64 GB ,if more than 64 GB it can not work)
13. **【 MIC 】** : Plug in a wired ¼" microphone (not included)

14. **【Charging indicator】** : Red light is on when charging and turns off when fully charged.
15. **【DCIN】** : Charging jack, use a USB charging cable to connect with the charger for charging.

Bluetooth Connection Operation

Turn on to enter the Bluetooth mode. Then turn on the mobile Bluetooth and search for Gemini GGO-650L. If there is a prompt to pair the password, please enter "0000" and click confirm connection.

Bluetooth internal recording operation

1. Insert MicroSD card or USB, then switch to Bluetooth mode.
2. Play audio from connected Bluetooth device.
3. Insert in a wired microphone or turn on wireless microphone.
4. Short press the record button, the Bluetooth internal recording starts to work, and then short press the record button to finish the internal recording and start playback of recorded file.


TWS connection operation

1. In bluetooth mode, turn on the two GGO-650L at the same time, on either speaker, long press **M**_{TWS} key to pair with other speaker, long press again to disconnect TWS.
2. The optimal connection distance between two Bluetooth speakers is about 5 meters or less.

Charging Instruction


1. To protect the performance of the battery, avoid playing speaker while charging.
2. **Note: The machine has no power bank function, it is forbidden to connect other devices to the USB interface.**
3. Use a 5V-2A charger connected with included usb charging cable for the device to charge, the red light is on when charging, and the red light is off when fully charged.

Wireless microphone operation

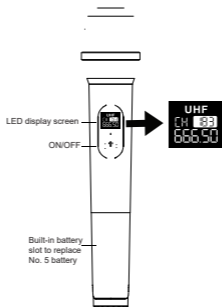

1. Long press to power ON/OFF.
2. When the microphone is not connected to the device, the display will flicker slowly. When the microphone is successfully connected to the device, the display screen will stop flashing and display a steady state. The display blinks quickly when the battery is low.
3. When wireless microphone battery is dead, you can twist the microphone to the left. and replace the AA battery. Please pay attention to the positive and negative poles when replacing the battery.
4. Feedback: Please do not put the microphone close to the speaker device, this will cause a feedback loop of harsh noise. Keep the microphone a little bit away from or behind the speaker or try to turn down the volume of microphone if feedback occurs.

Remote operation instruction

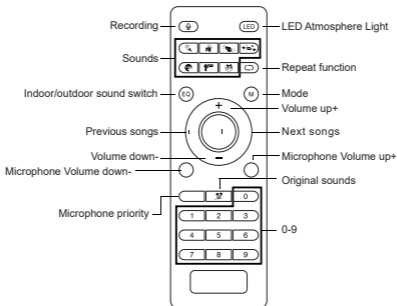

1. Under normal circumstances, the remote control should be used within the receiving range of about 6 meters and 30 degrees from the device receiving window.
2. When operating the remote, please aim it at the receiving window of the device. There should be no obstacles between the remote and the device.
3. If the receiving window of the device is placed under a strong light, the operation panel of the remote may malfunction. In this case, please move the device away to avoid direct exposure.
4. When the remote no battery, you can replace the AAA batteries. Avoid mixing old and new batteries. Please check the remote batteries regularly to see if they need to be replaced.

Troubleshooting

1. Automatically shut down when turned on

The battery is low, please fully charge it before use.

2. The player automatically shuts down or restarts

The battery is low, please fully charge it before use.

3. The charging light is not on, not charging

Pls make sure the charging cable is plugged in properly and whether it is damaged. Please use a 5V-2A charger to charge the device.

4. Bluetooth status is silent

Pls make sure the Bluetooth is paired correctly, and the Bluetooth device is playing, and the volume is up.

5. MicroSD card / USB playback is silent

Check whether the MicroSD card is inserted in the correct direction and in place, whether the USB is inserted in place or in good contact; whether the music format in the MicroSD card or USB is correct (Note: The music in the MicroSD card/USB mainly supports MP3 compressed audio files and WMA lossless audio files playback);

6. Recording doesn't work

Ensure there is space in the MicroSD card or USB drive, delete some files to reserve storage space. Recording should be in MicroSD card mode or USB mode and insert a wired microphone or turn on a wireless microphone.

7. The recording cannot be deleted

Please long press the record button or connect to a computer to delete it directly.

8. The recording sound is low or there is noise

Insert a wired microphone or turn on a wireless microphone when recording.

9. Power saving mode, automatic shutdown

In the state of Bluetooth mode, the speaker is not connected to any Bluetooth device, and there is no operation for 15 minutes, the speaker will enter the power saving mode and automatically shut down.

Technical Specifications

Input voltage : 5V $\overline{\text{---}}$ 2A

Output Power : 100W

Frequency effect : 80Hz—12KHz

S/N : \geq 80dB

Battery : 3.7V / 6000mAh

Package Contents

1. Speaker	1PC	4. User Manual	1PC
2. Charging Cable	1PC	5. Remote	1PC
3. AUX Cable	1PC	6. Wireless Microphone	1PC



gemini

Follow us on Social Media!

@GeminiSoundHQ

For any questions, concerns or to make
returns, please contact us directly
at 1-844-GEMINI9

www.geminisound.com