



**Portable Karaoke Party Speaker**



**MPA-K650**



## Contents

Warning _____	1
Important precautions _____	1
Package contents _____	2
Description of front panel _____	3
Description of rear panel _____	4
Description of Remote Control _____	5
Getting Started _____	6
Function Instructions _____	7
Connect with AUX Line in _____	8
Connect Wired Microphone _____	9
Warranty _____	10

## Warning

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
The lightning flash with arrowhead symbol, with an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be sufficient magnitude to constitute a risk of electric shock to persons.	CAUTION: TO REDUCE THE RISK OF SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICE TO QUALIFIED SERVICE PERSONNEL.	The exclamation point within an equilateral triangle is intended alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### Important precautions:

1. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
2. Minimum distances 100 cm around the apparatus for sufficient ventilation.
3. The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, table-cloths or curtains.
4. No naked flame sources such as lighted candles, should be placed on the apparatus.
5. When the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
6. To be completely disconnected the power input, the mains plug of apparatus shall be disconnected from the mains completely.
7. The main plug of apparatus should not be obstructed or should be easily accessed during intended use.
8. The use of apparatus in moderate climates.
9. Attention should be drawn to the environmental aspects of battery disposal.
10. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
11. Excessive sound pressure from earphones and headphones can cause hearing loss.
12. The internal battery is non-user replaceable.
13. Do not use this apparatus near the water.

## DESCRIPTION OF FRONT PANEL

### Package contents

- 1.Speaker x 1
- 2.Remote control x 1
- 3.AC power cable x 1
- 4.User manual x 1
- 5.FM Antennax1
- 6.AUX- in Cablesx1
- 7.Shoulder strapx1



- 1.Volume Control
- 2.MIC Volume Control
- 3.MIC Echo
- 4.Display Window
- 5.Mode(function switch)
- 6.Play/Pause
- 7.LED Control
- 8.Battery Charging Indicator
- 9.Battery Full Power Indicator
- 10.SD Card Jack
- 11.USB Jack
- 12.AUX Jack
- 13.MIC Jack
- 14.Previous Track
- 15.Next Track
- 16.Power On/Off
- 17.Repeat

## THE MAIN TECHNICAL PARAMETER

### The Satellite Speakers Output

Consumed Power : 17W  
 FM: 87.5-108MHz  
 Speaker Size: 6 Inch x 1  
 Speaker Impedance: 3Ω x 1


Left&Right Response : 50Hz-20KHz  
 Input Sensitivity: 500mV  
 AC Power Supply: 110-240V  
 Battery: 7.4V/2000mAh

## DESCRIPTION OF REAR PANEL



1. FM Antenna Jack
2. AC Power Connect Inlet
3. AC Power / Charging ON/OFF Switch

## DESCRIPTION OF REMOTE CONTROL

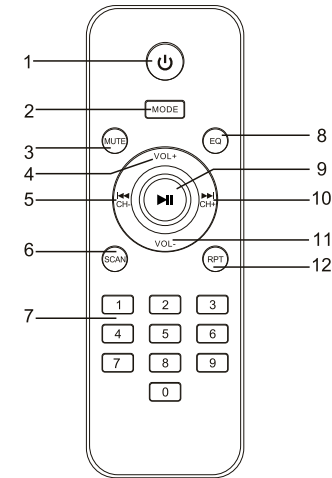

1. Power on/off
2. Mode
3. Mute
4. Volume +/CH-
5. Previous Track
6. Scan
7. 0-9 keys
8. EQ Function
9. Play/Pause
10. Next Track/CH+
11. Volume -
12. Repeat



To insert the remote control batteries:

1. Open the battery compartment.
2. Insert 2 x AAA batteries with correct polarity (+/-) as indicated. The 2xAAA battery not include in our products.
3. Close the battery compartment.

**CAUTION:**

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent type.

## Getting Started

### Connecting Power Cable

**Warning:** Ensure the AC/Charge switch is in OFF position before plugin. Plug in the AC connector into the 110-240V 50Hz inlet socket in the rear panel of the unit and the other end into the standard AC 120V wall socket.

1. Do not plug or unplug the power cable while you have wet hands.
2. To protect this apparatus from lightning storm, or when left unattended and unused for long periods of time, unplug power cable from the wall outlet.
3. When unplugging the power cord from a wall outlet, always pull on the power plug only. Never unplug it by pulling the power cord.

### Charging the internal Battery

The speaker comes with a built-in rechargeable battery, follow the below steps to charge it:

1. Connect the power cable and plug to the 110-240V 50Hz wall socket on the rear panel.
2. Turn the AC/Charge switch to "ON" position located at the back of the unit.  
The Red charging LED indicator on the front panel will light up, the battery is being charge.
3. When the Red LED indicator light off, the battery is fully charged when the green LED indicator light up, unplug the power cable to stop charging.

**Note:** please fully charge the product when it is not going to be used for a long time and charge once a month to keep longer battery life.

### Turning ON/OFF the speaker

1. The speaker can work with either connected AC power input (AC mode), or DC power by built in battery (DC mode).
2. AC mode, connect the AC power cable provided to a wall socket. The speaker will be powered by AC power. Set both AC switch on rear panel and DC switch on front panel to ON position.
3. DC mode, the speaker will be powered by the built in rechargeable battery. Set the DC mode to ON position.
4. Use the remote control to turn it into Standby mode, press it again to power it on.
5. Set the Power switch to OFF position on the front panel to turn off the speaker.

## Function Instructions


### USB Operation

- This unit has a USB port for play back MP3 music.
- Insert your USB device into the USB port and the unit will start playing automatically. Press the [MODE] button to USB mode is selected.
  - Press the ◀◀ or ▶▶ key to the previous or next track.
  - Press the ▶|| button to play or pause music
  - Press the (RPT) button on the remote to repeat the current track, press it again to repeat all tracks.

### FM Radio Function

- This Party Speaker comes with FM Radio Function.
- Connect the FM Antenna to the "FM ANT" port at rear panel.
- Press the [MODE] button repeatedly until FM function is selected.
- Press the (SCAN) button on remote control or press play button on front panel to scan FM station automatically.
- Press the ◀◀ to ▶▶ select to the previous or next radio station.

**Note:** The performance of Radio station will affect by the different place of Party Speaker or different weather.

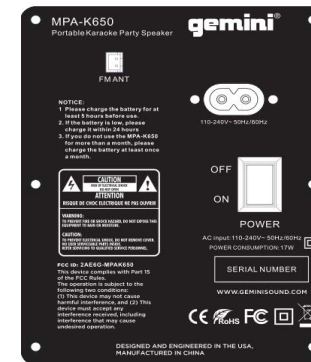

### Bluetooth mode

1. Press MODE Button on the Top Control panel or on the remote control to switch to the Bluetooth mode.
2. Once on the Bluetooth mode, "bLUE" will be displayed on the screen and is flashing on the top right corner.
3. Open the Bluetooth on the external device and search the Bluetooth device name "42686781" to pair.
4. Press connect to "PAIR" with the Party Speaker.
5. Once connected, you can hear a small sound from the unit, and it will static on the top right corner, you can play the music with the speaker.
6. You can use the ◀◀ or ▶▶ button on the front panel to control the songs of the external device.


**Note:** This model does not need the password.

## Connect with AUX Line in

### Connect with AUX Line in

1. Press **【MODE】** Button on the Top Control panel or on the remote control to switch to the AUX LINE in mode, Line will be displayed on the screen.
2. Connect this unit AUX inserting jack and the device Earphone jack by provided AUX cable (included) Once connected, turn on your external device .
3. Once connected, turn on your external device and play music.

**Caution:** Please turn off the unit before connect AUX cable in order to avoiding unexpected noise.

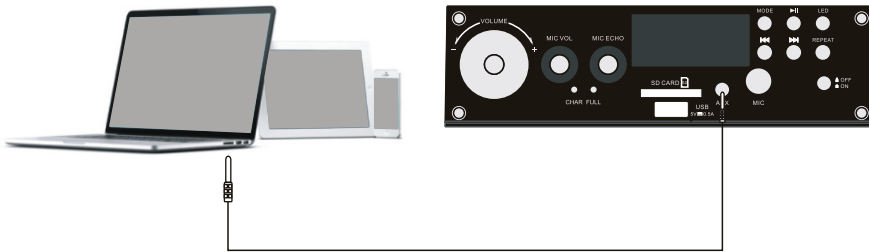

## Connect with Wired Microphone

### Connect to Wired Microphone



MIC

Insert 6.35mm wired microphone, and use control knob to adjust the sound level.



MIC VOL

When playing with the wired microphone, please use this knob to adjust the volume of microphone.



MIC ECHO

When playing with the wired microphone, please use this knob to adjust the echo volume of microphone.

### Important Notes

While using the microphone, avoid being put the microphone opposite the bass of Party Speaker, as they may have Whistler Noisy.

To get the best singing performance, keep the microphone within 5-15cm of the mouth and at a 45 degree angle.

When using the microphone, always pay attention to the battery. If the battery is low, the indicator light will come on and the performance will progressively become poor.

**Caution:** Please do not put the microphone directly face to the Party speaker, it may damage the speaker.

## **FCC Warning**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.