

## QUICK START

If you were the type that cheated on school book reports by just skimming through the reading assignments, then this section is for you! It gives you not quite enough information to *really* know what you're doing. But, if you follow the recommended set up procedure, you should get at least a "B."

*Keep the amplifiers and the CP 64S turned off until all connections are made.*

## INTERNAL SETTINGS

Access to the following internal controls requires removal of the top cover. All internal settings should be complete before you install the CP 64S, before you attach the power cable. The factory default settings work for many applications. However, you may need to change one or more for your system. *See the INTERNAL ADJUSTMENTS description on page Manual-4 for more details.*

- Each Page Input has a 15 volt Phantom Power switch. The default is *off*.
- The Page Priority switch assigns priority override to *Page 1*, *Page 2* or *NO* (none). The default is *Page 1*. If a Page has priority, it overrides the non-priority Page in the Zone(s) it is assigned. The *NO* priority setting allows the Pagers to mix.
- Each Page Input may sum with the Program Pre- or Post-VCA. When set to Pre-VCA, Zone Level, EQ and Limiter circuits act upon the Page. When summed Post-VCA, the Page is not influenced by Zone Level, EQ or Limiter circuits. The default is *Pre-VCA*.
- The Zone 1 Stereo/Mono switch default is *Stereo*.
- There are two internal trim controls for the Program Priority detector. The Program Priority Threshold trim has a range of  $-\infty$  to  $-35$  dBu with a default of  $-50$  dBu. The Program Priority Release Time has a range of 2 to 20 seconds. The default is *12 seconds*.

## PAGE INPUTS

Connect Page Inputs to the Euroblock on the rear panel and select the appropriate **MIC** or **LINE** switch position for each. First, set the gain with the Page **TRIM** control, then set the Page **DETECT THRESHOLD** and finally the Page Zone **LEVEL**.

## PR 2 REMOTE

If you use the optional PR 2 remote (sold separately), wire it to the rear **RMT ZONE ASSIGN** Euroblock as indicated. If you

require remote control but do not wish to use a PR 2, any simple switch closure to GND will work. These inputs are also TTL compatible (0 to 5 VDC). *See wiring details on page Manual-5.*

## PROGRAM INPUTS

Connect Program sources to the RCA **PROGRAM INPUTS**. If you have a priority program, like a jukebox, connect it to the **PRIORITY** Input. The Program **PRIORITY ASSIGN** switch assigns priority override to *Off*, *Zone 1*, *Zone 2*, or *Both*. In the Zone(s) that it is assigned, the priority program is automatically selected when signal is detected.

## EXPAND OUTPUTS

Wire the **EXPAND OUTPUT** Euroblock for each Zone as required. These are cross-coupled line drivers and may be used balanced or unbalanced. Each Expand Output can be *Page-only*, *Program-only* or its *Zone* signal. The *Zone* source will *not* include the Page if the Page is summed Post-VCA. Page is always available from the *Page* source.

## ZONE OUTPUTS

Wire the two **ZONE OUT** Euroblocks as required. These are cross-coupled line drivers and may be used balanced or unbalanced. Set the **LIMIT** threshold as required.


## ZR 1 REMOTE

You may use one or two ZR 1 Remotes with each CP 64S. If you use the optional ZR 1 remote (sold separately), wire it to the rear **REMOTES** Euroblock as indicated. If a ZR 1 remote is not used, any simple switch closure to ground will work for the D0 and D1 pins. These pins are TTL compatible (0 to 5 VDC). The logic is inverse Gray Code. Any ground referenced 5 volt DC control may be used as the input to  $V_1$  or  $V_2$ . Do *not* ground the  $V_{r1}$  or  $V_{r2}$  pins. *See wiring details on page Manual-5.*

## SETUP ADVICE


The CP 64S is *very* versatile. While this makes a large number of system applications possible, it also results in complexity. For this reason, it is *important to use an organized approach for setup and calibration*. A *highly* recommended setup procedure appears on *page Manual-7*. By following it you will encounter fewer problems and reduce the need to increase our collective phone bills.

# CP 64S FRONT PANEL

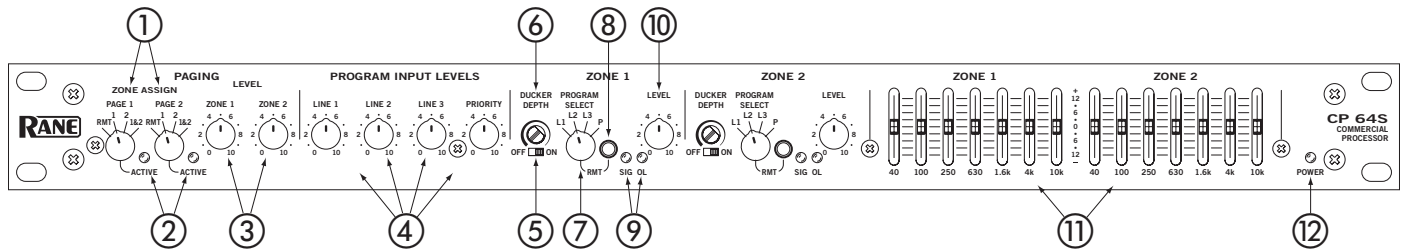

- ① **PAGING ZONE ASSIGN** switches select the zone(s) a page signal is sent to. The RMT position activates the rear panel RMT ZONE ASSIGN port, allowing the optional PR 2 wired remote to assign the active page Zone(s).
- ② **ACTIVE** indicators light when a page input signal reaches the Page Detect Threshold (see rear panel). *Note that a page is always Active when its Page Detect Threshold is set to minimum.*
- ③ **ZONE 1 and ZONE 2 PAGING LEVEL** controls adjust (as you guessed) the Paging Level in each Zone.
- ④ **PROGRAM INPUT LEVELS** “stereo” controls allow independent adjustment of the level for each Program Input.
- ⑤ **DUCKER OFF/ON** switches turn the Ducker ON or OFF for each Zone.
- ⑥ **DUCKER DEPTH** controls allow setting Ducker Depth (the amount of Program attenuation during a Page) from 50 dB (ccw) to 6 dB (cw) for each Zone.
- ⑦ **ZONE PROGRAM SELECT** switches assign one of four Program Inputs to each Zone.
- ⑧ **ZONE RMT** switches, when pushed *in*, enable the Remotes port for a Zone. This turns control of Zone Level and Zone Program Select over to the Remotes port. Front panel Zone LEVEL and Zone PROGRAM SELECT controls are *inactive* when RMT is selected. Two optional wired ZR 1 remotes may be connected to the Remotes port. *An object smaller in diameter than the switch button is required to engage the RMT switches.*
- ⑨ **ZONE SIG and OL** indicators show SIGnal present at -20 dBu and OverLoad at -16 dBu (4 dB before clipping) respectively. Signal indicators are located *pre-EQ and pre-VCA*.
- ⑩ **ZONE LEVEL** controls adjust the overall Level for a given Zone.
- ⑪ **ZONE graphic EQ** controls are provided for each Zone. Zone 1 controls are “stereo,” with each slider controlling the response of both Left and Right channels. These controls allow  $\pm 12$  dB adjustment of seven ISO center frequencies on two octave centers.
- ⑫ **POWER** indicator lights when the CP 64S is connected to its needed electrical power. See ⑪, rear panel.

## CP 64S REAR PANEL

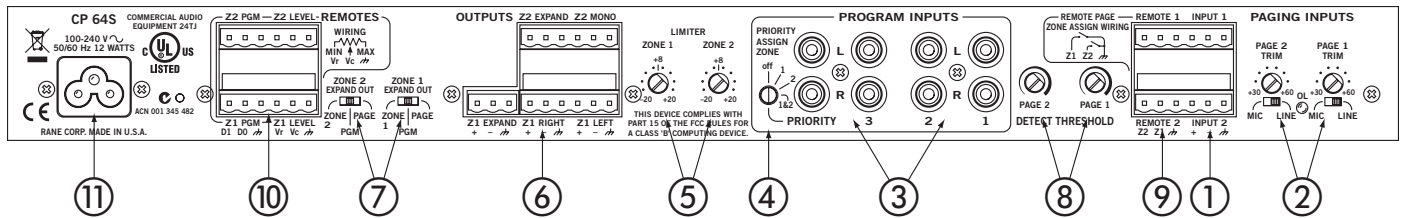

- ① **PAGING INPUT** Euroblock connectors may be operated balanced or unbalanced. See CP 64S Connections on page Manual-3.
- ② **PAGE 1 and PAGE 2 INPUT MIC / LINE** switches select 30 dB Input Pads when set to LINE. *Phantom Power (if enabled) is disabled when LINE is selected. See page Manual-4 to internally set Phantom Power.*  
**PAGE 1 and PAGE 2 INPUT TRIM** controls adjust Page Input preamplifier gain to match the microphone/source in use, *not* to set the page level in the Zones. The range is 30 dB to 60 dB.  
**PAGING INPUTS OL** indicator lights when either of the Page Input preamplifiers comes within 3 dB of clipping, assisting the setting of these trims.
- ③ Four **PROGRAM INPUTS** are provided. Three are non-priority Inputs. The fourth is a Program PRIORITY Input. When signal is present at the PRIORITY Input, it is *automatically* selected as the Input source in the Zone(s) it is assigned with the Program PRIORITY ASSIGN ZONE switch.
- ④ **PRIORITY ASSIGN ZONE** switch determines in which Zone(s) the automatic priority override is enabled. *Off* (none), *Zone 1*, *Zone 2* or *Both* are the possible settings. If you do not intend to use the Priority Input as an *automatic override* Input, do *not* assign it with this switch. Use the Zone PROGRAM SELECT switch on the front panel.
- ⑤ **LIMITER** threshold controls set the maximum output level for each Zone. These circuits are true voltage limiters with a ratio of 15:1. The threshold range is -20 dBu to +20 dBu.
- ⑥ **OUTPUTS** feature balanced cross-coupled line drivers with a Euroblock connector for each Zone. Zone 1 is stereo. Zone 2 is mono, and both Expand outputs are mono. *When operating cross-coupled line drivers unbalanced, it is **essential** to ground the (-) pin.* See CP 64S Connections on page Manual-3.
- ⑦ **ZONE EXPAND OUT** switches assign *Page-only*, *Program-only* or *Zone 1 or Zone 2* as the source for each Expand Output.
- ⑧ **DETECT THRESHOLD** sets the Paging input signal level required to gate a Page *on* and light the front panel ACTIVE indicator. The range is -∞ (on) to +4 dBu.
- ⑨ **REMOTE PAGE ZONE ASSIGN** port provides the interface for the PR 2 wired remote. The PR 2 remote is used for Zone assignment of Page Inputs. Follow the wiring as described on page Manual-5.
- ⑩ **REMOTES** ports provides the wiring interface for two optional ZR 1 wired remotes. Each ZR 1 remote provides remote control of Zone Level and Zone Program Select functions. Follow the wiring as described on page Manual-5.
- ⑪ **Universal Voltage Input:** via a miniature IEC 60320 C6 appliance inlet. This mates with an IEC 60320 C5 line cord (USA domestic). Do **not** lift the ground connection!

# INTERNAL ADJUSTMENTS

There are a number of controls inside the CP 64S used to configure the system for specific applications. Access to these controls is only required once before initial system setup. Do this *before* the CP 64S is installed in a rack or wired into a system. Make sure the power cable is unplugged before removing the top cover to gain access. Refer to the diagram below for control locations.


There are five internal switches related to the two Page Inputs.

The dot on the circuit board shows the factory default:

- ① Page 1 Phantom Power 15VDC Default: OFF
- ② Page 2 Phantom Power 15VDC Default: OFF
- ③ Page Priority P1, NO, P2 Default: P1
- ④ Zone 1 Page Sum Pre- or Post-VCA Default: Pre-VCA
- ⑤ Zone 2 Page Sum Pre- or Post-VCA Default: Pre-VCA

① ② Phantom Power is available for both Page Inputs. If phantom power is required for the intended microphone, then set the appropriate switch to *ON*. If a Paging Input Mic / Line pad switch is set to *LINE*, Phantom Power is automatically defeated.

③ Page Priority Assign allows you to select one of the Page Inputs as a Priority Page Input. The Priority Pager overrides the non-priority Pager in the Zone(s) it is assigned. Note that the non-priority Pager may still broadcast in any Zone that the Priority Pager is *not* assigned to or not currently broadcasting in. Set the switch to P1 if you wish Page 1 to have priority over Page 2. If you wish Page 2 to have priority over Page 1, set the switch to P2. If *NO* is selected, neither Paging Input has priority and both Pagers may be active at the same time. This allows the Paging Inputs to mix for applications like karaoke or PA. If a Page Input is used for emergency paging, set it as the Priority Pager.

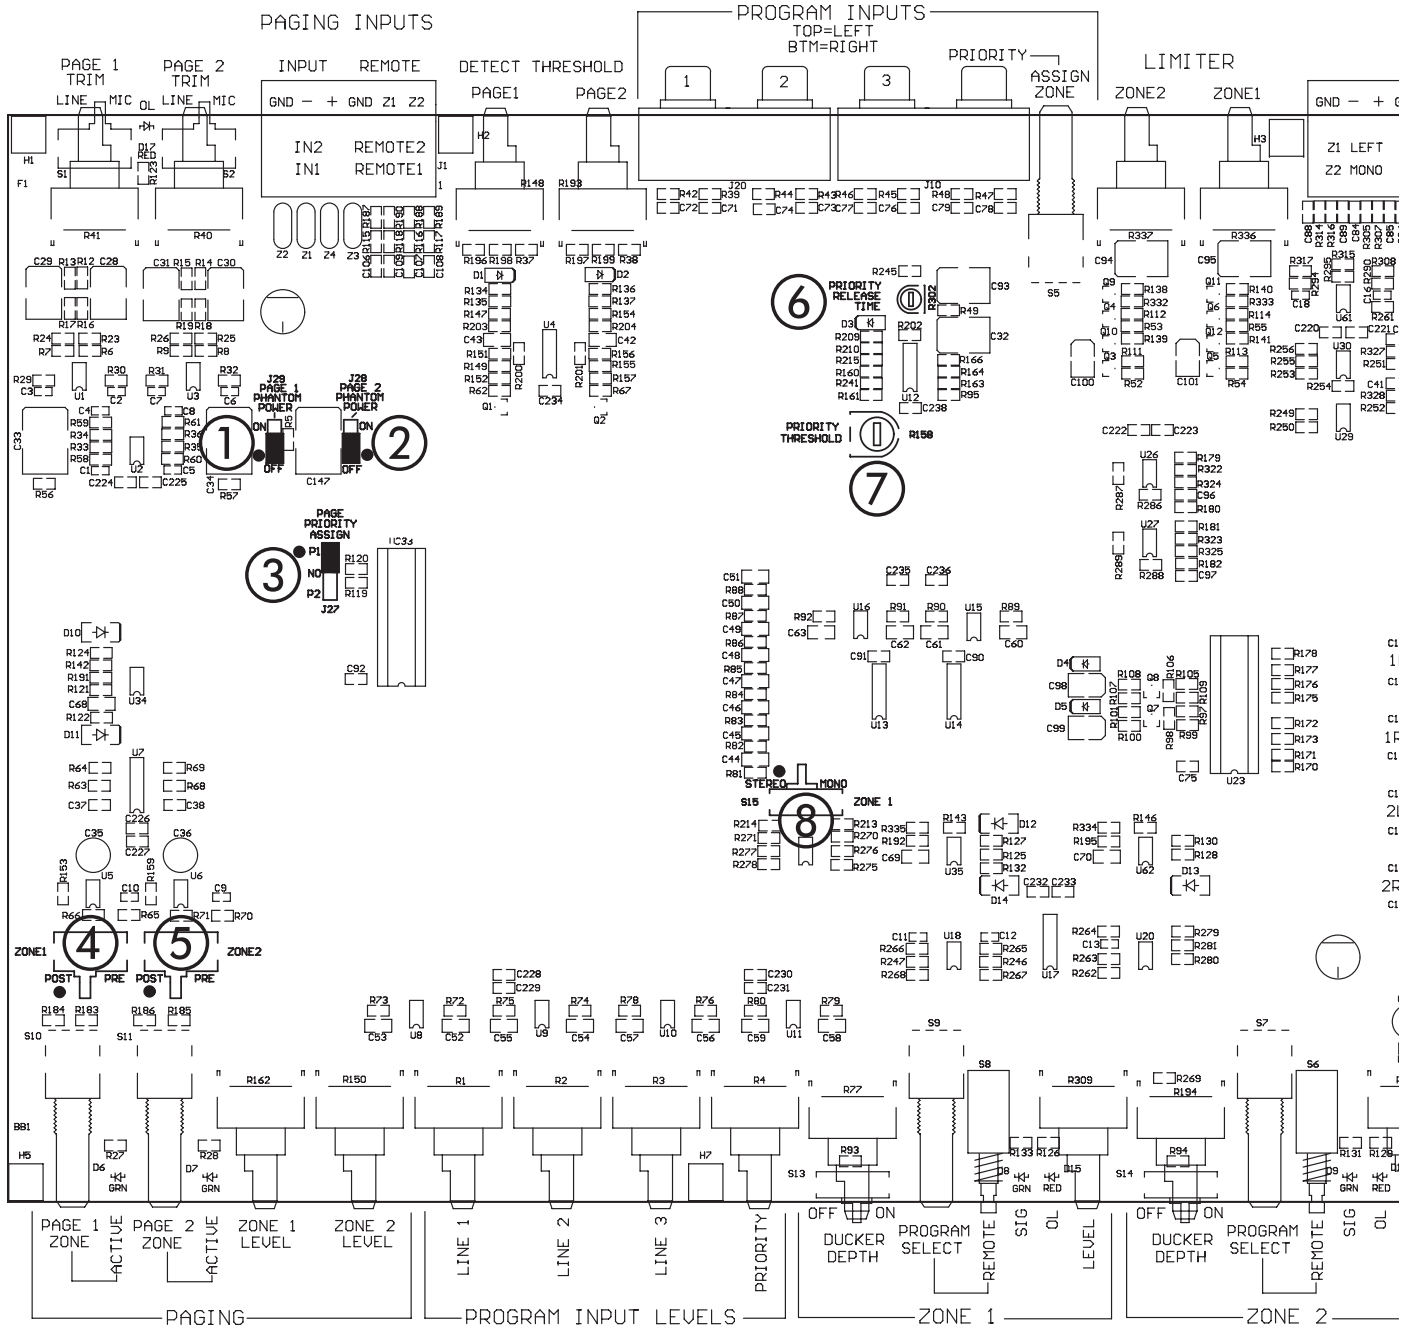

④ ⑤ The **Zone 1 Page** and **Zone 2 Page** switches allow you to sum Page signals with Program signals “Pre” (before) or “Post” (after) the VCA. The VCA is used for Zone Level control and Limiting. Therefore, if you require the Page Level to be controlled *independent* of the Program Level, set the switch for that Zone to “Post.” This is the desired setting for emergency paging. If “Pre” is selected, Paging signals sum with Program signals before the VCA. In this instance both Page and Program signal levels *are* affected by the front panel ZONE LEVEL control. Note the following:

- Zone Level, EQ and Limiter circuits *do not* affect Page signals summed Post-VCA.
- Zone Level, EQ and Limiter circuits *do* affect Page signals summed Pre-VCA.
- Page signals are *not* available on the Expand Zone output when summed Post-VCA.
- Page signals are *always* available for the Expand Page output.

There are two internal controls related to the **Program Priority** detector:

- ⑥ **Priority Release Time** 2 sec to 20 sec (trim pot)  
**Default: 12 seconds**
- ⑦ **Priority Threshold**  $-\infty$  to -35 dBu (trim pot)  
**Default: -50 dBu**

The default settings for the Program Priority detector are chosen for most applications. Detector Threshold settings lower than the default setting of -50 dBu are prone to false triggering unless the source is very quiet. If a source is noisy, you may wish to set the threshold higher to prevent false triggering. The default Release Time is 12 seconds. You may wish to decrease the Release Time if the source is a TV, radio, tape machine or any other relatively constant signal source. If you have a source like a jukebox, with relatively long search times, you may wish to extend the Release Time.

There is one internal control related to **Zone 1**:

- ⑧ **Zone 1 Mode** Mono/Stereo **Default: Stereo**

## CP 64S CONNECTIONS

*Do not connect the power cable to the CP 64S until all other connections are made.*

All Input and Output connections are made with Euroblock connectors except for the RCA Program Inputs. When wiring to Euroblocks, a minimum wire gauge of 22 is preferred for reliability (maximum 12 guage). If the ground or shield wire is left shorter, it acts as a strain relief for the other wires. Cable with a flexible jacket is easier to use and less likely to damage the connections. Avoid stripping excess insulation. Inspect wires for nicks that may lead to wire breakage. Fully insert each wire in the appropriate socket and tighten the screw.

Page Input circuits are true instrumentation amplifier inputs and operate balanced or unbalanced. Expand and Zone Outputs are driven by high quality cross-coupled line drivers and operate balanced or unbalanced. For both Inputs and Outputs, wiring is basically the same. Balanced operation is recommended. Balanced wiring is straight forward, (+) to (+), (-) to (-) and shield to shield.

For unbalanced operation, we recommend using *two conductor cable with shield*. The cable is wired to the CP 64S the same as for balanced operation. At the *other* end of the cable, connect the (+) wire to signal “hot” and both the (-) *and* shield wires to ground (*important*.)

If you use *single conductor cable with shield*, connect the shield/gnd wire to both the (-) and shield pins at the CP 64S. At the *other* end of the cable connect the (+) wire to the signal “hot” and the shield/gnd wire to ground. When unbalanced wiring is used, it is very important for the CP 64S and any other unit in the system to have good earth or technical grounds. If a unit is located far from the CP 64S or is of a type that might create grounding problems, isolation transformers should be used.

*When operating cross-coupled line drivers unbalanced (i.e., any CP 64S Output), it is **essential** to ground the (-) pin.*

The four stereo Program Inputs connect to RCA jacks. These Inputs are unbalanced. The same guidelines given above for unbalanced operation apply to these Inputs.

See the RaneNote *Sound System Interconnection* (included in this booklet) to answer any uncertainties, especially when using unbalanced sources.

## REMOTE INSTALLATION

The CP 64S supports wired remotes for *Page Assign, Zone Level* and *Zone Source* selection. Wire lengths of up to 1000 feet are possible. A brief list of suitable wire types is provided in the WIRE TYPES section on the next page.

The **PR 2** remote provides Page Zone Assign for Page 1 and Page 2 inputs and is usually located at the Page source. If your application requires one of the two PAGE ASSIGN switches to control both Page 1 and Page 2 Assign, simply wire all Page 1 and Page 2 ports in parallel. You may leave the knob off the unused control and cover it with one of the hole plugs provided in the kit. If your installation requires Page 1 and Page 2 remote control at two different locations, only three wires are required for each PR 2 remote (Z1, Z2 & GND). As above, you may leave the knob off the unused control and cover it with a hole plug.

The **ZR 1** remote provides Zone Level and Source Selection, allowing local control from inside the Zone. Two ZR 1 remotes may be used (only use *one* in each Zone). If only one of the two controls is used, you may cover the unused control with one of the hole plugs provided in the kit. If you require one ZR 1 remote to control both Zones, simply wire the ports in parallel. This may be done with Program Select only, Level only or both. If only one of the two controls is wired in parallel, the other is still available for a second remote.

When paralleling one remote across multiple CP 64S's, *all three* control pins *must* be wired, including the shields.

Keep the power cable unplugged to the CP 64S until all connections are made. It is important to ensure that the CP 64S Remote Ports are not subjected to sustained voltages outside the range of 0 to 5 volts DC or high levels of static. Inputs are protected, however, caution is the better part of... you know. It is a good idea to install the wiring, connect it to the remote assemblies and then make the final connections at the CP 64S. *Do not* short Vr<sub>1</sub> or Vr<sub>2</sub> pins to ground. These pins *are* current limited, however, excess heat is generated in the 5 volt supply if a short occurs. *Never subject the Vr<sub>1</sub> or Vr<sub>2</sub> pins to voltages above 5 volts.*



## REMOTE MOUNTING

The ZR 1 and PR 2 remote assemblies mount in a standard U.S. electrical box with a minimum depth of 2.25". Be sure to note the wire color of each input in order to facilitate correct wiring to the CP 64S. Connect each wire to the Euro connector by fully inserting it in the correct socket and tightening the screw. Make sure wires are free of nicks and that the cable jacket is stripped back sufficiently to allow it to lie in the electrical box with the remote assembly inserted. Use the flat head #6 screws supplied with the kit to mount the remote assembly and silk-screened front panel to the electrical box (see above diagram). Note the "UP" arrow screened on the printed circuit board of each remote (mount it pointing *up*).

The silk-screened front panel metal is painted on both sides. This allows you to custom silk-screen the panel or add your own custom decals. Simply install the modified front panel with your art facing out, and you are in business!

Install each knob so that the line on the knob is properly aligned with the silk-screening on the front panel of the remote assembly. Install any Decora plate of your choice. For a secured installation, you may wish to leave the knobs off and use a blank Decora plate to cover the remote after adjustment.

## WIRE TYPES

Variations in wire type do not greatly affect the performance of the remote controls. 22-gauge stranded wire with a flexible jacket is recommended. You may use 5-conductor unshielded remote control signal cable for shorter runs (less than 200 feet [60 meters]), or 4-conductor (2 pair) shielded remote control signal cable (use the shield as the ground return) for longer runs (200 to 1000 feet [60 to 300 meters]). The type of wire required is influenced by your installation and local electrical codes.

Rane Corporation does *not* provide or source cable. Please contact your local retail or wholesale outlet, *not* the factory. The following is a short list of suitable cable types:

### CONSOLIDATED ELECTRONIC WIRE AND CABLE

Plenum cable:

Unshielded remote control signal cable CAT. # 9896

Shielded remote control signal cable CAT. #9877, CAT. #9852

### WEICO WIRE & CABLE INC.

Communication and control cable:

Multiconductor, unshielded CAT. #7606

### ALPHA

Communication and control cable:



Multiconductor, unshielded CAT. #1175C

### BELDEN

Unshielded remote control signal cable CAT. # 88741



Shielded remote control signal cable CAT. # 88723

## ZR 1 Zone / Volume

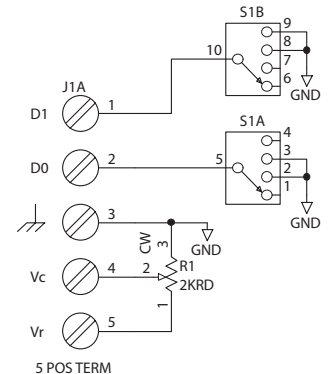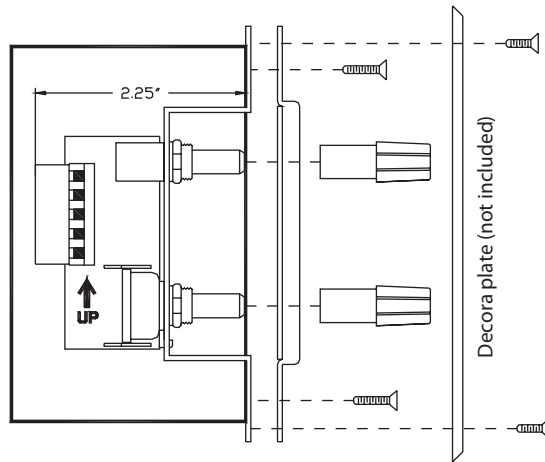

ZONE REMOTE (ZR 1)

## PR 2 Paging Assign / Volume

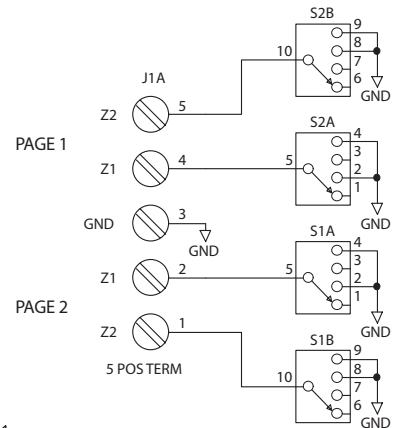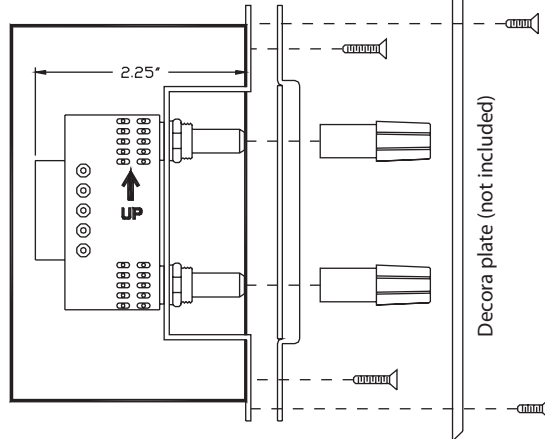


PAGE REMOTE (PR 2)

# RECOMMENDED CALIBRATION PROCEDURE

The CP 64S is a very versatile instrument. While this allows it to conform to the requirements of a large number of system applications, it also results in complexity. For this reason, it is very important to use an organized approach to system calibration. Once the internal switches are set and the system is connected, take the time for proper calibration. The following is an ordered list of system adjustments that should make calibration easy and result in optimum performance. Most important:

- Program Priority Assign *rear panel*                    **off**
- Limiters *rear panel*    **+20 dBu**
- Duckers *front panel*    **OFF**
- Page Zone Levels *front panel*                                **Min**
- Remote Controls *front panel*                                **not selected**
- Paging Zone Assigns *front panel*                            **1&2 (both)**

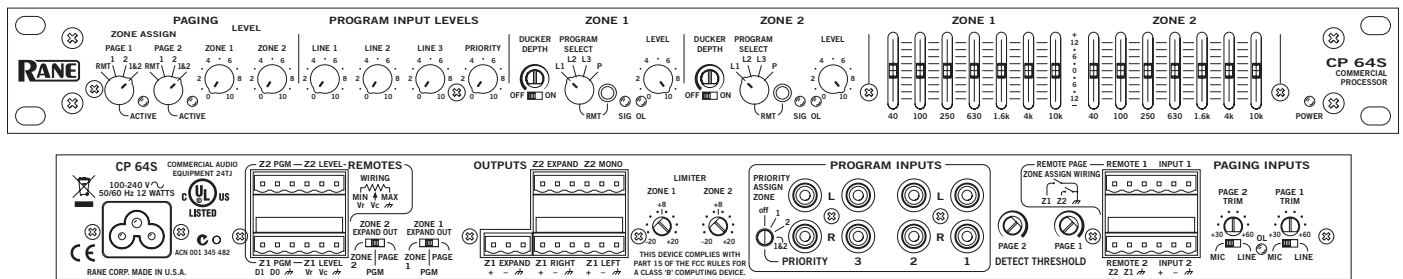

**Make sure the power is disconnected!**

## Control Presets:

Page settings (repeat for second page input):

- Input Pad *rear panel*    **MIC or LINE as required**
- Input gain trim *rear panel*                                        **Center (12:00)**
- Detect Threshold *rear panel*                                        **Min (CCW, active)**
- Paging Zone Assign *front panel*                                **1&2 (both)**
- Paging Level, Zone 1 *front panel*                                **Min**
- Paging Level, Zone 2 *front panel*                                **Min**
- Phantom Power *internal*    **As required. Default Off**
- Pre/Post summing *internal*    **As required. Default Pre-VCA**
- Page Priority *internal*    **As required. Default Page 1**

Program Input settings:

- Priority Assign Zone *rear panel*                                        **off**
- Program Input Levels *front panel*                                **Min**
- Priority Threshold *internal*    **Set to -50 at factory (internal adjust -∞ to -35 dBu)**
- Priority Release Time *internal*                                        **Set to 12 sec. at factory (internal adjust 2 to 20 sec.)**

Zone Settings (repeat for second zone):

- Expand Out *rear panel*    **As required (Zone/Program/Page)**
- Limiter Threshold *rear panel*                                        **CW, +20 dBu**
- Zone Level *front panel*    **Max**
- Program Select *front panel*    **L1 (if your input is on L1).**
- Ducker *front panel*    **OFF**
- Ducker Depth *front panel*    **Center (about 15 dB)**
- RMT (Remote) *front panel*    **Out**
- EQ *front panel*    **Flat (center detent position)**
- Stereo / Mono switch *internal*                                        **As required (Zone 1 only, default:stereo)**

## System Connections:

- Connect page mics or line-level paging source
- Connect Program sources
- Connect Outputs to amplifiers
- Connect Remotes

**You are now ready to calibrate the CP 64S...**

...CP 64S Calibration (continued)

1. Connect the power cord and verify the **Power** indicator lights.
2. Verify **Zone Level** controls are set to Maximum and that you have an active source for each of the Program Inputs you intend to use. Select each **Program Input** and adjust its **Input Level** control to be the very loudest you would *ever* desire.
3. Adjust the rear panel **Zone Limiter** thresholds so that they just start to audibly reduce the output level. This ensures the level in a Zone will never be louder than the maximum level you just set. If you wish one of the Zones to have a lower maximum loudness, lower the **Zone Limiter** threshold accordingly.
4. Turn the **Zone Level** controls down to a comfortable listening level.
5. Note that with the **Paging Zone Level** set to minimum, you will not hear the following Page. Speak very loudly (bark) into the Paging Mic. Set the proper preamplifier gain by adjusting the **Page Trim** control (rear panel) so the **Page OverLoad** Indicator (rear panel) just lights. It is important to set the *gain* of the pre-amp *before* setting the **Page Detect Threshold**. Repeat for the second Mic if it is used.
6. Speak into the Page Mic in a normal voice and adjust the **Page Detect Threshold** (rear panel) so the **Active** indicator (front panel) lights only when you speak. If the **Page Detect Threshold** is set too low, the Pager may gate *on* due to background sound. Repeat for second Mic if used.
7. With an active Program source playing in both Zones, speak into the Page Mic. Adjust the **Zone 1** and **Zone 2 Paging Level** controls (front panel) to provide the correct Page-to-Program mix in each zone. If the **Page Detect Threshold** is set too high, there may be a delay when you start to speak. To correct, lower the **Page Detect Threshold** setting. If a second Page source is used, verify that it has the same level as the first Page source (it should be close). If not, use the **Page Trim** control of the second Page source to adjust its *gain* to match. If you change the gain of the second Page source substantially, be sure to reset the **Page Detect Threshold**.
8. Set the **Ducker** switch to **ON**. With an active Program source playing, speak into the Page Mic and adjust the **Ducker Depth** as required. Repeat for both Zones.
9. Set the **Program Priority Assign Zone** switch as required (on rear panel). If you do *not* require *automatic* priority program override in a zone, *do not* assign it. Instead, use the front panel **Program Select** switch to select the “P” program Input as you would any other non-priority input.
10. If a remote control is used, select the appropriate **RMT** switch settings on the front panel to verify the remote functions correctly.
11. Adjust the Equalizers as required.

...You're all set.