 


OPERATORS MANUAL

DISTRIBUTION AMPLIFIER



Quick Start


This section is for those that just can't wait to get started. This Distribution Amplifier has a powerful feature not found on most DA's – **Output assignment switches.** If your application calls for a single channel set-up with one Input driving all Outputs, set all of the switches to the appropriate Input (**A** or **B**). To mix both inputs, set them all to **A+B**. In this mode, both Inputs drive all Outputs with the Inputs summed. The **MASTER LEVEL** controls set the input level. *Occasionally blinking* **OL** indicators are okay. The individual **OUTPUT LEVEL** controls set the level for each Output channel.

For a stereo application, decide how the stereo Outputs are to be assigned and set the assignment switches accordingly. Eight stereo outputs are possible.

Set the back panel switches for either **LINE** or **MIC** Inputs. When using microphones that require a "phantom" voltage, turn on the **PHANTOM POWER** switch, illuminating its rear panel LED. Because the phantom voltage is applied to both Inputs, don't mix phantom powered and non-phantom powered mics in the same DA 216S. *Never engage the phantom voltage when using an unbalanced mic*—doing so may damage the mic. If the mic is too "hot", press the **INPUT GAIN** switch *in* to reduce the gain by 20 dB. Incidentally, the **INPUT PAD** switch reduces the gain 40 dB when in the **LINE** position (pressed *in*). When using the Inputs for line-level, pressing in both the **INPUT PAD** and the **INPUT GAIN** switches provides a nominal gain of 0 dB. An additional 16 dB of gain is available when both the **MASTER LEVEL** and **OUTPUT LEVEL** controls are turned all the way up (clockwise).


The internal universal supply allows operation in almost any part of the world. All that is required in different countries is the correct IEC line cord.

DA 216S Front Panel

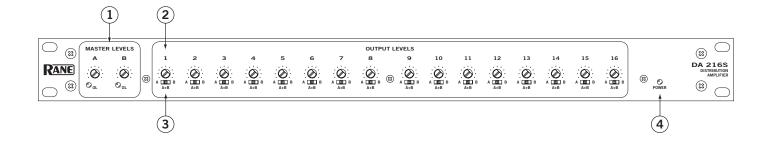

- () MASTER LEVELS: These screwdriver adjustable controls set the level of each Input to be routed to bus A, B, or A+B. The Overload (OL) LEDs illuminate whenever either Input section (both pre-gain and post-gain) approach clipping. Each MASTER LEVEL may be adjusted from *off* to +10 dB gain.
- (2) **OUTPUT LEVEL controls:** Each Output channel has an independent LEVEL control. Each Output may be adjusted from *off* to +6 dB gain.
- (3) Output Assign switches: Each switch has three positions, which assign the Output to the A-Input, the B-Input, or A+B (sum). This powerful feature allows the DA 216S distribution amplifier to be set up as 1 Input to 16 Outputs. Or 1 stereo Input pair to 8 stereo Output pairs. Or 1 Input to 3 Outputs, with the other Input to 13 Outputs. And so on. For those of you that like impressive numbers, that amounts to 43,046,721 possible combinations (3¹⁶)! Go ahead count them. By the way, for those that really like this stuff, if we allow turning the gain all the way down on any Output as part of the combination, the number jumps to 4,294,967,295 (4¹⁶). Fortunately, most users will only be concerned with one or two of these possibilities.

(4) **POWER Indicator:** When this yellow LED is illuminated power is running through the DA 216S.

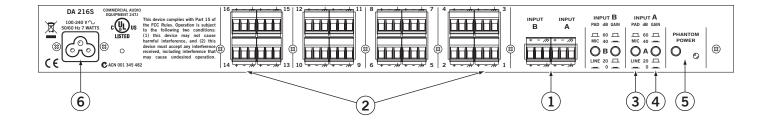

- (1) INPUT Euroblocks: Attach either Microphone or Line-level sources here. Euroblocks accept any #14 to #26 guage wire. Connect balanced sources to the respective "+" and "-"terminals, and tie the shield to chassis ground. For unbalanced sources use two-conductor shielded cable as described in *DA 216S Connection* on page Manual-4.
- ② Output Euroblocks 1-16: Balanced Outputs are provided for each of 16 channels. Connect two conductor shielded cable to "+" and "-" terminals, and connect the shield to the ground terminal. For unbalanced use, do not connect "-" to chassis ground. See the *Outputs* section on page Manual-4.
- (3) **INPUT PAD switches:** In the MIC position (*out*), the gain is appropriate for a microphone Input (40 dB or 60 dB). In the LINE position (*in*), the gain is line-level (0 dB or 20 dB). When this switch is in the LINE position, PHANTOM POWER ((5)) for the channel is disabled.
- (4) **INPUT GAIN switches:** Changes the gain by 20 dB. That is, with mic Input, the INPUT GAIN switch sets the gain to 60 dB (*out*) or 40 dB (*in*). With a line-level Input, it sets the gain to 20 dB (*out*) or 0 dB (*in*).
- (5) **PHANTOM POWER switch:** When activated (*in*), 15 VDC Phantom Power appears at each mic-level Input and the LED illuminates. If an Input is selected for line-level, the Phantom Voltage is disabled for that channel, even when the PHANTOM LED is lit.
- **(6) Power connector:** The internal universal switching power supply operates on any AC mains 100 to 240 VAC, 50 or 60 Hz (most places in the world). All that is required when traveling is the appropriate IEC line cord.

DA 216S Connection

When connecting the DA 216S to other components in your system, leave the power supply for last. This gives you a chance to make mistakes and correct them without announcing what you did to the whole world and without damaging "downstream" equipment. Remember this when setting INPUT PAD, INPUT GAIN and PHANTOM POWER switches. These switches should never be changed in a live system. Suddenly changing the gain by 40 dB can have a profound impact on the ears of the listening audience.

INPUTS

The two Inputs on the DA 216S are balanced. They may also be used in an unbalanced configuration. However, if used unbalanced, *do not engage Phantom Power*. Use only shielded cable for the Inputs. This cable should always be two conductors plus shield, even for unbalanced operation. If you *must* use shielded single conductor, keep the cable as short as possible (under 10 feet [3 meters]) to avoid hum or radio pick up.

When connecting Inputs, use all three Input terminals. For unbalanced, the "hot" Input goes to the "+", and the common wire goes to the "-" while the shield connects the ground. Since the common wire and shield are to be tied together at one end in an unbalanced system, this connects the "-" Input to chassis ground. In a balanced system (highly preferred), the "+" Input connects to the "+" Output of the previous equipment. The "-" Input then connects to the "-" Output and the shield goes to the chassis ground. These Input connections may be reversed if it is necessary to reverse the polarity of the Input signal.

Be aware, if a microphone is used which requires Phantom Power, the shield must be connected to chassis ground to complete the Phantom Power circuit. Remember, a dynamic mic will likely be damaged if used unbalanced while the Phantom Power is turned on. At the very least, it will saturate the mic's output transformer and spoil the sound quality. With the INPUT PAD switched to LINE, Phantom Power is disabled for that Input only. That is, a balanced, Phantom Powered mic may be used at one Input and a line input at the other without problems.

See the RaneNote "Sound System Interconnection" for additional information on grounding and shielding.

OUTPUTS

The DA 216S's Outputs are balanced and quite substantial. They will easily drive long cables and 600 Ω loads to full level. The same wiring conventions as the Inputs apply. For unbalanced Outputs, "hot" goes to the "+", and the shield connects to chassis ground. When wiring unbalanced Outputs, do **not** tie the unused terminal (normally "–") to Ground — leave it floating.

32 Unbalanced Outputs Tip: The ("-") Output may also be used as an unbalanced line driver, albeit inverted. The balanced Input terminals of the next stage must be reversed (+) for (-) to correct for the inversion. This nets a total of 32 Outputs!

Operating Instructions

Using the 3-position Output Assign switches, select either the A Input, the B Input, or A+B Inputs. If the sum of both Inputs is selected, but only one Input is driven, the Output is reduced by 6 dB compared to the Output being assigned to only the driven Input. Since normally the Output would be assigned to both Inputs only if both Inputs are driven, this isn't usually an issue. With the sum of the Inputs available in this way, the DA 216S may be used as a two-input mixer with 16 assignable Outputs. Each Output has an independent Gain control which ranges from *off* to +6 dB gain in the output stage. Coupled with a maximum gain of +10 dB for the MASTER LEVEL controls, a total of +16 dB gain is available with the OUTPUT LEVEL controls. The INPUT GAIN switch provides for an additional 20 dB gain increase.

MIC-LEVEL

For optimum noise performance with microphones, obtain as much gain as possible in the Input stage of the DA 216S without overdriving the unit.

- 1. Set the appropriate INPUT PAD switch to MIC (out).
- 2. Set the appropriate INPUT GAIN switch to 40 dB (in).
- 3. Set the MASTER LEVEL controls fully counterclockwise.
- 4. Set the OUTPUT LEVEL controls midway.

5. Adjust the MASTER LEVEL clockwise until the OL LED just blinks on the loudest expected program material. If the MASTER LEVEL is turned all the way up and the OL LED is not lighting, set the INPUT GAIN to 60 dB and adjust the MASTER LEVEL again. Adjust the OUTPUT LEVELs for the desired output level. If the OL LED is *not* lit, adjusting the OUTPUT LEVEL cannot cause clipping within the DA 216S. The user may still want to turn down the OUTPUT LEVEL to avoid overloading downstream equipment.

LINE-LEVEL

In the LINE-level configuration, start with unity gain.

- 1. Set INPUT PAD switch to LINE position (in).
- 2. Set appropriate INPUT GAIN switch to 0 dB.
- 3. Set MASTER LEVEL controls fully counterclockwise.
- 4. Set OUTPUT LEVEL controls midway.
- 5. Adjust the MASTER LEVEL clockwise until the OL

LED just blinks on the loudest expected program material. If the MASTER LEVEL is turned all the way up and the OL LED never comes on, set the INPUT GAIN switch *out* to the 20 dB position. Adjust the MASTER LEVEL control as before for optimum gain, then adjust the OUTPUT LEVEL controls for the desired output level.

©Rane Corporation 10802 47th Ave. W., Mukilteo WA 98275-5098 USA TEL 425-355-6000 FAX 425-347-7757 WEB www.rane.com