



Table of Contents

CHAPTER 1: Welcome to the World of HAL	1
About This Document.....	2
System Requirements.....	3
Minimum Requirements for Running Halogen.....	3
Recommendations for Best Performance.....	3
Administrative Rights Requirements.....	4
Using the HAL System Documentation.....	4
Getting Started.....	5
CHAPTER 2: Introduction to the HAL System	6
HAL1 Device.....	8
Rear Panel Description.....	9
Front Panel Description.....	11
Remote Audio Devices.....	13
How the CAT 5 Cabling is Utilized.....	13
The Parts of a RAD.....	14
Pager1 RAD.....	16
AM1 and AM2 RADs.....	17
Using a RAD as a Portable Device.....	18
Digital Remote Devices.....	19
Available Digital Remote Models.....	20
Expansion Units.....	23
EXP1 Device.....	24
Introduction to the Halogen Software.....	27
Basic Structure.....	27
Workspace Layout.....	28
HAL System Connectivity.....	29
Required Ports.....	29
Required Processes.....	30

CHAPTER 3: Key Audio Design Features	32
About the Distributed Program Bus.....	32
About Zone Processing.....	34
About Paging.....	38
About Control Links.....	44
Basics of Control Linking.....	44
Advanced Topics.....	51
Best Practices.....	56
About Room Combine.....	58
About Presets.....	69
CHAPTER 4: Designing and Installing Your HAL System	82
Recommended Workflow for Creating a HAL System.....	82
A Few Design and Installation Tips.....	85
Installing and Starting the Halogen Software.....	85
About Halogen Configuration Files.....	87
Creating, Viewing, and Modifying Notes about a HAL System Configuration.....	88
Generating Device Labels.....	89
Upgrading Halogen Software and HAL Firmware.....	90
Uninstalling the Halogen Software.....	91
APPENDIX A: Transitioning from Drag Net	92
Index	95
Glossary	99

CHAPTER 1: Welcome to the World of HAL

It's no coincidence that the name of Rane's new audio system (HAL) matches that of the sentient computer made famous in Arthur C. Clarke's science fiction book and film titled *2001: A Space Odyssey*. In Clarke's tale, HAL (which stands for **H**euristically-programmed **A**Lgorithmic computer) is all-knowing, all-seeing, and (at least initially) a tremendous asset to the astronauts on board the spaceship *Discovery*. Rane's HAL System (which stands for **H**euristic **A**udio **L**aboratory) is also, in many ways, all-knowing and all-seeing—in terms of audio, that is! Unlike Clarke's HAL, however, we assure you that Rane's HAL will remain loyal to you—easing your audio design tasks for years to come. No mutinies, no murders—guaranteed!

So what is the HAL System and what can it do? First and foremost, it can make your life a lot easier! Comprised of a central brain (the HAL device) and a variety of auxiliary devices, the HAL System uses an application-centric approach to simplify the design, configuration, and management of everything from zone processing to paging to presets to room combine situations. No third-party hardware or software. No programming. No late nights trying to figure out how to integrate disparate components. Instead, the HAL System offers a seamless solution to all of your audio needs, melting away the individual hardware views so prevalent in older DSP systems. Using the HAL System, all you have to control are the inputs and outputs—freeing up so much of your time that you'll be able to take that much needed vacation, attend that concert you saw in the newspaper, or simply relax at home for a change!

Are you thinking that this sounds too good to be true? That this is nothing but hype? If you have ever used any Rane products, you know that we place quality above everything else. This high standard holds true with the HAL System, Rane's most exciting and comprehensive product to date. Let us assure you that this is no hype!

So how does it work? In essence, all of your audio and control devices are connected to one central brain (HAL) which results in one omniscient host device that knows everything about each piece of hardware connected to it. This centralized control is the key to what makes the HAL System so easy to implement. You use the system software (called Halogen—clever, huh?) to define and configure the hardware and to design the audio routing and processing, simply by dragging and dropping components onto a central workspace where you can then connect and configure them as you like.

What if you don't actually have any hardware yet, but you'd like to start designing your system? No problem. Using Halogen, you can configure your entire system (and even *test* many aspects of it) before you even see a piece of hardware. Then, when you connect the actual hardware, the software helps you sort out any detected mismatches between your virtual design and your actual setup. Thus you can use Halogen as a design tool, allowing a consultant to create a configuration to pass on to someone else, or giving a design/build engineer a tool for experimenting with different system designs.

Finally, have you ever designed and set up an entire system only to replace it a few years later when your audio needs changed? This all-too-common situation is time-consuming, frustrating, and expensive. For this reason, Rane's brilliant engineers designed the HAL System to be completely extensible, allowing customers to connect additional devices that extend the functionality of the initial system. Rane anticipates the development of multiple HAL-ready devices over the coming years that will address needs both new to the industry as well as needs unforeseen at this time.

About This Document

The purpose of this Design Guide is to provide the background you need to get up and running with your HAL System audio design as quickly as possible. For the actual details of working with the Halogen software and creating the design, you should refer to the Halogen Help System, but to gain the broad background you'll need to get started, read this guide! You'll learn the basics of the HAL System hardware and software, the recommended work flow to follow when designing and installing a system, and, most importantly, you'll become aware of the key features the HAL System has to offer—functionality that will save you DAYS of work! Yes—days of work! How is that possible? Read on to find out ...

System Requirements

To use a HAL System, the following items are required:

- You must have access to a computer running Microsoft Windows XP (Service Pack 3 or higher), Vista (Service Pack 1 or higher), or Windows 7. The computer must also have an Ethernet port, which you use to connect the computer to the HAL device (either directly or via an Ethernet network). This connection is necessary for using the Halogen software to load configuration information into the device and also for monitoring detailed status information. Note that some status information is visible on the hardware itself.
- You must have administrative rights to install the Halogen software, but you do not need administrative rights to run the software.
- Most RADs require two, three, or four-gang standard switchboxes (for installation into a wall). A DR1 requires a one-gang switchbox, while a DR2 and DR3 require two-gang switchboxes. Switchboxes used for both RADs and DRs must have a minimum depth of 2 1/4" (57 mm).

Minimum Requirements for Running Halogen

- Windows XP SP3 (32-bit) or Vista SP1 (32 or 64-bit), or 7 (32 or 64-bit)
- PC with 1.6 GHz Dual Core Processor (for example, Intel Core Duo, AMD Athlon X2)
- 1 GB RAM
- 2 GB available hard disk space
- Display Resolution: 1024x768, 24 bit color
- Ethernet adapter: 100baseT
- DVD Drive for installation from DVD (or can install from Rane website)

Recommendations for Best Performance

- Windows 7 (32 or 64-bit)
- PC with mid-level processor @ 2GHz multi-core or better (for example, Intel i3, AMD Athlon II)
- 2 GB RAM
- 2 GB available hard disk space
- Display Resolution: 1280 x 1024, 24-bit color
- Display Adaptor: supports rendering tier 1 or 2 (see <http://msdn.microsoft.com/en-us/library/ms742196.aspx>) (i.e. DirectX 9.0 or greater)
- Ethernet adapter: Gigabit

Administrative Rights Requirements

The following table outlines which Halogen tasks require administrative rights and which do not:




Requires administrative rights	Does not require administrative rights
<ul style="list-style-type: none"> • Installing Halogen • Installing software updates to Halogen • Manually starting or stopping the Ranelink II service 	<ul style="list-style-type: none"> • Running and using Halogen • Updating the HAL firmware

Using the HAL System Documentation

A variety of documentation is available to help you get started with and use your HAL System:

Halogen Help System

A comprehensive help system is installed with the Halogen software. It contains all the information you need to work with the system. There are several ways to access the Help System:

- Click the **Help** icon on the application toolbar:  Clicking the icon itself opens the Help System. Clicking the down arrow displays a list of options including such things as access to the Rane website, checking for updates to the Halogen software, and sending an email to Rane.
- Click the Help icon  that appears in the upper right corner of Halogen dialog boxes. Clicking this icon opens the Help topic related to the specific dialog box. From there you can access the entire Help System, if needed.
- Right-click on different elements in the user interface. A **Help** option appears in the context menu. Click this option to open the relevant Help topic. Pressing F1 when an area of the user interface has focus also displays its relevant Help topic.
- To search for information within the Help System, you can use the tabs on the Help Viewer's left pane to search the index (click the **Index** tab) or perform a full-text search (click the **Search** tab). You can also use the **Quick search** box in the Help System toolbar to search for text within the currently displayed topic: 

HAL System Design Guide

This guide, the one you are reading, is offered as a PDF file and contains a product overview, details about the HAL System's key features, and best practices for designing a HAL audio system. Note that the information in this guide is also available in the Halogen Help System. You can find this guide on the Rane website as well as on the product DVD.

HAL System Installation Guide

This guide is offered in both a PDF and hardcopy format, and includes step-by-step instructions on installing the HAL hardware, loading a configuration, and testing the system. This information is also included in the Halogen Help System. You can find this guide on the Rane website and product DVD, and as a printed guide in the product package.

Getting Started

So you've won your bid and you're ready to get started! Following are the recommended steps for learning what you should know and do before beginning your design:

1. Perform your initial product research, learning about the system's hardware components and the basics of how the software works. "Introduction to the HAL System" on page 6 is a good place to start. Be sure to review the "Recommended Workflow for Creating a HAL System" on page 82 to get a general sense of the HAL System design process. If you have ever used Rane's Drag Net product, you may want to review "Transitioning from Drag Net" on page 92.
2. Familiarize yourself with the key audio design features of the HAL System. Do this now—**BEFORE** you begin your design! You could save yourself days of time—really! The HAL System includes some tremendous time savers that you could miss out on if you simply jump in and create your system using *last-century* techniques. These key areas include:
 - **Distributed Program Bus**—Talk about a time saver! If you need background music in your installation, simply wire the background music channels to a single block called a Distributed Program Bus and, voila, these channels automatically appear in your zones (as long as you use a Zone Processor or Room Combine Processor to create your zones). See "About the Distributed Program Bus" on page 32 for more information.
 - **Zone Processor**—Need to create an audio zone with background music and paging? The Zone Processor block supplies all you need (with some help from the Distributed Program Bus and the Paging System). See "About Zone Processing" on page 34 for more information.
 - **Paging System**—Here's another time saver! In the HAL System, you design your paging in one central location (the Paging Manager). No longer do you need to wire your paging into every zone you create. This wiring is done for you, behind the scenes. See "About Paging" on page 38 for more information.
 - **Control Linking**—You won't believe how simple it is in Halogen to set up remote controls for your end users. Each control in the system contains a special link icon. To link two controls together, you simply drag one control's icon and drop it onto the icon of the control to which you are linking. There's certainly a bit more to learn, but the process is really as simple as that. See "About Control Links" on page 44 for more information.
 - **Room Combine Processor**—Perhaps the ultimate time saver in the HAL System is its Room Combine Processor. Whereas you may have approached room combine designs with a sense of dread (all those complicated matrix mixers), you'll now skip through the creation of a room combine design in no time at all. We can honestly say that the process is simple! See "About Room Combine" on page 58 for more information.
 - **Presets**—With the introduction of Toggle and Selector presets, the HAL System makes it possible to activate and deactivate a single preset, eliminating the complexities introduced by layering presets (although the layering approach is still available, if needed). See "About Presets" on page 69 for more information.
3. Design to your heart's content! And have fun with it. The Halogen Processing Workspace is a blank canvas waiting to be filled with your ideas and design expertise. The tools provided by the HAL System remove many of the tedious, time-consuming tasks from days-gone-by and free you up to do what you do best—design audio systems!


CHAPTER 2: Introduction to the HAL System

The HAL System includes both hardware and software components. This system introduction provides a broad overview of these components.

Hardware Components

The primary hardware component in a HAL System is the HAL host device. There is only **one** HAL device per system. HAL serves as the system's brain to which you connect other slave devices such as analog audio equipment, Remote Audio Devices (RADs), Digital Remotes (DRs), Expansion Units (EXPs), and more. Inside HAL is a DSP processor that manages the audio as well as a host processor that manages other aspects of the system.

The following graphic provides a visual of an entire HAL System :

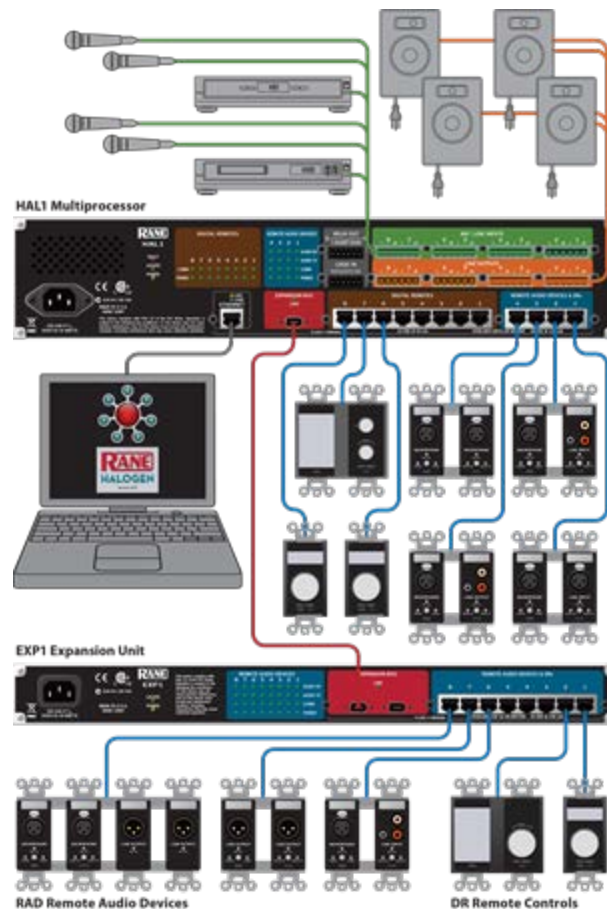

Software Component


Included in the HAL System is a software application, called Halogen, that you use to configure and manage the entire system. Halogen contains two primary graphical workspaces, the Hardware Workspace and the Processing Workspace, in which you simply drag and drop hardware

CHAPTER 2: Introduction to the HAL System

components and processing blocks to set up the audio system you want. You can work in online mode (connected to HAL) or offline mode (not connected to HAL or any other hardware). The ability to work in offline mode makes Halogen a powerful design tool available for use whether or not you have the hardware in hand. And not only can you design your system without having hardware in place, you can also *test* your system *before* you install the hardware! Now that's powerful!

NOTE: When working in online mode, changes made in the software are immediately implemented and saved to HAL (with the exception of DSP changes that require a system recompile).

Below is a sample image of the Halogen Processing Workspace:

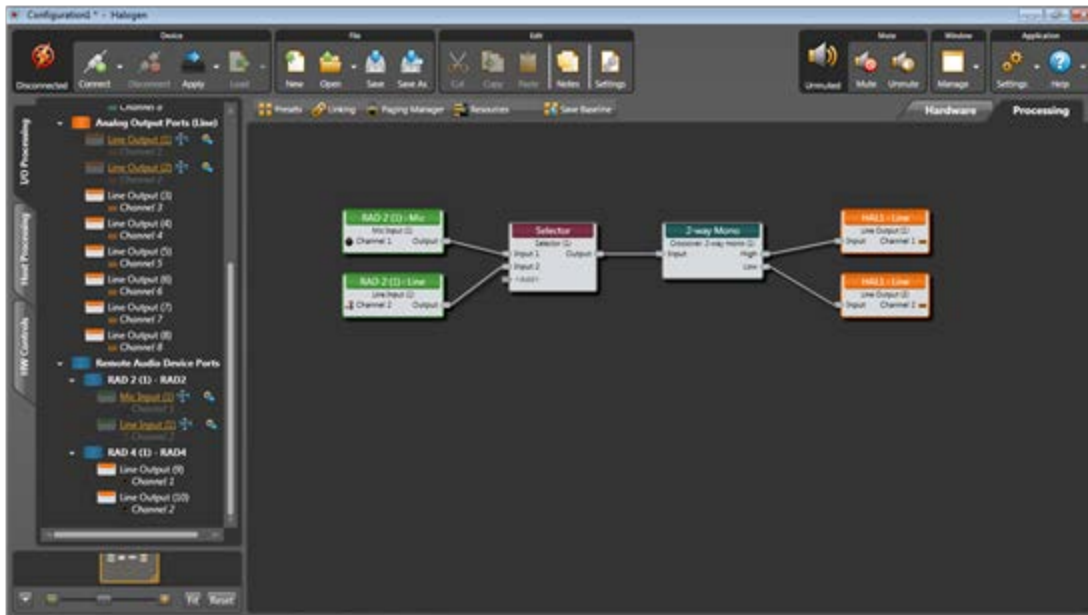

For more details on the Halogen software application, see "Introduction to the Halogen Software" on page 27.

HAL1 Device

The HAL1 host device (which is referred to as HAL throughout this guide) is the *brain* that controls the entire HAL System. It can connect to a variety of other hardware (or slave devices) such as analog equipment, RADs, DRs, and EXPs. Inside the HAL hardware is a host controller that controls DSP operations and manages control links, presets, and more. There is only one HAL device per system. You cannot connect one HAL to another.



NOTE FOR DRAG NET USERS: The DSP processing engine in the HAL1 device is four times more powerful than the RPM88.

Maximum Device Connections

The device connections that are possible on a HAL1 are as follows:


- 4 Remote Audio Devices (RADs)
- 8 Digital Remotes (DRs)—Can add up to 4 more by plugging them into the RAD ports
- 1–4 Expansion Unit Devices (EXPs)
- 8 Mic/Line Inputs
- 8 Line Outputs
- 4 Logic Inputs
- 2 Relay Outputs

Other Functionality

In addition to hosting other hardware devices and managing system operations, HAL also does the following:

- Provides power to connected RADs, DRs, and EXPs
- Stores configuration settings and compatible firmware for itself and for each connected RAD, DR, and EXP
- Provides a connection to an Ethernet network (for control of HAL and the connected devices)
- Displays various status indicators (LEDs) providing information about the health of the system

Rear Panel Description

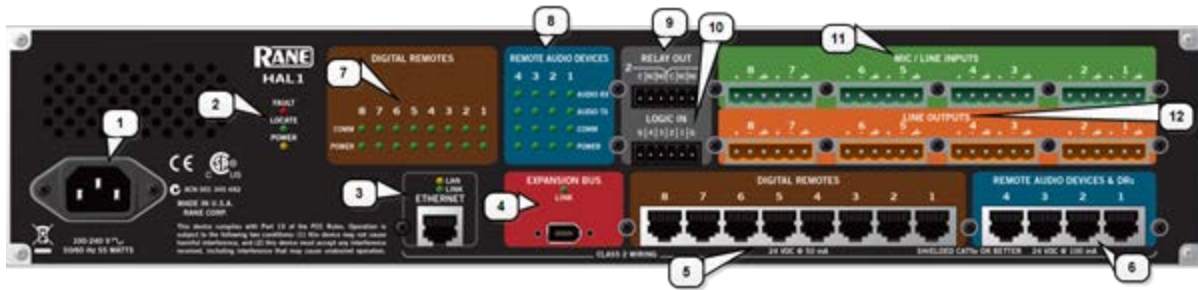

1. The **Power IEC jack** connects to AC line voltage, 100-240 V, 50-60 Hz.
2. **Fault, Locate, and Power LEDs**

The **Fault LED** flashes red when something in the hardware goes awry. The first step in troubleshooting the problem is to open the Halogen software and check the status of this HAL device.

The **Locate LED** flashes green when you place this HAL device in Locate Mode (via the Halogen software). The purpose of this Locate functionality is for verification, when working in the software, of the physical device you are configuring or viewing.

The **Power LED** lights when the HAL hardware is powered on.

3. **Ethernet port and LAN and Link LEDs**

Use this port to connect HAL to an Ethernet switch or directly to a computer.

NOTE: This Ethernet port contains auto-MDIX functionality, which means that you can use either a standard Ethernet patch cable or a crossover cable to connect to a computer or Ethernet switch. The auto-MDIX functionality takes care of coordinating the proper connection between the devices.

The **Ethernet LAN LED** flashes when HAL detects any Ethernet packets on the network. The **Link LED** indicates if the Ethernet network is connected. If HAL is connected to an Ethernet network but the Link LED is off, there is likely a problem with the connection.

4. **Expansion Bus LED and port**

Use the **Expansion Network port** to connect an Expansion Network device (such as an EXP1) to the HAL via **Firewire**¹. To attach additional Expansion Network devices to your HAL System, use a Firewire cable to connect each new device to the previous device—in a daisy chain style.

¹A form of connectivity similar to USB, meant to connect peripherals such as MP3 Players and digital cameras to the computer. The HAL System uses FireWire to connect Expansion Units to the HAL device. FireWire operates around 30 times faster than a USB 1.1 connection. FireWire is technically known as IEEE-1394.

If lit, the Expansion Network **Link LED** indicates that the Expansion Network device is communicating properly with HAL. If an Expansion Network device is properly connected to the port yet the status LED remains dark, there is likely a problem with the connection.

5. Digital Remote Device ports

Use these ports to connect each DR to the HAL via a standard CAT 5 cable. You must use a standard Ethernet patch cable for this connection. There are 8 DR ports on a HAL1 device. If you need more than 8 DR connections, you can use a RAD port to connect a DR.

6. Remote Audio Device ports

Use these ports to connect each RAD to the HAL via a standard CAT 5 cable. You must use a standard Ethernet patch cable for this connection. There are 4 RAD ports on a HAL1 device. If you need more RAD connections, you will need to connect an Expansion Unit with RAD ports (such as an EXP1) to your HAL device. You cannot connect a RAD to a DR port.

7. Digital Remote Device LEDs

Provides information about the health of the CAT 5 connection between each DR and HAL. The numbers 1 through 8 correspond to the DR ports 1 through 8 in the lower area of the rear panel. The **Comm LED** (on the top row) lights solidly if the DR's data communications pair is working properly. The **Power LED** (on the bottom row) lights solidly if HAL is supplying adequate power to the DR port.

8. Remote Audio Device LEDs

Provides status information about the health of the CAT 5 connection between each RAD and HAL. The numbers 1 through 4 correspond to the RAD ports 1 through 4 in the lower right corner of the rear panel. For example, the LEDs for number 1 provide information about the RAD connected on port 1. Each LED corresponds with one twisted pair within the CAT 5 cable. If the twisted pair is functioning properly, the LED displays a solid green light.

- **Audio Rx LED**—lights solidly if the HAL receive pair is working properly.
- **Audio Tx LED**—lights solidly if the HAL transmit pair is working properly.
- **Comm LED**—lights solidly if the RAD's data communications pair is working properly.
- **Power LED**—lights solidly if HAL is supplying adequate power to the RAD port.



NOTE: The Remote Audio Device LEDs on the front panel differ from those on the rear panel. The front panel LEDs provide information about signal activity on each audio channel. See the "Front Panel Description" on next page for more details.

9. Relay Out ports

Reed relay ports used to signal another device. A common implementation is to link a relay port to a Toggle control so that an end user can change its value. Also, the Halogen software contains a checkbox for each relay port, the value of which you can include in a preset or link to another control, making it possible to use a preset or control to turn the relay port on or off. HAL1 contains two Relay Out ports.

CHAPTER 2: Introduction to the HAL System

10. Logic In ports

Use these TTL 5-volt digital logic input ports to communicate to the HAL System via an external control device. You can configure each Logic In port to control a selector, toggle, or command within the HAL System. For example, you might use a Logic In port to select between two audio channels, or to mute the whole system.

11. Mic/Line Input ports

Use these ports to connect up to 8 analog microphones or line input devices. Note that the Mic In ports support phantom power.

12. Line Output ports

Use these ports to connect up to 8 analog line output devices, such as amplifiers.

Front Panel Description



1. Mic/Line Inputs LEDs

Provides status information about the mic/line analog inputs connected to the HAL. The numbers 1 through 8 correspond to the mic/line input ports 1 through 8 on the rear panel.

These LEDs provide information on the following:

- **Overload LED** (red) – indicates that the mic/line input is experiencing a signal overload
- **Signal LED** (green) – indicates the presence of an audio signal on the mic/line input

2. Line Outputs LEDs

Provides information about the HAL analog outputs. The numbers 1 through 8 correspond to the line output ports 1 through 8 on the rear panel.

These LEDs provide information on the following:

- **Overload LED** (red) – indicates that the line output is experiencing a signal overload
- **Signal LED** (green) – indicates the presence of an audio signal on the line output

3. Digital Remotes LEDs

Indicates which Digital Remotes are enabled. Each numbered LED corresponds to the Digital Remote port with the same number. If a Digital Remote is connected on a port but its Enabled LED is off, there is likely a problem with the CAT 5 connection or with the Digital Remote itself. If an Enabled LED is flashing, it indicates that the physical Digital Remote model does not match the Digital Remote model specified for this port in the HAL configuration.

4. Remote Audio Ports status indicators

Provides information about the RAD audio channels. The numbers 1 through 4 at the top of the front panel correspond to the RAD ports 1 through 4 on the back of the HAL. For example, the LEDs for number 1 provide information about the RAD connected on port 1.

Under each RAD number are LEDs for four audio channels, two input and two output. These four LEDs represent the maximum number of channels a RAD is capable of transporting. However, not all RAD models use all four channels. For example, the RAD1 model provides two microphone inputs, so for that model, only the two columns of indicators labeled IN would be active.

These LEDs provide information on the following:

- **Overload LED** (red)—indicates that the channel is experiencing a signal overload
- **Signal LED** (green)—indicates the presence of an audio signal on this channel
- **Enabled LED** (yellow)—indicates the availability of the associated audio channel. If a RAD is connected on this port and all Enabled lights are off, this indicates a problem with the CAT 5 connection or with the RAD. If the Enabled LEDs are flashing, this indicates that the physical RAD model does not match the RAD model specified for this port in the HAL configuration.

5. The Ethernet Comm and Link LEDs

Provides status information about the HAL Ethernet connection.

- **Comm LED** (yellow) – flashes when HAL has been discovered by at least one PC running **RaneLink II**¹, is solid when Halogen is exclusively connected to HAL, is off when HAL has yet to be discovered.
- **Link LED** (green) – indicates if the Ethernet network is connected. If the HAL is connected to an Ethernet network but the Link LED is off, this indicates a problem with the connection.

6. The Expansion Network LED

If lit, indicates that an Expansion Network device is properly connected to the HAL. If an Expansion Network device is properly connected to the port and powered on yet the status LED remains dark, there is likely a problem with the connection.

7. Fault, Locate, and Power LEDs

The **Fault LED** flashes red when something in the hardware goes awry. The first step in troubleshooting the problem is to open the Halogen software and check the status of this HAL device.

The **Locate LED** flashes green when you place this HAL device in Locate Mode (via the Halogen software). The purpose of this Locate functionality is for verification, when working in the software, of the physical device you are configuring or viewing.

The **Power LED** lights when the HAL hardware is powered on.

¹A service needed by Halogen to establish a connection with HAL.


Remote Audio Devices

The primary purpose of a Remote Audio Device (RAD) is to amplify, digitize, and transmit a digital audio signal via CAT 5 cable to a HAL host device. RADs can also receive a digital signal from the HAL and then convert it to analog before sending it to its attached audio equipment. RADs are capable of transmitting and receiving up to four channels of digital audio (two in each direction). To better fit your needs, however, Rane offers various RAD models. Most RAD models are designed to fit in a standard U.S. two, three, or four gang switchbox.

The HAL System offers a variety of RAD models, each of which serves a unique purpose. For example, a RAD1 contains two microphone input channels. When you design an audio system, you choose the RAD models that are appropriate for your application. You must then provide configuration information to HAL so that it knows which RAD models to expect on each port and what information to send to each RAD. For more information, see "Available RAD Models" in the Halogen Help System. You can also read about the available RAD models on the Rane website.

How the CAT 5 Cabling is Utilized

The CAT 5 cable that connects the RAD to HAL also provides power to the RAD as well as a path for data communications. Data communications makes it possible to control the RAD's configuration settings, view status information, and update a RAD's firmware – all from the host HAL device. The following picture illustrates how the four twisted pairs within the CAT 5 cable are utilized.

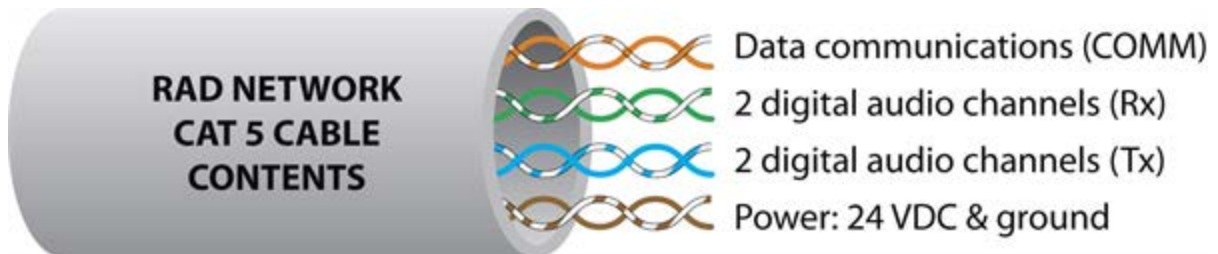

- The orange pair is reserved for data communications between the RAD and HAL. Data communications is needed for such things as sending configuration information from HAL to the RAD, sending firmware updates from HAL to the RAD, and sending status information from the RAD to HAL.


NOTE: Configuration information for a specific RAD (for example, LED intensity, microphone sensitivity, and RAD and channel names) is stored in the HAL device, not in the RAD. This makes it easy to swap in a new RAD, if necessary, without losing configuration data.

- The green and blue pairs carry two channels each of balanced, differential, digital audio. Tx refers to audio that the RAD sends to the HAL. Rx refers to audio that the RAD receives from HAL.
- The brown pair provides 24 VDC power and ground for the RAD. This is (obviously) the wire you should check if it appears a RAD is not receiving power.

NOTE: Digital Remotes (discussed on page 19) use only the orange pair (for data communications) and the brown pair (for power).

The Parts of a RAD

Following is an illustration of the front of a typical RAD, accompanied by descriptions of the RAD's various hardware features:

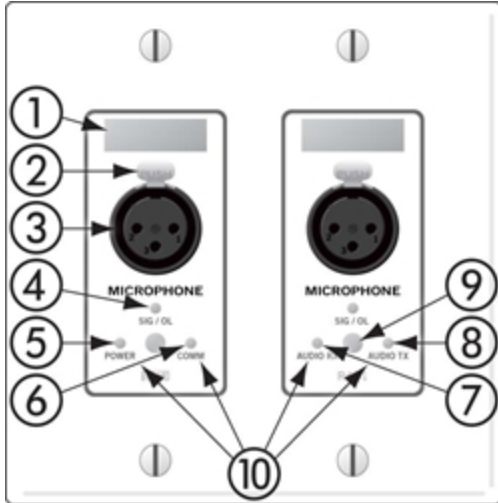


1. **Label:** a location on the RAD for inserting a custom label. One possible use of this label is to identify the channel number associated with the corresponding jack.
2. **XLR Tab:** push tab for releasing a microphone cable. If you do not need this tab, you should remove it before installing the RAD. For more information, see the RAD installation instructions beginning on page 1.
3. **Input/Output jacks:** the actual jacks to which you connect the appropriate audio device(s). The jacks differ based on the RAD model.
4. **Sig/OL LED:** displays a green light when an audio signal is detected, displays a red light when the channel is experiencing a signal overload.
5. **Power LED:** displays a solid green when the RAD is receiving power, displays solid red if the voltage received is lower than expected.
6. **Comm LED:** displays a solid green when the RAD detects two things—the communication pair of wires and that communication is established between the HAL and RAD. The light displays solid red if the RAD cannot communicate with the HAL. This is likely due to a problem with the communications pair of wires.
7. **Audio Rx LED:** displays solid green when the RAD detects that the pair of wires for receiving audio is functioning properly, regardless of the RAD model. Displays red if there is a problem.
8. **Audio Tx LED:** displays solid green if communication with the HAL has been established and the HAL informs the RAD of the Tx Audio lock. Displays solid red if there is a problem communicating with the RAD or if there is a problem with the Audio Tx pair of wires.
9. **Light sensor:** detects the amount of light in the room and dims or brightens all LEDs appropriately—primarily to prevent the LEDs from glowing in a darkened room like cat eyes on Halloween. Note that you cannot turn these LEDs off manually. This is by design. We wanted to avoid the possibility of someone erroneously thinking the RAD is defective (because the power light is off) and attempting to replace it unnecessarily.

CHAPTER 2: Introduction to the HAL System

10. **Locate mode:** The Halogen software application contains a feature allowing you to verify the physical location of a specific RAD or HAL device. When you place a RAD in Locate mode, the Power, Comm, Audio Tx, and Audio Rx LEDs on the front of the corresponding RAD flash green. The flashing continues until you cancel the request in the software, place another RAD in Locate mode, interrupt the connection between the computer and the HAL, disconnect the RAD, or power cycle the HAL. **Mismatch mode:** When a RAD is connected to a RAD port on the back of a HAL, a comparison is made between the physical RAD model and the RAD model specified for this port in the HAL configuration. If there is a mismatch the Power, Comm, Audio Tx, and Audio Rx LEDs on the front of the corresponding RAD flash red.

Following is an illustration of the back and side of a typical RAD:

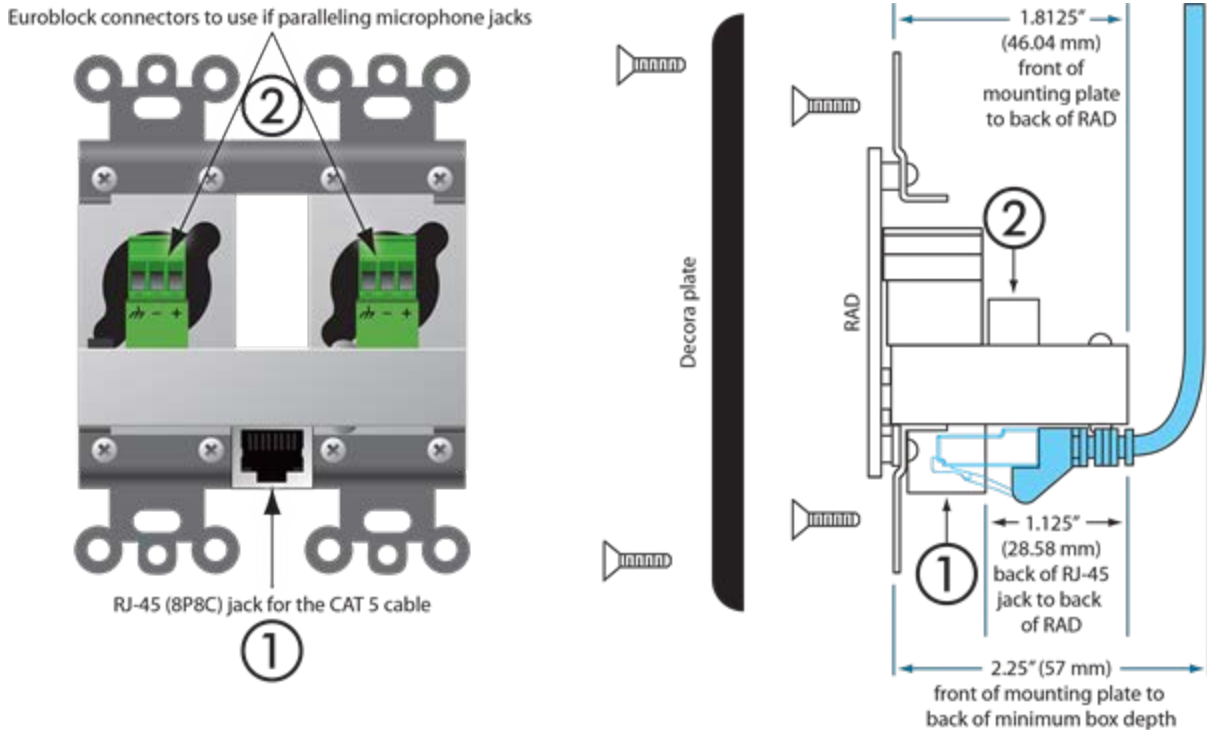

WARNING! As it is poor design to plug two microphones into a single microphone input, we do not recommend this practice.

NOTE: RADs are hot-swappable. In other words, you can replace a RAD without having to power down the system. The HAL automatically detects the new RAD and configures it using the configuration data stored in the HAL. If the configured RAD and the physical RAD do not match, the HAL front panel Enabled LEDs for this RAD flash yellow. At the same time, the RAD's Power, Comm, Audio Rx, and Audio Tx LEDs flash red.

Pager1 RAD

Setting up paging in the HAL System is as easy as adding zones to groups (called *Scenarios*), and then specifying the Scenarios into which each paging station can page into. The paging hardware (the Pager1 RAD) then displays the Scenario options available at that station. The user selects the desired Scenario, waits for the Ready green light indicating that all zones in that Scenario are ready to hear a message, presses the talk button, and speaks into the microphone.

The Pager1 hardware, which is automatically discovered by the system when connected to a HAL, is a table-top RAD that accepts a gooseneck via a locking 3-pin XLR connector for increased security.


The Pager1 also includes the following set of paging controls:

- A selectable list of available **Paging Scenarios**¹
- Indicators for Busy, Caution, and Ready (referring to the selected Scenario).
 - The Busy indicator lights when zones in the selected scenario are in use by a higher or same priority page.
 - The Caution indicator lights when zones in the selected scenario are in use by a lower priority page.
 - The Ready indicator lights when all zones in the scenario are free to page into.
- A talk button
- Signal and Overload LEDs

On the following page is an annotated image of a Pager1 device.

¹One or more paging zones treated as a group for paging purposes. Paging Scenarios are defined and named by the designer, who then also assigns specific Scenarios to specific Paging Stations. End users always page into Scenarios.

CHAPTER 2: Introduction to the HAL System

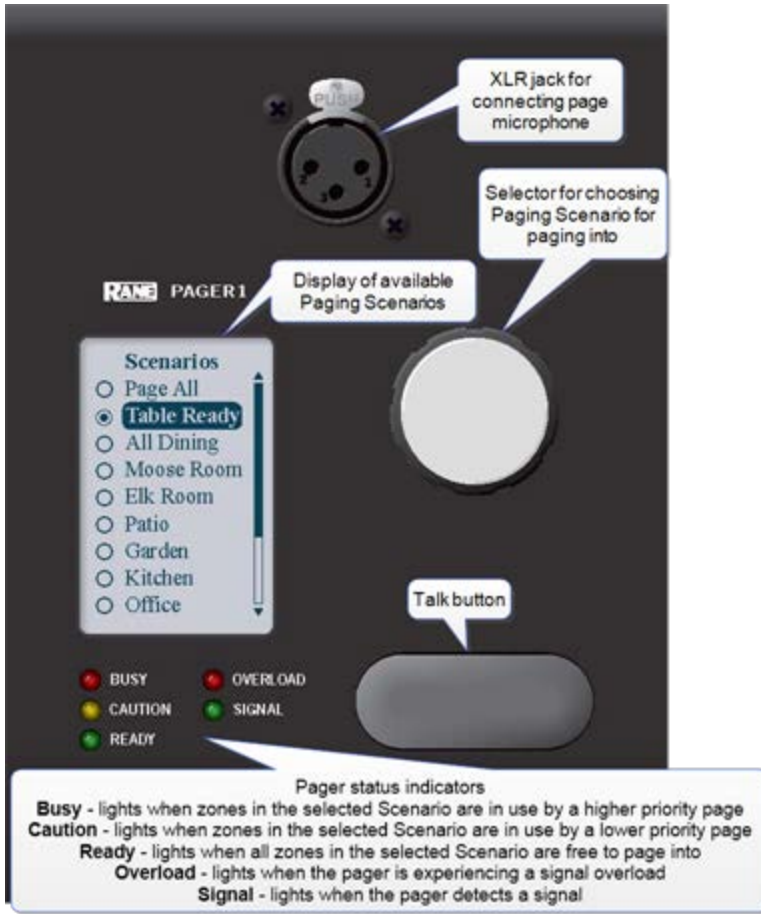

AM1 and AM2 RADs

The Automixer 1 (AM1) is a mixer that expands the available microphone channels as well as line inputs, making it easy for an inexperienced operator to quickly set up and manage the audio for a small multimedia presentation involving up to four participants using wired or wireless microphones as well as several additional program sources (such as a laptop computer or a DVD player).



The Automixer 2 (AM2) is a cascadable mixer that expands into the AM1 or other AM2s and increases the number of microphones by eight or more, but does not expand line inputs. Both products provide superior audio processing with a simple user interface.



For more details, see the manuals that accompany the AM1 and AM2. More information on these RADs is also available in the Halogen Help System.

Using a RAD as a Portable Device

Many audio systems have temporary device needs from time to time. For example, a teacher in a specific classroom in a school may only occasionally need to use a microphone or plug in a DVD player or a television. A meeting room in a hotel conference center may need a large number of microphones for a panel discussion, but only rarely. Instead of purchasing and installing the appropriate RADs to service all of these needs in all of these rooms, wouldn't it be much more cost-effective to have just a few of the needed RADs installed on, say, a rollable A/V cart that can be used when needed? The answer is, of course, YES!

So how can you accomplish this RAD portability in a HAL System? You do so by installing one or more RADX devices (which are less expensive than other RADs) in the rooms needing certain audio functionality only occasionally. You can think of the RADX as an extension cord. You simply roll the cart (if that's what you're using) into the room and connect the RAD on the cart to the RADX in the wall.



WARNING! The port to which the RADX is connected **MUST** be configured for a specific kind of RAD – and you can only plug in that type of RAD. In other words, you'll need a RADX for each type of RAD you plan to use as a portable device (in each specific location).

TIP: Because a RADX must be configured for a specific RAD model, we recommend that you label each RADX in your system with the RAD model it can accept.

NOTE: The RADX has an XLR-style 8P8C modular jack in it—to help the audio guy distinguish between the RADX and a standard CAT5 Ethernet connection in the wall.

Digital Remote Devices

The Halogen software gives you microscopic control over almost every aspect of your audio system. This detailed control is great for the system designer, but not so great for end users who simply want to turn up the volume. The last thing they want to do is open a software program! Digital Remote (DR) hardware devices, a variety of which are available for your HAL System, provide system users with easy control of volume, audio selection, preset activation, and more—out in the locations where the control is needed.

A huge advantage of these DR devices is their plug-and-play nature. When you connect a DR to the system, HAL automatically discovers and addresses it. In addition, just as with RADs, DRs use point-to-point wiring which eliminates problems of cable length, termination, and addressing. Troubleshooting time is also reduced because of DR status indicators on the HAL that immediately report the DR wiring status. And, finally, designers can test remote operation with or without the actual hardware. This offline testing is possible because of the Halogen software representation of each remote in the system.



DRs connect to the HAL via DR ports, which are basically the same as RAD ports but with no audio. In other words, the DR ports provide a communications link and power, but no AES3¹ digital audio. Because RAD ports contain all the functionality needed by a DR, you can also connect DRs to RAD ports (if, for example, all your DR ports are full and you have a RAD port available). The opposite is not true, however. You cannot connect a RAD to a DR port.

Some DR models (DR2 and DR3) can behave in a variety of ways. You use the Halogen software to configure their behavior. You can also enable and disable the individual controls on a DR (both manually, via control links to other remotes, and through the use of presets). For details, see the Halogen Help System.





NOTE FOR DRAG NET USERS: Digital Remotes serve a similar function as the Smart Remotes used with Dragnet products. There is a key difference, however. Smart Remotes are multi-drop devices that must be daisy-chained together. Because they share bandwidth and power, the more Smart Remotes you connect, the slower the communications and the more sag in power delivery. DRs, on the other hand, are each connected directly to the HAL System and are, therefore, able to provide consistent, high performance. In addition, unlike Smart Remotes, you no longer have to worry about device addresses, cable length, cable termination, troubleshooting of the wiring, or complex processes for linking controls to audio processing.


¹A standard from the Audio Engineering Society used for the transport of digital audio signals between professional audio devices.

Available Digital Remote Models

Following are the types of DRs currently available for your HAL System. The DR models available will vary over time as Rane's engineers ponder and design new and better ways to remotely control an audio system. For the most current list of DRs, see the Rane website.


 **NOTE:** Each of these DRs mounts inside a US one-gang or two-gang switchbox. See the Rane website for a detailed listing of acceptable models of switchboxes. Note that the Decora plates for the DRs are included.


 **NOTE FOR DRAG NET USERS:** Remember the SR3 remote for Drag Net systems and how it was too wide to allow the mounting of two or more of them beside each other in a standard switch box? You will be happy to know that the HAL System DRs can be mounted directly beside each other in any combination, allowing you to use several DRs in the same two, three, or four-gang switchbox.

 **NOTE:** DR display screens are dynamic, automatically updating when the available options change through preset activation, room combining, and so on. Therefore, the user always sees the options that are currently available.

DR1

A DR1 provides a single level control. A DR1 is used most commonly to control volume.

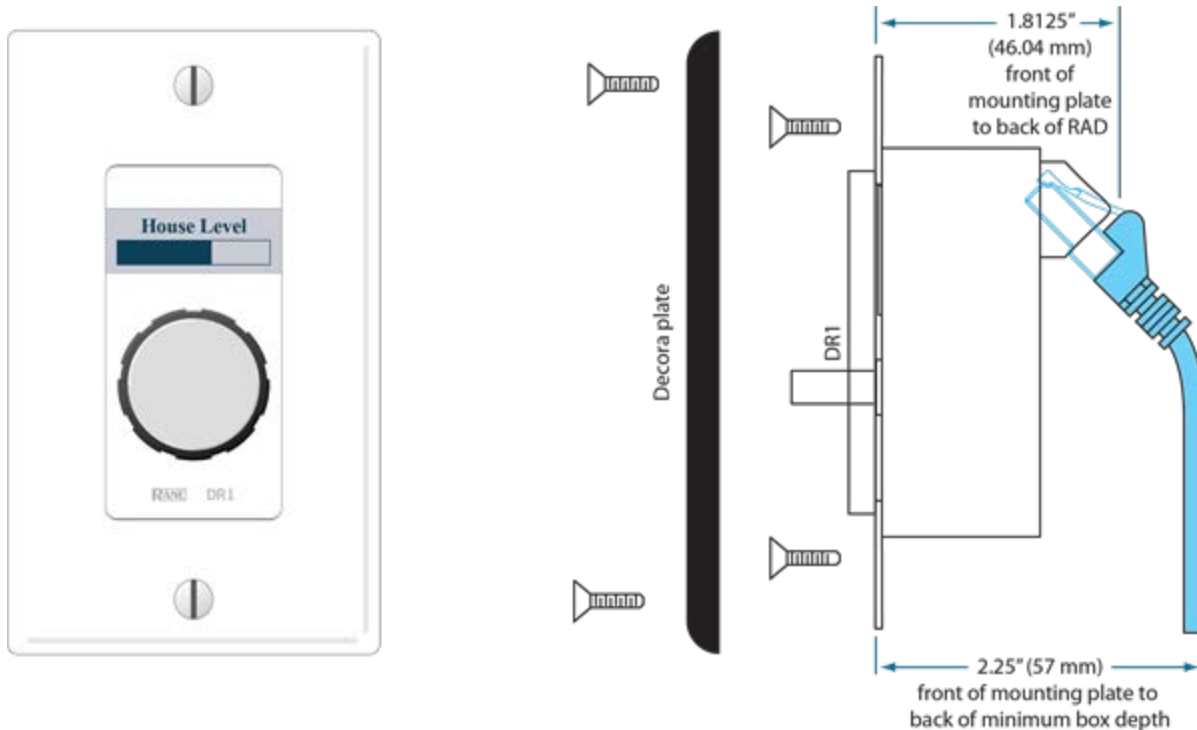


 **NOTE:** A DR1 requires a one-gang standard switchbox for installation into a wall.

CHAPTER 2: Introduction to the HAL System

DR2

A DR2 works well for selecting sources, presets, and room configurations. You can configure a DR2 to behave in one of two ways:

- **Single Selector:** The control acts as a selector switch that can select only one item on the display screen. For example, the display screen might show a list of background music channels. The user uses the push control to select which channel to activate. This behavior is similar to a radio button in a software application (as displayed in the image below).
- **List of Toggles/Commands:** The control acts as a switch for enabling or disabling each item on the display screen. For example, the display screen might list presets and the user uses the push control to enable or disable each preset in the list. This behavior is similar to a series of checkbox items in a software application.

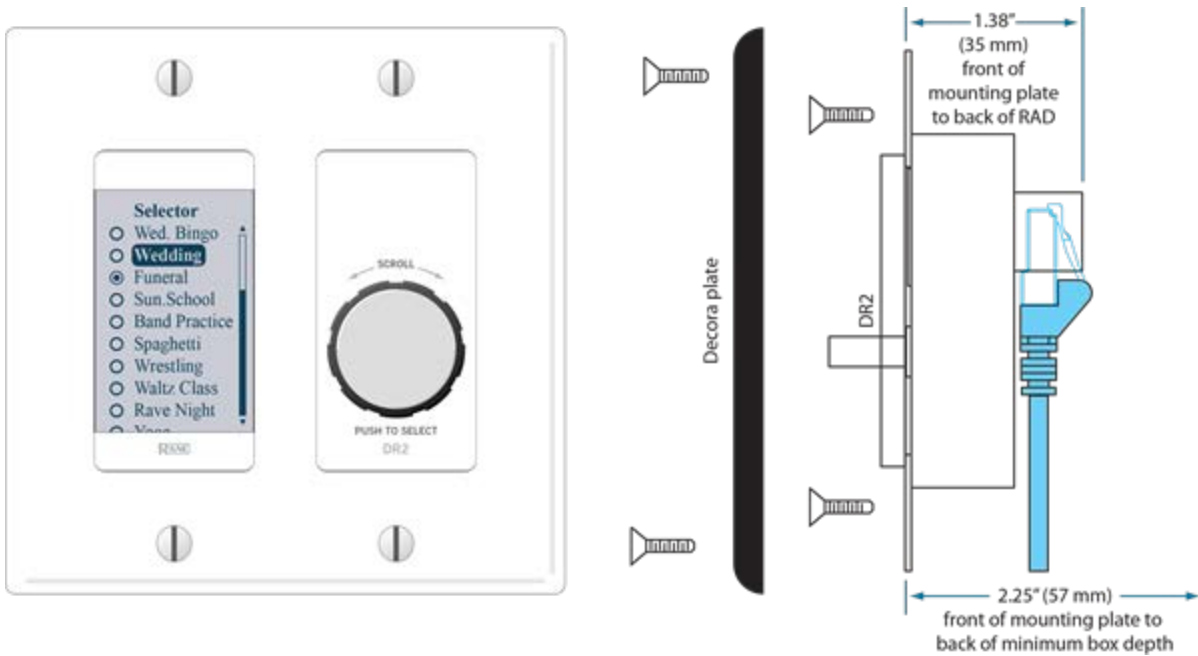


NOTE: A DR2 requires a two-gang standard switchbox for installation into a wall.

DR3

The DR3 is extremely flexible, as it can control both selection and volume. You can think of the DR3 as two different remotes—a selector and a level. One knob makes a selection, the other knob changes the volume.

You can configure a DR3 in one of three ways:

- **Single Level & Selector:** Control a level and selection from the same remote. For example, you could use a DR3 to select the background music source and control the volume in a room.
- **Single Level & List of Toggles/Commands:** This option allows you to control a single level and multiple other items. For example, you could use a DR3 to control the volume in a room as well as activate/deactivate one or more listed presets that change the audio and control parameters for the room.
- **List of Levels:** Choose from multiple levels. For example, you could use a DR3 to control the volume in multiple rooms or zones from a single DR located at a hostess station or in a manager's office.

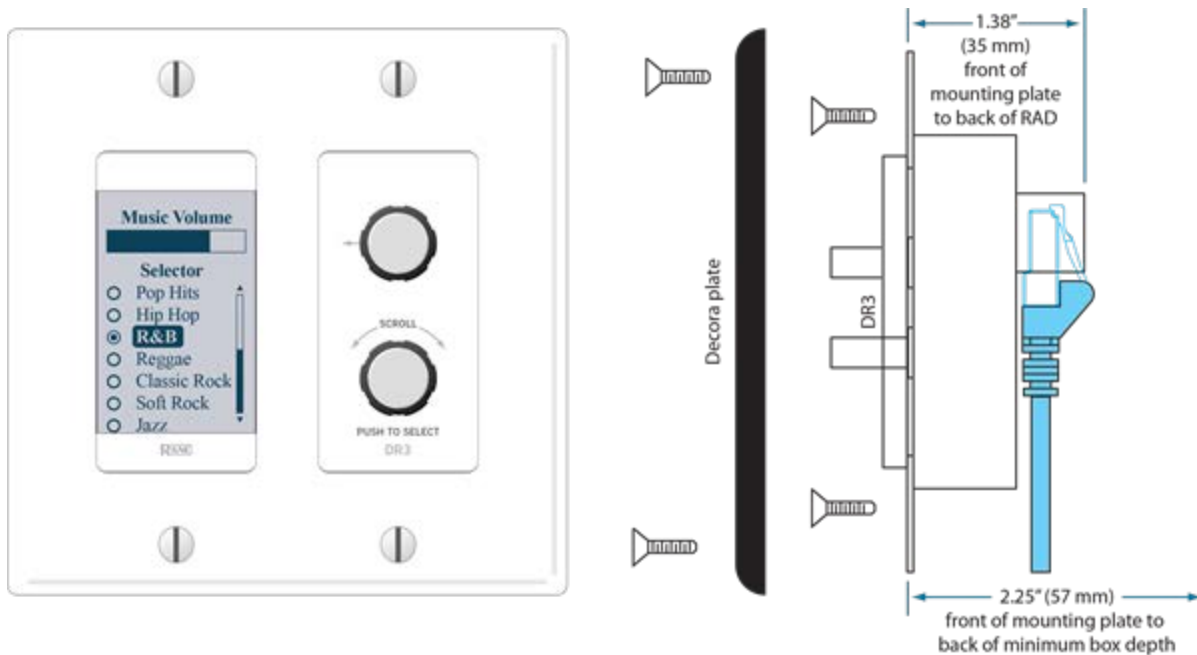


NOTE: A DR3 requires a two-gang standard switchbox for installation into a wall.

Expansion Units

A single HAL device contains a fixed number of inputs, outputs, RAD ports, and so on. So what do you do if your audio system requires more connections than are available on the HAL you purchased? Rane's crackerjack engineers anticipated and resolved this capacity issue by designing HAL to be expandable, allowing you to pick and choose between various Expansion Units to create a HAL System that fits your needs. For example, if you purchased a HAL1 but you need more than four RAD ports, you can attach the Expansion Unit known as the EXP1 to your HAL and suddenly have eight more RAD ports in your system. Remember that you can also connect DRs to RAD ports, so you could use the EXP1 to expand your DR connections as well.

Expansion Units connect to HAL via a **FireWire**¹ expansion network, which is similar to a USB cable and does not require IP addresses. The only limitation when using FireWire is its maximum cable length of 15 feet. Given that the purpose of Expansion Units is to expand the HAL host device capabilities within a single rack room, this FireWire distance limit should not pose a problem.

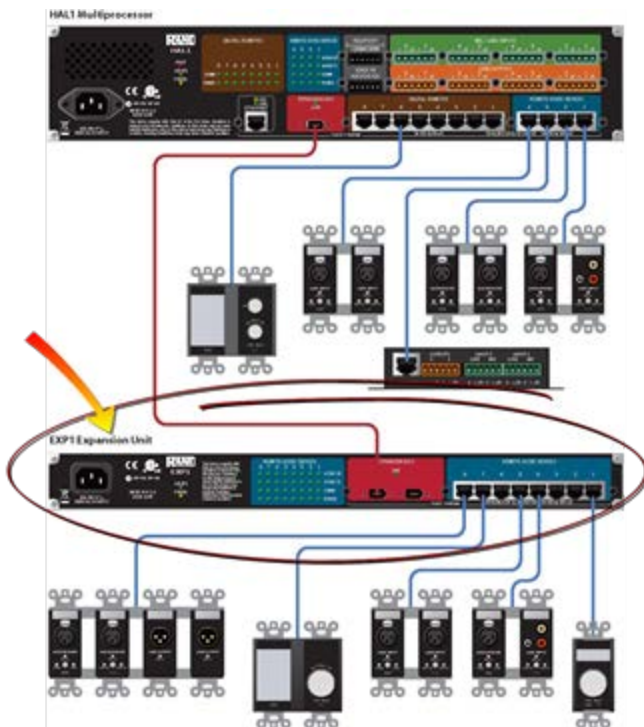

In addition to connecting the physical Expansion Unit hardware to your HAL device, you must also add the Expansion Unit to your HAL configuration.



NOTE: You can connect a maximum of four input Expansion Units to a HAL1 device.

¹A form of connectivity similar to USB, meant to connect peripherals such as MP3 Players and digital cameras to the computer. The HAL System uses FireWire to connect Expansion Units to the HAL device. FireWire operates around 30 times faster than a USB 1.1 connection. FireWire is technically known as IEEE-1394.

EXP1 Device

The EXP1, an Expansion Unit available for plug-in to the HAL expansion network, adds 8 RAD ports to your HAL System (providing a maximum of 16 additional input and 16 additional output channels). The EXP1 provides power to the RADs while HAL provides a conduit of control. As soon as the EXP1 is connected, its RAD ports become visible and available for configuration from within the Halogen software.

As with all the HAL Expansion Units, the EXP1 connects to HAL via **FireWire**¹, which has a cable length maximum of 15 feet. If you need more than the 4 RAD ports available on the HAL device, adding an EXP1 is the solution.

TIP: If the additional RAD ports are needed for only temporary channel increases (for example, increasing the number of microphones in a room for a one-time panel discussion), you may want to consider other options such as the AM1 or AM2.

Following are pictures of the rear and front panels of an EXP1, along with descriptions of the hardware features.

Rear Panel



1. The **Power IEC jack** connects to AC line voltage, 100-240 V, 50-60 Hz.
2. **Locate and Power LEDs**

The Locate LED, which flashes when toggled from within the Halogen software, helps identify a specific EXP1 — useful if you have more than one EXP1 installed. The Power LED lights when adequate power is applied to the unit.

3. **Remote Audio Device LEDs**

Provides status information about the health of the CAT 5 connection between each RAD and the EXP1. The numbers 1 through 8 correspond to the RAD ports 1 through 8 on the right side of the rear panel. For example, the LEDs for number 1 provide information about the RAD connected on port 1. Each LED corresponds with one twisted pair within the CAT 5 cable. If the twisted pair is functioning properly, the LED displays a solid green light.

- **Audio Rx LED** - lights solidly if the EXP1 receive pair is working properly.
- **Audio Tx LED** - lights solidly if the EXP1 transmit pair is working properly.
- **Comm LED** - lights solidly if the RAD's data communications pair is working properly.
- **Power LED** - lights solidly if EXP1 is supplying adequate power to the RAD port.

¹A form of connectivity similar to USB, meant to connect peripherals such as MP3 Players and digital cameras to the computer. The HAL System uses FireWire to connect Expansion Units to the HAL device. FireWire operates around 30 times faster than a USB 1.1 connection. FireWire is technically known as IEEE-1394.

CHAPTER 2: Introduction to the HAL System

NOTE: The Remote Audio Device status indicators on the front panel differ from those on the rear panel. The front panel LEDs provide information about signal activity on each audio channel. See the Front Panel description for more details.

4. Expansion Network Jacks and Link LED

Use one of these jacks to connect the EXP1 to the HAL, using a **FireWire**¹ cable. Use the other jack to connect the EXP1 to another Expansion Unit, thus forming a daisy chain.

The Link LED lights when communications is occurring between the EXP1 and HAL or between the EXP1 and another expansion unit in the daisy chain.

5. Remote Audio Device Ports

Use these ports to connect each RAD to the EXP1 via a standard CAT 5 cable. You must use a standard Ethernet patch cable for this connection. There are 8 RAD ports on an EXP1 device.

Front Panel



1. Remote Audio Devices LEDs

Provides information about the RAD audio channels. The numbers 1 through 8 at the top of the front panel correspond to the RAD ports 1 through 8 on the back of the EXP1. For example, the LEDs for number 1 provide information about the RAD connected on port 1.

Under each RAD number are LEDs for four audio channels, two input and two output. These represent the maximum number of channels a RAD is capable of transporting. However, not all RAD models use all four channels. For example, the RAD1 model provides two microphone inputs, so for that model, only the two columns of indicators labeled IN would be active.

These LEDs provide information on the following:

- **Overload LED** (red)—indicates that the channel is experiencing a signal overload
- **Signal LED** (green)—indicates the presence of an audio signal on this channel
- **Enabled LED** (yellow)—indicates the availability of the associated audio channel. If a RAD is connected on this port and all Enabled lights are off, this indicates a problem with the CAT 5 connection or with the RAD. If the Enabled LEDs are flashing, this indicates that the physical RAD model does not match the RAD model specified for this port in the HAL configuration.

¹A form of connectivity similar to USB, meant to connect peripherals such as MP3 Players and digital cameras to the computer. The HAL System uses FireWire to connect Expansion Units to the HAL device. FireWire operates around 30 times faster than a USB 1.1 connection. FireWire is technically known as IEEE-1394.

2. Expansion Network LED

If lit, indicates that the Expansion Unit is properly connected to the HAL. If all Expansion Units are properly connected to one another and to the HAL port yet this status LED remains dark, there is likely a problem with the connection.

3. Locate and Power LEDs


The Locate LED, which flashes when toggled from within the Halogen software, helps identify a specific EXP1 — useful if you have more than one EXP1 installed. The Power LED lights when adequate power is applied to the unit.

Introduction to the Halogen Software

The Halogen software application is your home for designing, configuring, and controlling your HAL audio system. Halogen's easy-to-use graphical user interface simplifies the design and configuration process so much that your only concern will be deciding how to use the extra time you suddenly have!

Basic Structure

The Halogen software is divided into three main sections: the Application Framework, the Hardware Workspace, and the Processing Workspace.

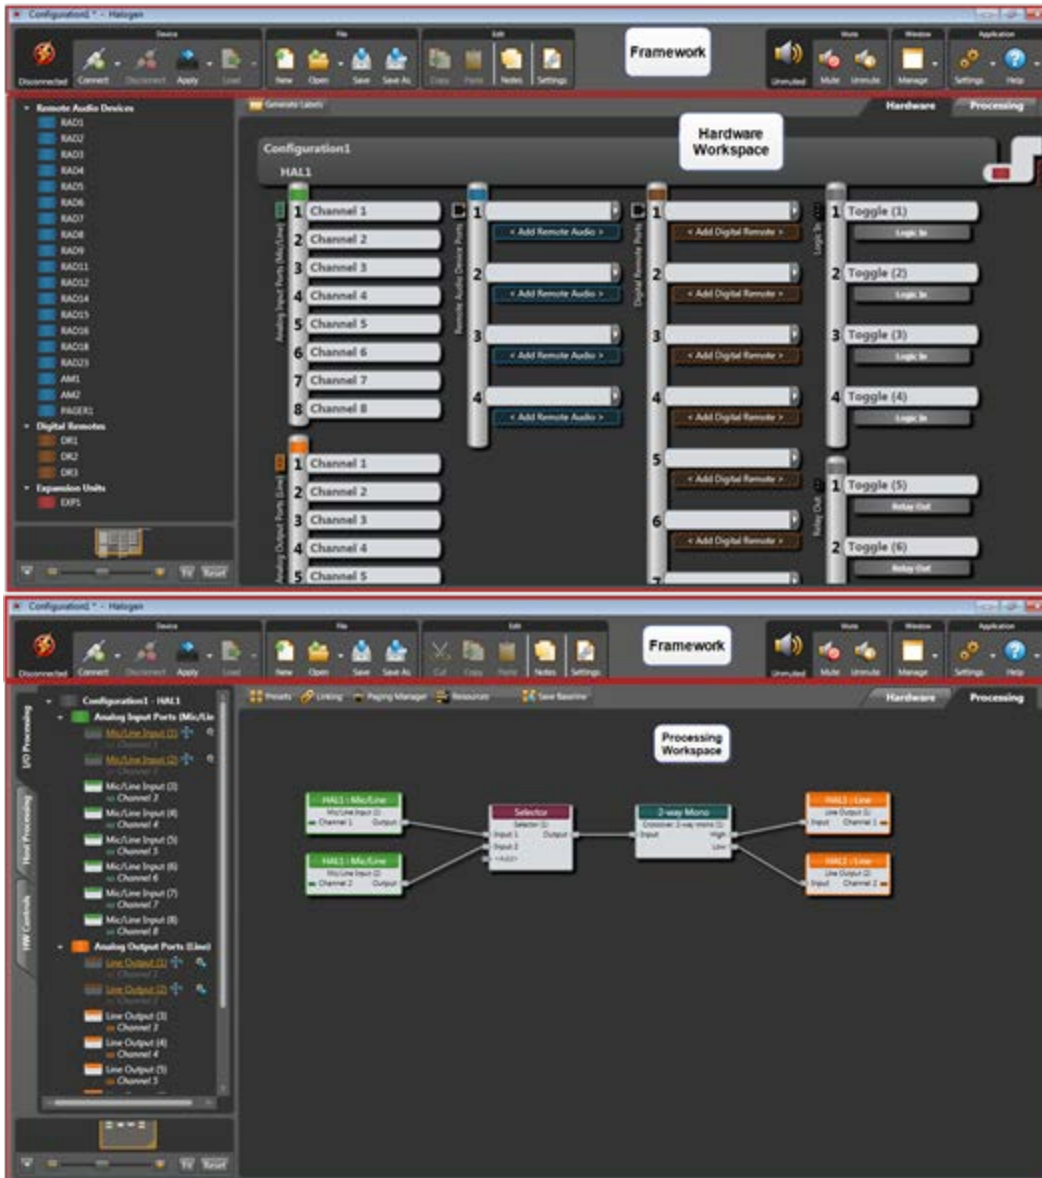

Following is an explanation of the purpose of each section:

- **Application Framework:** Manage global tasks such as discovering, connecting to, and applying configurations to HAL devices. Manage and configure the software application itself.
- **Hardware Workspace:** Specify, configure, and troubleshoot the physical hardware components of your audio system.
- **Processing Workspace:** Wire together the audio processing components of your system, adding and configuring processing blocks such as equalizers, matrix mixers, compressors, limiters, and so on. Manage and configure control links, presets, paging, and room combine layouts.

Notice that Halogen separates the hardware view from the processing view of your audio system. A key benefit of this separation is the flexibility it provides when configuring the system's various inputs and outputs. For example, suppose you have a RAD2 in your audio system. You drag the RAD2 device into the Hardware Workspace but then go to the Processing Workspace to configure the RAD2's line input and mic input. This separation of hardware from processing allows you to work with each input and output individually instead of having to work with the hardware device as a single entity. It also allows you to focus on hardware in one place and audio flow and processing in another place—simplifying your job as a result. Brilliant!

Workspace Layout

As you may have noticed in the images on the preceding page, the **Hardware Workspace** and the **Processing Workspace** have similar layouts. On the right is the actual workspace itself in which you create your system. Associated with each workspace is a palette of objects on the left and a toolbar specific to the workspace. To add an entity to your audio system, you drag one or more objects from the palette to the workspace.

- The Hardware Workspace is associated with one palette that contains (care to guess?) hardware devices that include RADs, DRs, and EXPs. To add one of these devices to your design, you drag it into the Hardware Map and drop it on the appropriate HAL port (appropriate ports are highlighted based on the device you are adding). When you add hardware to the Hardware Map, the controls, inputs, and outputs associated with that hardware are automatically added to the Processing Workspace I/O Processing and HW Controls palettes.
- The Processing Workspace is associated with three different palettes:
 1. Open the **I/O Processing** palette when you are ready to *wire together* all your inputs and outputs. Available in the palette are the inputs and outputs associated with the hardware you selected in the Hardware Workspace. You drag the inputs and outputs you want into the Processing Map and then wire them appropriately.
 2. Open the **Host Processing** palette when you are ready to configure your signal processing. This palette contains all the different processing blocks available within the HAL DSP engine.
 3. Open the **HW Controls** palette when you are ready to configure and manage the linking of controls on DRs to parameters in your audio system. This palette contains the control devices you selected in the Hardware Workspace.



TIP: A simple way to think of the Halogen workspaces is that you use the Hardware Workspace to create and connect all of your physical hardware, while you use the Processing Workspace to select, configure, and connect the processing blocks and controls.

CHAPTER 2: Introduction to the HAL System

You have several options for learning the specifics of the Halogen user interface:

- Use the context-sensitive help built into the application. Simply point your cursor to an area in the software, right-click, and then click **Help** in the menu that appears (or press the F1 key). The Help system opens, displaying a topic specific to that area of the user interface.
- For a more thorough understanding of the user interface, review the detailed user interface reference topics in the Halogen Help System. You can also access details on a specific dialog box by clicking the question mark located in its upper right corner.

HAL System Connectivity

In addition to understanding the details of the HAL System hardware and software components, it is important to also understand how HAL and Halogen communicate. Following is some important information to keep in mind when designing your system, especially if you will be handing it off to someone else for installation.

Required Ports

Halogen and HAL exchange information using the following ports and protocols:

Port	Protocol	Purpose
68	UDP	DHCP Client (see note below)
4992	TCP	Meter control messages
4993	TCP	Configuration messages
4994	UDP	Discovery broadcast messages
4994	TCP	RaneLink II ¹ communication messages
4995	TCP	Meter data



NOTE: Halogen and HAL might both use port 68 to communicate with a DHCP server. This port is not actually used for communication between Halogen and HAL.

¹A service needed by Halogen to establish a connection with HAL.

HAL devices send occasional UDP broadcast messages. RaneLink II listens constantly for these messages and, when it receives one, it does three things, if necessary:

- Sets up a temporary link-local IP address (in other words, the address is cleared when the computer reboots) on the appropriate network interface card (NIC).
- Adds an entry to the computer's network route table. RaneLink II maintains the list of HAL devices and it must be running for Halogen to communicate with a HAL, even if the HAL has been located by a manual search.
- Opens and maintains a TCP connection with HAL so that it can receive status updates.

Required Processes

The following processes are required for working with the HAL System and for establishing a connection between Halogen and HAL.

Process	Purpose	Location
Halogen.exe‡	Use to design your entire audio system and connect to your HAL device.	C:\Program Files\Rane Corporation\Halogen\Halogen.exe
hal1.pcops.exe‡	Simulates the behavior of a HAL when Halogen is not connected to a HAL. Allows for testing of such things as control links and presets, even when not connected to a HAL.	C:\Program Files\Rane Corporation\Halogen\hal1.pcops.exe
RaneLink.exe	A service needed by Halogen to establish a connection with HAL.	C:\Program Files\Rane Corporation\RaneLink\RaneLink.exe

‡If running 64-bit Vista or Windows 7, you can find Halogen.exe and hal1.pcops.exe in the Program Files (x86) directory.


Working with DHCP, Static IP Addresses, and Routers

Does your installation require the use of DHCP or static IP addresses? Never fear, it's as simple as can be. But there are a few things you need to know as well as a few issues that could arise:


- To configure a static IP or enable DHCP on a HAL, you should first connect to the HAL via its link-local address. In other words, it is best to configure these addresses prior to connecting the HAL to your network. To do so, install the Halogen software (see "Installing and Starting the Halogen Software" on page 85), connect your computer directly to the HAL device (see Task 3: Configuring HAL), start Halogen, connect to the HAL from within Halogen, and then open the HAL properties (by clicking the HAL device properties icon in its title bar in the Halogen Hardware Workspace—see the Halogen Help System for details), and then configure its IP addresses (or enable DHCP). Once the system is installed at the site, you (and all subsequent users) may

CHAPTER 2: Introduction to the HAL System

need to type in a static IP address to connect to the HAL, so **write this IP address somewhere!**

 **NOTE:** The subnet mask used for all HAL static IP addresses is CIDR 24 or 255.255.255.0.

- On a local network, Halogen always uses the link-local IP to connect to HAL. Behind a router, Halogen uses one of HAL's static IPs or a DHCP-assigned IP—provided the user knows it and types it into the Search field in the **Connect to Device** dialog box. Because link-local connectivity is automatic, the user should never need to search for a HAL by its link-local IP address.

 **NOTE:** If your HAL is located behind a router and Halogen is unable to find the HAL, check with your IT department to find out if the router has NAT (Network Address Translation) enabled. If not, enable it and try again.

- Although Halogen does not prevent you from adding a static IP that conflicts with a static IP on another machine on the network, it *will* reject the addition of a static IP that conflicts with an IP already configured on the HAL. If you attempt to add a conflicting IP address, Halogen displays a failure message.
- Similarly, enabling DHCP on a HAL that already has one or more static IPs configured can result in a static IP being deleted if that static IP is on the same subnet as the dynamic IP acquired. HAL deletes the conflicting static IP rather than reject the dynamic IP.

CHAPTER 3: Key Audio Design Features

This chapter contains detailed information about the HAL System's major audio design features. Included is conceptual background material to help you understand why each feature works as it does and how to best use the feature.

About the Distributed Program Bus

A common request for many audio systems is the delivery of background music or some other audio source to all (or many) zones. Following are a few examples:

- A large department store requires that the same background music play in all areas on all floors.
- A large conference center requires a variety of background music sources be made available to all of its zones.
- A multi-room sports bar/restaurant requires end user control in each area for choosing between background music or TV audio for that area.

Have you ever designed and implemented a requirement resembling these descriptions? If so, then you know how quickly these situations can become a nightmare of matrices and wiring—especially if the requirement is for multiple input channels to all zones. You wire it once, and then you wire it again and again.

The HAL System designers examined the common characteristics of this often cumbersome and difficult configuration and came up with a solution that is so simple, you'll quickly forget that mess of matrices! The solution? It is a special processing block called the **Distributed Program Bus**.

What is the Distributed Program Bus?


When a system requires that one or more of its audio sources be made available in all zones, you simply wire those audio sources as inputs to your Distributed Program Bus. Then, when you add Zone Processor blocks to your system, each block automatically provides a connection to the Distributed Program Bus. All of the routing is handled internally by the Distributed Program Bus. Simple as that! No kidding! You configure and wire the input sources common to all zones only once and they *magically* become available to every zone you create!



NOTE: To incorporate the Distributed Program Bus into a zone in your system, you must use Zone Processor blocks (or Room Processors if you are configuring a Room Combine situation) to define those output zones. The Distributed Program Bus is not intended to be manually wired to other blocks in your system, thus it has no output node. Instead, the Zone Processor block (and Room Processor blocks—used in a room combine system) provide an automatic behind-the-scenes connection to the Distributed Program Bus.

CHAPTER 3: Key Audio Design Features

The following image illustrates the relationship between the Distributed Program Bus and Zone Processor block:

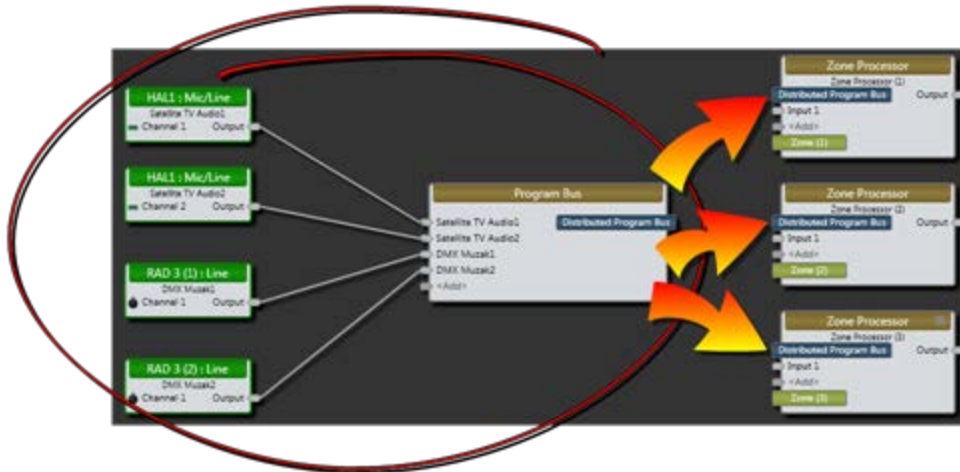

When should I use a Distributed Program Bus?

To determine if a Distributed Program Bus would be useful in your system, ask yourself this question: Does my system contain one or more audio inputs that are common to two or more of my output zones? If yes, then a Distributed Program Bus may be the right block for you!



TIP: Remember that, when using the Zone Processor block or Room Combine Processor block to define your zones, the Distributed Program Bus and all of its inputs are included automatically. You cannot specify which inputs to include or exclude. If you need only one of its inputs for a certain zone, you could select that input and avoid exposing the other input selections (in other words, do not provide end users with input selection control in that zone).



NOTE: Including a Distributed Program Bus does not eliminate the addition of local audio sources for a specific zone. See details on the facing page.

How do I create a Distributed Program Bus and then incorporate it into my system?

The process for creating the Distributed Program Bus is very simple. From the Host Processing palette in the Processing Workspace, you drag a Distributed Program Bus block into your Processing Map. You configure the inputs that will be common to all zones (zones defined by a Zone Processor or Room Processor block) and then connect them to the Distributed Program Bus. You provide custom names for each input. And you're done!



NOTE: An audio system can contain only one Distributed Program Bus.

To then incorporate those inputs into your zones, you drag Zone Processor blocks (from the Host Processing palette) into your Processing Map, connecting them to your system. Each Zone Processor block automatically includes a connection to the Distributed Program Bus. There is nothing more you need to do to connect its channels into your system.



NOTE: When working in a Room Combine situation, the Distributed Program Bus is automatically included in each Room Processor.

Can I perform pre- or post-processing on Distributed Program Bus audio sources?

You can perform pre-processing on the input to the Distributed Program Bus. You can perform post-processing as well, but not from the Distributed Program Bus itself. You configure post-processing from within the Zone Processor or other processing blocks placed after the Zone Processor block.

Can I customize which Distributed Program Bus channels are available in each zone?

No, any input going into the Distributed Program Bus will be available in all of your Zone Processor and/or Room Processor blocks. You cannot eliminate a specific channel for a specific zone or eliminate the Distributed Program Bus entirely for a specific zone. If you link remote control hardware (such as a DR) to the zone to give your end users control over the audio selection, all the Distributed Program Bus channels (as well as any local input you may have configured) will appear on the selector device.

For a specific zone, can I include local audio sources in addition to the Distributed Program Bus sources?

Yes, you can include both local audio sources as well as the Distributed Program Bus channels. You connect the local sources to the Aux inputs on the relevant Zone Processor or Room Processor block. For details, see *Creating a Zone Processor and Adding a Room Combine Processor in the Halogen Help System*.

How do I give my end users control over selection of Distributed Program Bus channels?

As with any other control in the HAL System, you use control linking to give your end users remote control over selection of Distributed Program Bus channels. You perform this control linking from within the properties dialog box of each Zone Processor or Room Processor block in your system. For details, see *Creating a Zone Processor and Room Processor Selector Block in the Halogen Help System*.

About Zone Processing

Working with output zones is nothing new. All audio systems have them. You've no doubt configured them countless times. But we can state with confidence that it's unlikely you've ever configured an output zone as quickly as you can in the HAL System. Read on to learn about another of the HAL System's many time-saving shortcuts—the Zone Processor block!

What is a HAL System Zone Processor?

The HAL System Zone Processor handles output zones. "Great!" you say. "But what exactly does *handle* mean?" To fully understand the power of this block, let's first review the typical things you would do when creating an output zone. You would:

- Select and wire all of the input audio for the zone. This input might include background music channels, microphone input, a jukebox, a CD player, and so on.
- Optionally configure the priority of each input so the system knows what to do when multiple inputs are sending a signal (for example, what to do with the background music when a customer pays for a song on the jukebox).
- Configure remote control over the audio selections so that end users can control what is being heard in the zone.
- Configure remote control over the level so that end users can adjust the volume in the zone.

CHAPTER 3: Key Audio Design Features

- Configure paging for this zone as well as the mixer/ducker controls, taking great care to configure your level controls in the right order to ensure that pages are audible.
- Configure emergency paging, making sure it ducks all other inputs.


With the exception of the last item on this list (configuring emergency paging), the HAL System Zone Processor streamlines all of these tasks and minimizes the hands-on configuration needed to get an output zone up and running. At its simplest, all you need to do is drop a Zone Processor block into your system, wire in the zone's local inputs, add optional post-processing, and connect to the appropriate output(s).

The Zone Processor automatically includes a connection to the Distributed Program Bus (which provides pre-configured inputs to the zone), a connection to the paging system (including ducking), level control for the zone, and source selection (although to provide remote control over the volume and selection, you need to link to a DR or other remote device).

Although the HAL System Zone Processor takes care of many tasks for you, there are typically a few things you'll need to think about and configure. See the next question for a detailed discussion of the Zone Processor's contents and a closer look at how the Zone Processor works.

What does the Zone Processor do and what processing blocks are contained within it?

Following is an image of a Zone Processor block:

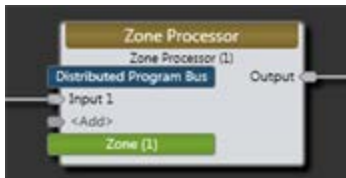

As you can see, it contains a blue box titled **Distributed Program Bus** and a green box titled **Zone**. It also contains **Input** node(s) and an **Output** node. Let's examine each of these items:

- The blue box indicates the automatic inclusion of connections to all inputs configured in the system's Distributed Program Bus. If no Distributed Program Bus has been configured, that's okay. It just means that there are no inputs from the Distributed Program Bus for the Zone Processor to include.
- The green box indicates the automatic inclusion of connections to the paging system. In other words, this zone automatically appears in the system's Paging Manager and is available for inclusion in a **Paging Scenario**¹. All of the connections to the paging system as well as proper ducking are handled for you by the Zone Processor.
- The Input nodes in a Zone Processor are for connecting audio sources local to the zone (as opposed to inputs from the Distributed Program Bus). Although only one Input node appears by default when you first drag the block into your Processing Map, you can add more.
- The block contains one Output node which you can connect to post-processing blocks, an Emergency Page block, and ultimately to the appropriate final output block.

¹One or more paging zones treated as a group for paging purposes. Paging Scenarios are defined and named by the designer, who then also assigns specific Scenarios to specific Paging Stations. End users always page into Scenarios.

Contained inside the Zone Processor are additional processing blocks that you can configure. To access these blocks, double-click the Zone Processor block. Following is an image of a Zone Processor's contents:



As you can see, the Zone Processor contains three connected processing blocks: a **Priority Selector** block, a **Level** block, and a **Paging Zone** block. Each of these blocks serves an important function for the zone, as detailed below. The order in which the blocks are connected is also important, with the placement of the Level block before the Paging Zone ensuring that a page is audible regardless of the volume setting for the zone's output. Automatically including these blocks and connecting them appropriately is yet another Zone Processor feature that simplifies your design process!

Priority Selector block

The purpose of this block, which includes all of the zone's audio input (including the Distributed Program Bus channels), is to designate which of the zone's input(s) have higher priority when audio is coming in from more than one of the input sources. For example, a large 50's theme restaurant plays background music from that era, but its bar also contains a jukebox from which customers can pay to hear a specific song. When a customer drops their quarter in the jukebox, one would expect the background music to stop and the customer's song selection to play. The Priority Selector block makes it possible to automate this behavior. By giving the jukebox input a higher priority than the background music, the HAL System, when it detects a signal from the jukebox input source, knows to give that input source precedence and make it the active selection. When the jukebox stops sending a signal, HAL returns to the background music input source.

In addition to input priority settings, the zone's Priority Selector block contains the zone's input selection control which you can link to a DR (or other remote hardware device)—to give your end users control over the zone's audio selection. You can also use this block to configure a number of detector settings for the input: Threshold, Low Cut, High Cut, Hold, and Ramp Back. To access the block's properties, simply double-click it or hover over its title bar and click the properties icon that appears in the upper right corner.

The Zone Processor Selector block is virtually identical to the standalone Priority Selector block available in the Selectors category in the Host Processing palette. The only difference is the inclusion of the Distributed Program Bus inputs in the Zone Processor Priority Selector block.

Level block

Use this block to configure the Level properties for the zone's inputs and to create a link to a remote device for end user control of the zone's input volume. To access the block's properties, simply double-click it or hover over its title bar and click the properties icon that appears in the upper right corner.

CHAPTER 3: Key Audio Design Features

The Level block in the Zone Processor is identical to the generic HAL System Level block. It is included here as a convenience and to guarantee its proper placement in the zone's audio route. Designers sometimes mistakenly place the zone's input level control to the right of the paging output which results in inaudible pages when the input's volume is turned way down.

Paging Zone block

As previously mentioned, using a Zone Processor gives you an automatic connection between that zone and HAL's paging system. The inclusion of this Paging Zone block provides that connection. Use this block to configure page ducking and adjust the page gain setting. To access the block's properties, simply double-click it or hover over its title bar and click the properties icon that appears in the upper right corner.

As with the other internal Zone Processor blocks, this block is identical to the generic Paging Zone block.

When should I include a Zone Processor block in my audio design and how many do I need?

When to use a Zone Processor is a simple decision. Do you plan to use a Distributed Program Bus in your system? Are you also setting up paging? If the answer is yes to either of these questions, you should likely use one or more Zone Processor blocks! Although you could build your own zone processing functionality using individual processing blocks, why would you want to? Using a Zone Processor block saves you time and gives you automatic connections to your Distributed Program Bus and paging system. In fact, if you plan to use the Distributed Program Bus, the only way to actually include its channels in your system is via the Zone Processor (unless you're creating a room combine—see note below).



NOTE: If you're designing a system for a room combine, you'll be using the Room Combine Processor block, which also includes an automatic connection to the Distributed Program Bus and the HAL paging system. In this situation, you would use the Room Processors (included in the Room Combine Processor block) instead of Zone Processors. See "About Room Combine" on page 58 for details.

So how many Zone Processors do you need? As you are probably very experienced with configuring zone processing functionality, you know what constitutes a zone. But just in case you're wondering, here's a little refresher.

A single Zone Processor can cover any area that has the following features:

- Requires the same audio input
- Requires the same relative volume for its inputs
- Is a single paging zone

As soon as an area's audio or paging needs differ from another area, that's your signal that you need a new Zone Processor.

How do I create and configure a Zone Processor?

Have we mentioned that the creation of a Zone Processor is an easy process?! To add a Zone Processor, you simply drag it from the Host Processing palette (the block is located in the **Paging/Room Combine** category) and drop it into your Processing Map. For the detailed procedure, see Creating a Zone Processor in the Halogen Help System.

About Paging

A key characteristic of the HAL System is its simplification of common audio design tasks—and the HAL paging system is a prime example. If you have designed paging systems before, you have likely encountered the matrix mixer mess that can occur when configuring multiple paging stations, paging zones, background music channels, routers, duckers, and so on. Well, you can say goodbye to that mess and hello to a much simpler approach.

The HAL paging system saves you time by handling many aspects of your paging system for you—behind the scenes. In fact, when you use a Pager RAD for your paging station(s) in conjunction with HAL zone processing or paging zone blocks, you never have to wire an audio channel to get your paging system to work! You also never have to worry about configuring your page processing blocks in the wrong order, setting ducking priorities, or using presets to control zone configurations. Instead, what you do *worry about* (although you needn't worry as it is so easy to use!) and what you need to configure is which paging stations can page into which zones. Hard to believe? Read on to learn how this powerful paging system works.

What are the components of a HAL paging system and how do they work together?

The HAL paging system accomplishes the same task as other paging systems—delivering to the appropriate locations paging input that ducks existing input. The beauty of the HAL paging system, however, is its efficiency and simplicity.

The key ingredients in a HAL paging system are:

One or more *Paging Stations* that provide input into the paging system

A paging station provides an audio input to your paging system. You have the option of using a RAD pager (for example, a PAGER1) or another type of pager (such as a paging microphone controlled by a switch closure). The RAD pager connects to HAL via a RAD port while the switch closure connects via a Logic In port.

Choosing the best type of paging station to use depends on what you're trying to accomplish. If your system has multiple zones and multiple paging stations that could potentially conflict with one another, we recommend the RAD pager. In addition to its paging microphone and a push-to-talk button, it includes a display of the available Paging Scenarios (defined below) as well as LED status lights to inform the end user if a specific Scenario is available to page into. For more details, see PAGER1 Device. If your system needs only a simple page into a single Scenario, a page microphone controlled by a switch closure may be all you need.

One or more *Paging Zones* that define discrete areas available for receiving a page

A paging zone serves as a destination for paging input. There are three ways to include a paging zone in your HAL audio system: add a **Zone Processor** block, a **Room Combine Processor** block, or a standalone **Paging Zone** block.

When you add a Zone Processor block (or Room Combine Processor) to your system, it automatically includes a Paging Zone block. In essence, the HAL System automatically wires the zone to the paging system. You don't need to wire anything! In addition, the Zone Processor (or each Room Processor) places its Paging Zone block in the correct location—to the right of the Level block that controls the zone input volume. Placing it in this location separates the page volume control from the input volume control so

CHAPTER 3: Key Audio Design Features

that a page will always be audible regardless of the zone's current volume level. If you plan to use Zone Processor blocks (or Room Processor blocks if configuring a room combine) to define your system's audio zones, your job with regard to configuring paging couldn't be easier. There are a few things in the Paging Zone block that you can configure, although the parameters' default values are typically appropriate: **Ducker Depth** (default is 12 dB), **Ramp Back** (default is 3 seconds), and **Page Gain** (default is 0 dB). You should also customize the name of the paging zone to help you identify it when working within the Paging Manager.

If you are not using Zone Processor (or Room Processor) blocks in your system, or if you need to configure a simple paging zone that does not need the other functionality included with a Zone Processor (automatic connection to the Distributed Program Bus, multiple prioritized inputs), you can add a standalone Paging Zone block to your Processing Map. It is identical to the Paging Zone block included in a Zone Processor.

One or more *Paging Scenarios* that represent a combination of one or more zones. In the HAL paging system, you always page into Scenarios.

Paging stations and paging zones are probably familiar concepts, but you may not have worked with the concept of a paging scenario before—so now is a good time to pay attention! The first rule to absorb is that you **ALWAYS** page into Scenarios. "You mean I don't page into zones?" No, you don't. Your paging zones are the building blocks for creating Paging Scenarios. A Scenario can contain one zone, all of your zones, or a subset of zones. In other words, Scenarios allow you to slice and dice your paging zones in a variety of ways—without ever touching a matrix mixer!

Let's say you're designing a system for a large restaurant with many different paging needs. The hostess paging station, for example, may need to page into the lobby only, into the entire restaurant, into the kitchen only, outside the front door, and more. Using Paging Scenarios, you can easily configure a variety of zone combinations. In addition, Scenarios maintain their paging status (Ready, Busy, Caution), which is visible on the RAD pager hardware. You can also assign a priority to Scenarios, which tells the system what to do when paging conflicts occur. And, finally, you can assign a unique identifier to each Scenario which makes it possible to create identical Scenarios that can be accessed by different paging stations at different priorities.

The *Paging Manager* which is a unique dialog box that serves as the central location for configuring the routing and priority of your pages

The Paging Manager (there is only one in a HAL System) is where you work with all the building blocks to create the paging system you want. In essence, it is in the Paging Manager that you route your paging input to your paging output. To accomplish this routing, you perform two key tasks (within the Paging Manager):

1. Create Paging Scenarios, which involves specifying the Paging Zones that belong in each Scenario and optionally prioritizing your Scenarios. Although typically unnecessary, you can also customize each Scenario's unique identifier.
2. Designate which Scenarios a Paging Station can page into.

The Paging Manager user interface contains three sections: a list of available paging stations, a list of available paging zones, and the list of configured paging Scenarios. To configure a Scenario, you add it and then, with it highlighted, select the checkbox next to each paging zone to include in the Scenario. The process is similar for designating which Scenarios a paging station can page into. You simply highlight the paging station

and then select the checkbox next to each Scenario that should be available from the paging station. For details on this process and others, see Paging Tasks in the Halogen Help System.

So how do you populate the Paging Manager with the necessary building blocks (paging stations and paging zones)? The HAL System takes care of this for you. Whenever you add a paging station or a paging zone to your Processing Map (via a Zone Processor, Room Processor, PAGER1, or standalone paging station or paging zone block), that paging station or zone is automatically added to the Paging Manager.

To review the process of creating a HAL paging system from start to finish, see the work flow question on page 42.

How do I work with Scenario priorities and numbers? What is their purpose and how should I use them?

Each Scenario you create has a numeric **Priority** associated with it, the purpose of which is to control what happens when a paging conflict occurs. For example, suppose we have Scenario A that contains Zones 1 and 2, and Scenario B that contains Zones 2 and 3. The two Scenarios have one zone in common—Zone 2. Let's also assume we have two paging stations—Paging Station X and Paging Station Y. While Paging Station X is paging into Scenario A, Paging Station Y tries to page into Scenario B. What should happen? Should Paging Station Y's page go through to Zone 3 but not to Zone 2 (because Paging Station X is currently paging into Zone 2)? Or should the page go through to both zones, overriding the current page into Zone 2? Or should Paging Station Y be prevented from sending the page because of the conflict? Answering these questions is the purpose of the Scenario **Priority**.

The Role of a Scenario Priority

Let's revisit the above example, but this time with priorities in place. Let's say Scenario A has a priority of 10 and Scenario B has a priority of 20 (lower priority than Scenario A). When someone using Paging Station Y decides to page into Scenario B, the status indicators on the paging station indicate that the Scenario is Busy (meaning at least one of the Scenario's zones is currently receiving a page). Paging Station Y is not allowed to page into Scenario B because Scenario B has a lower priority than Scenario A. If, however, Scenario B had a higher priority than Scenario A, Paging Station Y would show a status of Caution for Scenario B, indicating a page is possible but will override the page currently being heard in one or more of the zones in Scenario B. (For more details on the status indicators associated with HAL paging stations, see the next question.)

By default, Halogen assigns each new Scenario a priority value of 50. If you do nothing, all Scenarios will have the same priority, meaning no Scenario can override another Scenario. If, however, you have Scenarios that should take precedence over others, configure their priorities accordingly—the lower the number, the higher the priority. For example, you might configure a Scenario specifically for the manager of the organization and give it the highest priority.

The Role of a Scenario Number

Here's another possible dilemma. What if you have defined a Scenario that will be available on more than one paging station, yet you want the manager to have priority into that Scenario. This is where the Scenario **Number** comes into play. Each Scenario is assigned a unique number, which is configurable. You can use this number to help you identify identical Scenarios. For example, you might create Scenario A intended for the receptionist. You give this Scenario a priority of

CHAPTER 3: Key Audio Design Features

10 and a number identifier of 104. You create an identical Scenario A intended for the manager. You give this Scenario a priority of 1 and a number identifier of 101. Although these two Scenarios have the same name and contain the same zones, you can use the number to help you distinguish one from the other.



NOTE: You do not have to worry about numeric identifiers and priorities when it comes to emergency paging. The HAL System includes a special block designed specifically for emergency paging situations. See below for details.

What does each paging status (Busy, Caution, Ready) mean?

The Pager1 RAD paging station displays LED status indicators labeled Busy, Caution, and Ready. When the end user selects a Scenario to page into, the status indicator informs the user if the page is possible. The following table includes definitions of each state:

Paging State	Definition	Result
Busy	At least one of the paging zones in the selected Scenario is currently being paged into through a Scenario of equal or higher priority.	The user cannot page into the Scenario until the status indicator changes to Ready (or Caution).
Caution	At least one of the paging zones in the selected Scenario is currently being paged into through a Scenario with a lower priority.	The user can page into the Scenario because of its higher priority. However, the page will override another page that is currently occurring. If the user proceeds with the page, the other page will stop and its paging station will display a status of Busy Wait ...
Ready	All the zones in the selected Scenario are available for receiving a page.	The user can page into the Scenario.

For more details on how the Pager1 works, see "Pager1 RAD" on page 16.


How do I configure emergency paging within the HAL paging system?

The HAL System includes a special **Emergency Paging Zone** block that includes features specific to emergency paging. Its **Ducker Depth**, **Hold Time**, and **Ramp Back** parameter values (which are not configurable) are set specifically for emergency paging situations. Ducker Depth is set at its maximum depth, meaning an emergency page essentially mutes all other audio in the zone. Hold Time, which designates the time to wait after the page ends before beginning the ramp back process, is also set at its maximum. Ramp Back, the time period in which the original zone audio fades back in, is set at its maximum. Another important feature is the block's ducking of all other incoming audio, including other pages that may be occurring. Emergency paging always has the highest priority and overrides all other pages.

Although most of this block's key parameters are not configurable (to ensure that the Emergency Paging Zone block performs correctly in an emergency situation), you can configure and link to the block's **Gain** parameter. You may, for example, want to set the emergency page level relatively

high to improve intelligibility (to be heard over other alarms that may be sounding, and so on). And, if you want end users to have control over the emergency page volume, you would create a control link between a DR or other remote hardware and the block's **Gain** parameter.

If you want an emergency page to be heard in a specific zone, you must include an **Emergency Paging Zone** block and it should be placed downstream from the relevant **Zone Processor**, **Paging Zone**, or **Room Processor**, preferably directly before the zone's output block, as illustrated here:

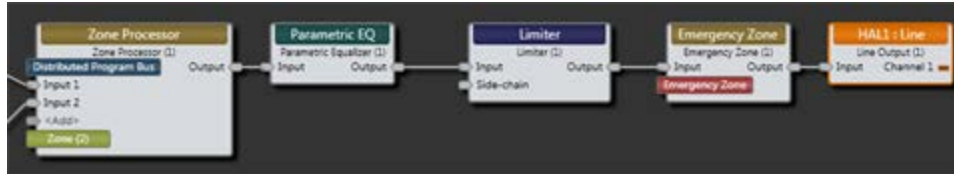

By placing it in this position, you do not have to worry about muting the zone's audio as the Emergency Paging Zone block handles this automatically. This position also ensures that other blocks will not interfere with the emergency block and end user level controls for the zone will have no impact on the volume of the emergency page.

BEST PRACTICE: For a specific zone, place its **Emergency Paging Zone** block directly before the zone's output block. If necessary to protect your equipment, however, you may want to include **Compressor** or **Limiter** blocks between the **Emergency Paging Zone** and the output blocks.

Emergency Paging and the Paging Manager

The Paging Manager handles the listing of emergency paging zones differently than other types of zones. Each Zone Processor, Paging Zone, and Room Processor included in your system has its own listing in the Paging Manager's **Zones** section. All Emergency Paging Zone blocks, however, are combined into a single listing named *Emergency*. The assumption is that when an emergency page occurs, the page should go to all zones containing an Emergency Paging Zone block. By consolidating all of them into one listing, the configuration of an Emergency Scenario is a simple task. If each emergency zone were listed separately, not only would it be tedious to create your Emergency Scenario, there would also be the risk of accidentally excluding one or more emergency zones from the Scenario.

WARNING! If you need a Scenario for paging into all zones, do not use the Emergency page zone for this purpose. The HAL paging system is designed so that all paging stations *play nicely* with one another, respectfully notifying a paging station if a Scenario is available to page into. If you include the Emergency zone in a Scenario intended for ordinary pages to all zones, a page into that Scenario will always duck all audio and, thus, *step on* any other page that may be occurring.

For procedural details on creating emergency paging, see *Configuring for Emergency Paging* in the Halogen Help System.

What is the recommended work flow for configuring paging within my HAL audio system?

The following procedure outlines the high level tasks involved in setting up your HAL paging system. For more details on each of the tasks, see the Halogen Help System.

CHAPTER 3: Key Audio Design Features

1. Plan the paging system. What audio and/or paging zones are needed in the system? Where will paging stations be located? What are the paging needs for each station (i.e. which areas/zones will it need to page into)?
2. Add and configure the paging zones in your system.
3. Add Emergency Paging Zone blocks to all of your zones (unless you are using a third-party emergency paging system).
4. Add one or more paging stations to the system.
5. Open the Paging Manager. (In the Processing Workspace toolbar, click **Paging Manager**.)
6. Configure the appropriate Scenarios for the system.
7. For each paging station, select which Scenarios it can page into.
8. Test the paging system.



NOTE: Although this workflow is recommended, you can go about the configuration of your paging system in other ways as well. What is required, however, before you can configure any paging is the creation of the key building blocks: at least one zone and one paging station. It's easier to create and prioritize the Scenarios if you have all of your zones configured first, although you can edit your Scenarios (adding or removing zones) as you go.

What are some best practices to follow or issues to consider when configuring and working with the HAL paging system?



BEST PRACTICE: For a specific zone, place its **Emergency Paging Zone** block directly before the zone's output block. If necessary to protect your equipment, however, you may want to include **Compressor** or **Limiter** blocks between the **Emergency Paging Zone** and the output blocks.



BEST PRACTICE: It is best to have a single Scenario devoted to emergency paging. Do not include any zones other than the Emergency zone in your Emergency Scenario.



WARNING! If you need a Scenario for paging into all zones, do not use the Emergency page zone for this purpose. The HAL paging system is designed so that all paging stations *play nicely* with one another, respectfully notifying a paging station if a Scenario is available to page into. If you include the Emergency zone in a Scenario intended for ordinary pages to all zones, a page into that Scenario will always duck all audio and, thus, *step on* any other page that may be occurring.



TIP: If possible, create all of your Paging Zones before creating your Scenarios. You can add and delete Zones from Scenarios at any time, but it is easier to create a comprehensive paging system if all of your Zones are available in the Paging Manager when you begin creation of your Scenarios. You may also want to create all of your Paging Stations before creating Scenarios, as thinking in terms of a Paging Station can help you define what your Scenarios should be.

About Control Links

This section contains the background information you'll need for working effectively with HAL System control links. What you need to know, however, depends on what you're trying to do:

- Are you creating links that connect only one control to another, with each control participating in only one link? You'll find everything you need in *Basics of Control Linking*. Reviewing the *Best Practices* section is also a good idea, but you can skip *Advanced Topics*.
- Are you creating links that connect three or more controls? You should review *Basics of Control Linking*, *Advanced Topics*, and *Best Practices* (in other words, read everything!).

Basics of Control Linking

What is a control link and why would I want one?

We'll start with a question for *you*. What good is your brilliantly-designed audio system if it doesn't provide end users with any control? Of course, the answer depends entirely on the situation. But, in most cases, users need control over such things as volume, music selection, preset activation, and more. And they don't want to have to go into the Halogen software to obtain this control. You don't want them in the software either! So how, in a HAL System, do you give users control out in the locations where it's needed?

The answer? Control links!

Control linking allows you to tie two or more system controls together so that they work in tandem. Let's say you want to allow end users to adjust volume in a specific location. One way to accomplish this is to install a DR1 in that location and, in Halogen, link the level control for that DR1 to the Gain property of the appropriate Level processing block in your design. This link causes these two controls to track one another. Change the volume on the DR1 and the Gain in the Level processing block changes. Change the Gain in the Level block (from within the software) and the DR1 changes.

There are countless situations for using control links. Volume control is probably the simplest and most common scenario. But HAL and Halogen are ready and able to accommodate much more complex linking needs. Read on to learn more.



NOTE FOR DRAG NET USERS: Control links in a HAL System serve the same purpose as Groups in DragNet.

What controls can I link together?

A control link connects (or links) two or more system controls to one another. So, in essence, you could include any system control in a control link, right? Well, no. Because the primary purpose of control linking is to expose controls to end users, only those controls that could be useful to an end user are actually *linkable* within Halogen. These include such things as level controls, selector controls, and so on. For details on the various control types, see below.



NOTE: You cannot link different *types* of controls to one another. For example, you cannot link a level control to a selector control.

How do I know if a control is linkable?

If a control is linkable, it displays a link icon, as shown below:



What types of control links are there?

The HAL System includes four types of control links (Level, Selector, Toggle, and Command). All controls participating in a control link must be the same type. The four control types are described below:

Level controls

Level controls, which are generally associated with volume, have a continuous series of states that are represented by a slider. The slider typically represents a relative position within a defined range (for example, a percentage value between a configurable minimum and maximum gain value). Several HAL processing blocks contain level controls that you can include in a level control link. The most commonly used are the Level processing block and the RAD and analog input and output blocks. The Level controls on these blocks are typically connected to DR Level controls (found in the **HW Controls** palette). Following is an image of a Level control (that has been linked) as well as a Level control example:




Level Control Example: You want to provide users with remote volume control of a podium microphone at the front of a room. Let's assume you're using a RAD2 for your microphone input and a DR1 for the remote control hardware. Within Halogen, you link the Gain control within the RAD2 block to the Level control within the DR1. You install the DR1 in the appropriate location in the room, and the end user is able to use the DR1 to control the volume of the microphone.

Selector controls

Selector controls do just what the name implies. They allow the end user to select an item from a list. Uses for a Selector control might include selecting a

music channel, a preset, a room combination, and so on. You would typically link a Selector control to a DR capable of displaying a list (for example, a DR2 and a DR3).

HAL processing blocks that contain linkable Selector controls are DR blocks (only for DRs that are capable of displaying a list, such as a DR2 and DR3) and Selector blocks (Selector, Selector with Priority, Router).

 **NOTE:** A Selector control allows the user to select only one option in the displayed list. In other words, a Selector behaves like a software radio button.

Following is an image of a Selector control (that has been linked) as well as a Selector control example:




Selector Control Example: Let's say you want to allow end users to select a background music channel from a list of background music channels. You choose a DR2 for your digital remote device. Within the Halogen Hardware Workspace, you add the DR2 to your system and configure it to behave as a **Single Selector**. You then move to the Processing Workspace (and we'll assume you already have most of your design in place) and link together the Selector control in the DR2 block with the Selector control in the appropriate Selector block in your design. You install the DR2 in the desired location, and, because the DR2 is linked to a Selector block, the DR2's LCD screen displays the Selector block channels. The end user is then able to use the DR2 to select one of the channels.

Toggle controls

Toggle controls allow you to switch between two states — on or off. A common usage of a Toggle control is to mute/unmute audio. Another common usage is to activate/deactivate a preset.



 **NOTE:** Toggle controls behave like software checkboxes (unlike Selector controls which behave like radio buttons). In other words, if multiple Toggle items are displayed on the remote device, the user can select or deselect one or more of them.

Toggle Control Example: You want to give your end users the ability to mute or unmute the audio in a specific room. You choose a DR2 for this purpose and configure it (in the Halogen Hardware Workspace) to represent a **List of Toggles/Commands**. In the Halogen Processing Workspace, you link together the DR2's Toggle control with the appropriate Mute Toggle control

CHAPTER 3: Key Audio Design Features

in your audio design. The end user can then use this DR2 to mute and unmute the audio to which it is linked.

Command controls

A Command control has no state. It simply allows you to initiate an action. Unlike a Toggle, you cannot *undo* a Command. The most common usage of Command controls is to assert a preset.

Command Control Example: Suppose you have configured several presets containing different audio configurations for the same room. You want to give the end user the ability to assert the appropriate preset depending on the current audio needs of the room. A list of Command controls works well in this situation. You choose a DR2 for the hardware control and, in the Halogen Hardware Workspace, configure the DR2 to represent a **List of Toggles/Commands**. You then select **Command** as the control type (from the dropdown list) and configure the display names for the items in the list — in this case, the different presets. In the Halogen Processing Workspace, you link each DR2 Command control to the Command control of the relevant preset. When the end user selects the preset on the DR2 and pushes the DR2 knob, the selected preset is asserted.

What are the components of a control link?

All control links (with the exception of Command Links) include the following components (see bottom of page for definitions):

- **Participants**¹
- **Control Link Activation State**²
- **Link Master**^{3‡} (You can find more information on page 53.)
- **Control Link Value**^{4‡}
- The **Control Link**⁵ itself
- **Control Link Priority**⁶ (You can find more information on page 52.)

‡A Command Link has no value to maintain, therefore it does not contain a Link Master or a Control Link Value.

¹The set of controls participating in a control link. A single control can participate in multiple links but can only be active in one link at a time (determined by link priority).

²A user-configurable state that dictates the enabled state of a link. When a link is not Active, it is disabled.

³The control link participant that dictates the values of the other link participants when the link becomes active. Pertains to Level, Toggle, and Selector control links only. Command control links do not have a Link Master.

⁴The value maintained by a control link and shared by all participants in the link. For example, a Level link maintains a Level value, a Selector link maintains a specific selection, and a Toggle link maintains the toggle state (on or off). A Command link has no value.

⁵A link between two or more system controls that causes the controls to track one another. The control link contains the link participants, activation state, current value, Link Master designation, and priority.

⁶Determines what to do when a control is a participant in more than one active control link. The control is only active in the highest priority active link.

Are control links always on?

You can choose whether or not to turn a control link *on*. In other words, you can configure a control link's state by activating or deactivating the link. When you activate the link, the linked controls track one another. When you deactivate the link the linked controls do not track one another.

Let's say you plan to use a DR1 in the lobby of a restaurant to control the volume of the music playing in the dining room. Sometimes the music plays in the lobby as well and, in those instances, you want the DR1 to control the volume in both the dining room and the lobby. You might create two control links for this DR1, with one linking the DR1 level control with the level control for the dining room only, and the other linking the DR1 level control with both the dining room and lobby level controls. You would then activate the control link you want at a given time.

So how do you activate a link? When you create a control link, you configure its state by selecting or deselecting its **Active** checkbox. For details on the actual procedure, see *Activating/Deactivating a Control Link*.

That's all fine and good, you say. But how do I then change that state at a later time? Surely I don't have to go into the software every time I want to activate or deactivate a control link! Of course not. This is where presets come in. See the next question (and answer) for details.

Can presets alter a control link?

You've created a control link and now you want to activate it in certain situations and deactivate it in other situations. You could, of course go into the software and manually select or deselect the **Active** checkbox any time you want to change the state of a control link. But this would be a bit cumbersome, don't you think? In most cases, you will use presets to alter a control link's state.



NOTE: A preset can change the state of a control link. But a preset *cannot* change the participants in a control link.

Let's look at the example from the previous question to help illustrate this point. You have a single DR1 that you want to control volume in the restaurant dining room only at certain times, but other times control volume in both the dining room and lobby. You would need to create two control links, as follows:

- *Dining Room Only* control link has two participants—the DR1 level control and the Dining Room level control
- *Dining Room/Lobby* control link has three participants—the DR1 level control, the Dining Room level control, and the Lobby level control

The Dining Room only preset would activate the Dining Room only control link and deactivate the Dining Room/Lobby control link. The Dining Room/Lobby preset would do the opposite—activate the Dining Room/Lobby control link and deactivate the Dining Room control link.


You may be tempted to try creating a single control link for the DR1/Dining Room volume control and then using a preset to add or remove the Lobby level control when needed. But this is not possible. Presets can alter only the state of a control link. Presets cannot alter the control link participant list.

How do I create a control link?



BEST PRACTICE: Before creating a control link, you should add all the control participants

CHAPTER 3: Key Audio Design Features

 to the Halogen Hardware Map and Processing Map. In other words, you cannot create a link between two controls until you've made those controls available. For example, if you plan to create a link that includes a DR2 Selector control, you should first add the DR2 to your Hardware Map and configure it to behave as a Selector.

When linking only two controls, the simplest method for creating the link is to drag the link icon from one of the controls and drop it onto the link icon of the other control. If linking more than two controls, there are other issues to consider (see Advanced Topics on page 51 for details).

The originating control is known as the *source* and the other control is the *target*:




When you drop the link icon from the first control onto the link icon of the second control, a dialog box appears containing up to three possible actions:

- If the two controls are not participants in any other control links, the dialog box contains one option: **Create New Link**:




- If the source control is a participant in any other control links, the dialog box contains an additional option: **Remove From Link**:

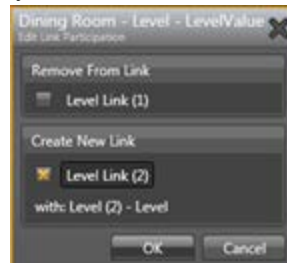

In other words, if your intention is to move the source control from one link to another, you can do so by selecting both **Remove From Link** and **Create New Link**, or you can simply create the new link, leaving the existing link intact.

- If the target control is a participant in any other control links, the dialog box contains an additional option: **Add To Link**:

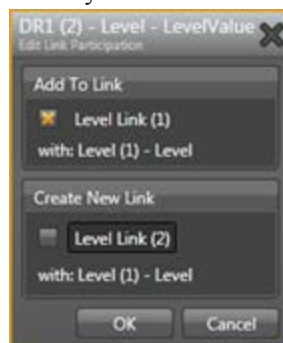


In other words, you can select **Add To Link** to add the source control to a link in which the target control already participates. You can select **Create New Link** to create a brand new control link between the source and target. Or you can do both.

See Creating a Control Link in the Halogen Help System for more details.

Is there a way to view all the links in which a specific control is currently participating?

Yes. Click the purple link icon associated with the control. If the control is a participant in only one link, that link's properties dialog box displays. If the control is a participant in multiple links, the control's **Link References** dialog box opens, displaying all the links in which the control is participating:

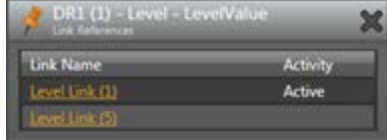

The link in which the control is currently active

is also noted.

NOTE: The links in the **Links References** dialog box are sorted in priority order.

Do I have to wait until my hardware is installed before testing the control links?

No! A tremendous benefit of HAL System control linking is the ability to test a link as soon as you create it. No hardware is needed. See Testing a Control Link in the Halogen Help System for details.

Can I disable a specific hardware remote without having to deactivate all the links that contain it?

Yes, you can enable and disable individual DR devices. And you can use control linking to accomplish this! Every control on a DR has an **Enable** checkbox property, as shown below:



Notice that the Enable checkbox control is also linkable. We know this because of the link icon that appears next to the checkbox label. This checkbox is a Toggle control. It can have two states: Enabled (checkbox is selected) and Disabled (checkbox is deselected). You could also have a pre-set that enables or disables a specific DR control.

Can I include a switch (connected to a HAL Logic In port) in a control link? If yes, are there any differences in behavior when using a switch versus a DR in a control link?

Yes, you can connect switches to your HAL's Logic In ports and then include these controls in a control link. And yes, there are some differences in behavior when including a Logic In controls in a control link. Halogen can read the state of a switch connected to a Logic In port but cannot change the switch's state. In other words, from Halogen's perspective, a switch is a read-only

CHAPTER 3: Key Audio Design Features

control—a characteristic that has ramifications for the control links in which it participates:

- When a link containing a read-only control is active, only the read-only control is enabled in the Halogen software. For example, if you link a two-position switch (connected via a Logic In port) to a Mute control in your Halogen Processing Map, you will no longer be able to toggle the Mute checkbox. It will be disabled in the software. Why is this? Because Halogen cannot send information to a read-only control, it has no way of keeping the controls in sync should one of the other controls in the link be changed within the software. When a read-only control participates in a link, only that control can be changed.
- You cannot include more than one read-only remote device in a single control link. Why? Because read-only devices cannot track one another.
- A read-only control link participant must be the control link's Link Master. In other words, because no other participants in the link can update the read-only control, the read-only control must be the participant in charge of updating the other participants. See below for details on the role of the Link Master.
- You can configure each HAL Logic In port as a two position selector, allowing you to link the switch connected to the Logic In port to other two position selectors in your system. It is important to note that, in addition to being a read-only control, the Logic In selector can only have two selections. Therefore, once linked, you will no longer be able to increase the number of selections in other participants. For example, once a Logic In selector is linked with a two channel source selector DSP control, it is not possible to add channels to the Selector DSP Block.

Advanced Topics

What issues should I consider when adding more than two controls in a single control link?

When including three or more controls in a single control link, the direction in which you drag and drop new participants is important, as outlined below:

- If using the **All Links** dialog box to create the control link, simply drag and drop the new participant onto the link in the **All Links** dialog box.

OR

- If using the control-to-control drag and drop method, when adding the third or greater control, always drop the new control onto a control already participating in the link. In other words, the **control link target**¹ should be an existing participant. You can think of the control link like a party. If a person decides to join the party, the person goes to the party, the party doesn't come to the person! If you were to drop one of the link's existing participants onto a new control, Halogen would offer only two options: removing the source control from its existing links, and/or creating a new control link between the source and the target. If, however, you dropped the new participant onto the existing participant, Halogen would offer the option of adding the new participant to the existing control link.

¹The control onto which you will drop one or more other controls to create a control link. Think of the control link target as a bucket into which you place all the other controls participating in the link.



TIP: When creating a link that contains more than two controls, think of one control as the *bucket* into which you'll drop all the other controls. Of course, in keeping with the previous analogy of people coming to a party, you can think of this one control as the party host!

What happens if a single item participates in more than one control link?

There is no restriction on the number of control links in which a control can participate. However, the control cannot be active in more than one link at a time. For example, a single DR1 Level control could participate in two different control links (Link1 and Link2). But if both Link1 and Link2 are active, the DR1 Level control can be active in only one of the links. How does HAL decide which link governs the DR1 Level control in this situation? The answer? The **control link priority**¹.

Halogen places each created control link in a prioritized list. If a control participates in multiple active control links, that control is active only in the control link with the highest priority. Staying with the above example, let's say that Link1 is higher in the priority list than Link2. Link2 is currently active, but then someone activates Link1. What happens to that DR1 Level control? It becomes active in Link1 and is no longer active in Link2.

Even though Priority is set at the link level, it actually governs the individual participants in a link, not the entire link. In the example we just discussed, let's assume there are several other controls participating in Link2 — but not participating in Link1. These other controls remain active in Link2 when Link1 is activated. The following diagram helps illustrate this concept:



So how do you set the priority for all your control links? As previously mentioned, Halogen automatically places a new control link at the top of the priority list. This list is visible in the All Links dialog box. To adjust the priority, you simply move control links up and down in the list.



NOTE: There is a separate prioritized list for each type of control link.

¹Determines what to do when a control is a participant in more than one active control link. The control is only active in the highest priority active link.

CHAPTER 3: Key Audio Design Features

What is a link master and why do I care?


Every control link contains a Link Master, which is the control link participant that dictates the values of the other link participants at the moment the control link is activated. Depending on the complexity of your system, it's possible you'll never need to think about or concern yourself with a Link Master. In certain situations, however, it's important that you understand its role and why the Link Master is important. For example, if you plan to be deactivating and re-activating control links, you definitely need to understand the Link Master!

To fully explain the Link Master function, let's begin with a scenario. Suppose that you have two Level controls in your system (LevelA and LevelB). In most situations, these two Level controls work independently, but in a few cases they must track one another. Therefore, you create a control link (Link1) that links LevelA and LevelB. Link1 remains inactive most of the time. While inactive, LevelA and LevelB operate independently and are, therefore, typically set to a different value. So what happens when you activate Link1? Should LevelA snap to LevelB's value? Should LevelB snap to LevelA's value? This is where the Link Master comes into play. In any control link, one participant is designated as the Link Master. You can accept the default designation or configure it yourself. In this scenario, if LevelA is the Link Master, LevelB and the control link value take on the value of LevelA. If LevelB is the Link Master, Level A and the control link value take on the value of LevelB. As long as Link1 remains active, LevelA and LevelB track the control link value. The following images help illustrate this example:

Inactive Link:




After activating the link:

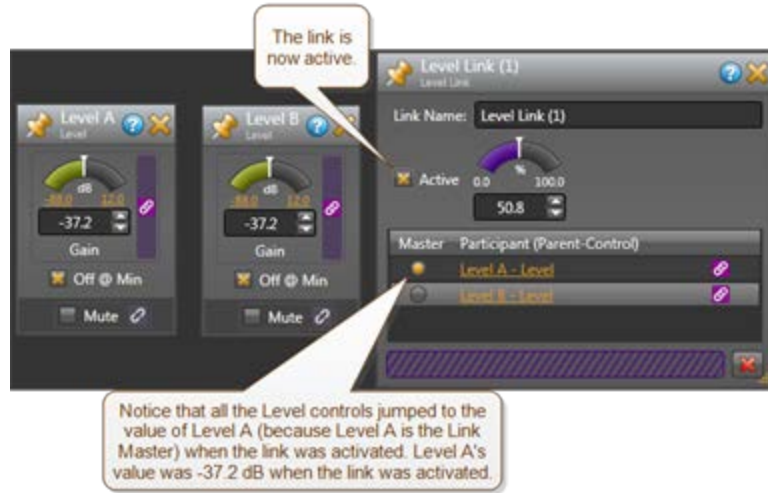

What happens if LevelB participates in another control link (Link2) which is higher priority than Link1? If Link2 is activated, its control link value and all its participants take on the value of the Link2 Link Master (which could be LevelB). LevelB will not be an active participant in Link1 until Link2 is deactivated. When Link2 is deactivated, assuming Link1 is still active, LevelB will become an active participant in Link1. As LevelB rejoins Link1, it takes on Link1's control link value, even if it is Link Master in Link1. The Link Master is only used to initialize the value of a link when the link is activated. From that point forward (until the link is deactivated), all participants track the control link value.

The following images from the Halogen software help illustrate the above scenario. The first image shows the different controls when both Link1 and Link 2 area active. The second image shows what happens when Link 2 is deactivated.

Both Link 1 and Link 2 are active:

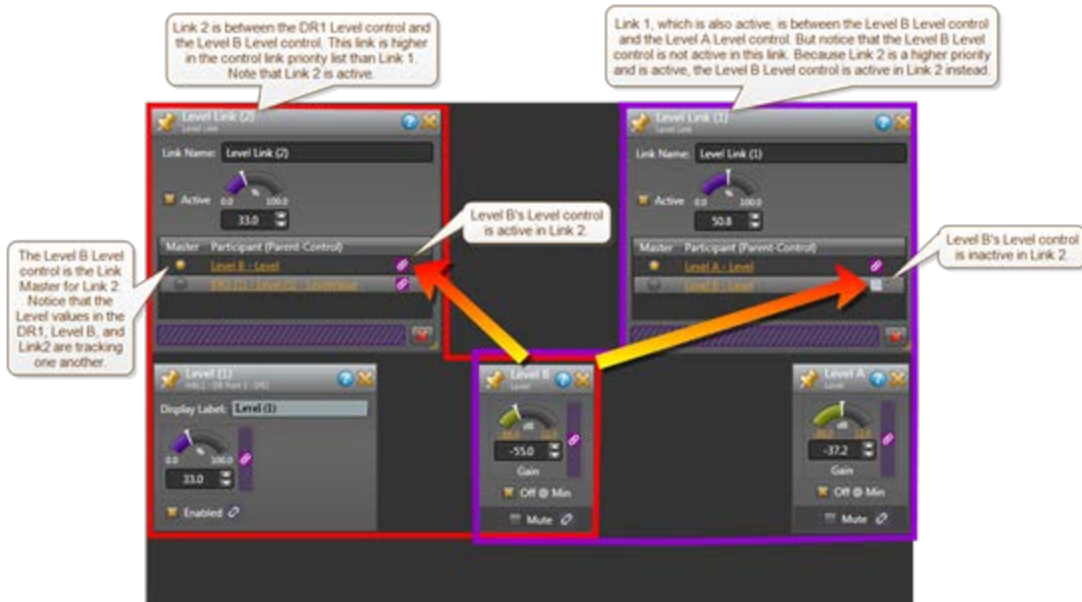

CHAPTER 3: Key Audio Design Features

Link 1 is active, Link 2 is inactive:



At this point, you may be wondering several things:

How is the Link Master selected?

Halogen automatically selects the Link Master when you initially create the control link.

- If you are creating your control link by dropping one control onto another, your initial **control link target**¹ becomes the Link Master. For example, if you dropped a DR1 Level control onto the **Gain** parameter in a Level block, the Level block becomes the Link Master as it is the target.
- If you are creating your control link by dropping controls into a control link in the **All Links** dialog box, the first control dropped on the control link becomes the Link Master.
- If you include a read-only control in your control link, the read-only control always becomes the Link Master and disables your ability to change its designation as the Link Master. This is done because the HAL System cannot alter a read-only device.
- Dynamic selectors (selectors that automatically change their number of selections to match the link in which they are participating) cannot be Link Master because they have no value when they are not linked. Therefore, a newly-activated link cannot use a dynamic selector's value for initialization.


Does it matter which participant is the Link Master?

It is recommended that the audio value in your Processing Map be the Link Master—as opposed to your hardware controls. To ensure that this occurs, consider always dragging hardware controls from the palette onto the Processing Map instead of moving from the Processing Map to the palette. Think in terms of what it is that you want to control.

Do I have any control over which participant is the Link Master?

¹The control onto which you will drop one or more other controls to create a control link. Think of the control link target as a bucket into which you place all the other controls participating in the link.

Yes, you can select which participant you want to be the Link Master. To change the Link Master designation for a control link, you access the control link's properties dialog box and select the Link Master you want by selecting the relevant participant's **Master** radio button:

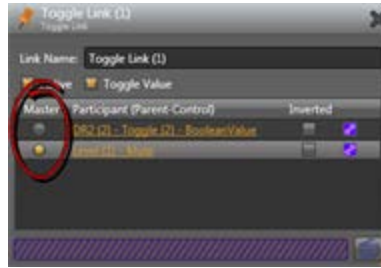

There are a few situations, however, in which your choices for Link Master are limited or are made for you:

- If one of the participants is a read-only control, the read-only control is always the Link Master because its value cannot be changed by software. In this situation, the ability to change the Link Master is disabled.
- Dynamic selectors (such as the Selector on DR2s and DR3s) cannot be Link Master because they have no value when they are not active in a control link. The ability to configure dynamic selectors as the Link Master is disabled.

In summary, there are three ways in which a control link's Link Master designation is created:

1. You create the control link.
2. You manually change the Link Master designation for the control link.
3. You add a read-only control to the control link.



NOTE: Because Command control links do not maintain a state or hold a value, these control links do not need a Link Master.

Best Practices

What are some best practices to follow when creating and working with HAL System control links?



BEST PRACTICE: Always drop any new control link participant onto a control already participating in the link. In other words, the **control link target**¹ should always be an existing participant. Think in terms of what it is that you want to control.




BEST PRACTICE: Name your links as you create them to help with identification later. For example, if you want to see the links in which a control is participating, the list of links will only make sense if each one is aptly named.





BEST PRACTICE: A handy way to view the links in which a control is a participant is the Link References dialog box. From this dialog box, you can also access details about each displayed link. To access a control's Link References dialog box, simply click the control's


¹The control onto which you will drop one or more other controls to create a control link. Think of the control link target as a bucket into which you place all the other controls participating in the link.


CHAPTER 3: Key Audio Design Features


 link icon. Note that if the control is a participant in only one link, there is no Link References dialog box, but only the single Link dialog box.

 **BEST PRACTICE:** Always test your link after creating it by changing one of the controls and checking if the other control(s) tracks the change.

 **BEST PRACTICE:** If you need a Selector control, use a DR as your remote hardware. DRs are preferable to Logic In selectors as DRs are dynamic, can have more than two selections, include automatic naming of the selections, provide end users with a nice user interface, and fit into a gang box with no custom fabrication.

 **BEST PRACTICE:** To activate and deactivate control links, you must use presets.

 **BEST PRACTICE:** If you want the DR selection names to match the channel names on the linked processing block, create the block's channel name(s) before linking it to the DR.

 **BEST PRACTICE:** In most situations, it is best to drag your hardware controls onto the Processing Map—instead of dragging controls from the Processing Map onto the **HW Controls** palette. If configured in this manner, your Processing Map audio control will be the Link Master (unless you include a read-only hardware device).

About Room Combine

Designing the audio for a room combine environment is easy, right? It's no big deal that the system must adapt to changing physical spaces. In fact, it's probably one of your favorite types of systems to design. Or is it?

Our guess is that you're shaking your head no while memories of merged automixer nightmares, complex matrices, myriad presets, and math and control-intensive designs swirl through your mind. But what if we told you that designing a HAL System room combine is SIMPLE? Would you believe us? What if we went on to say that not only is it simple, but, unlike the matrix mixer *blobs* to which you've grown accustomed, it actually LOOKS like an audio system? Hard to believe? And to further bend your mind, what if we told you that a HAL System room combine design uses a fraction of the DSP resources required by existing solutions? Too good to be true? Not at all. Read on to learn more and to get started with the *simple* task of designing your room combine system.

What is the purpose of the Room Combine Processor block?


The HAL System Room Combine Processor is designed to simplify the task of configuring the audio system for a set of rooms containing movable walls that can be opened and closed in a variety of ways (configurations that are common in hotels, churches, schools, and conference centers). In these situations, audio inputs and outputs as well as remote controls for volume and source selection must change based on the configuration of the rooms. Most existing room combine solutions force designers to think about all the possible *rooms* all at once while working with all the parameters in a giant matrix mixer. The experience is akin to juggling five flaming swords while simultaneously riding a unicycle and reciting a Shakespeare sonnet!

The HAL System Room Combine Processor simplifies the design of a room combine audio system by allowing you to think about *one room* at a time, without worrying about specific walls or previous configurations for other room combinations. In other words, you can get off that unicycle and drop those flaming swords! But the HAL System room combine is so simple, you can probably keep reciting the sonnet!

Let's say your room combine consists of three *base* rooms:



And let's say that movable walls allow you to create the following *rooms*:

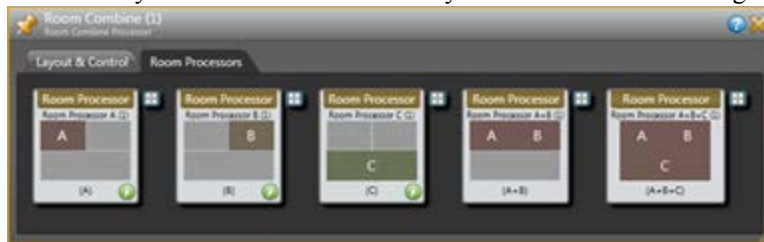

As you can see, there are five possible *rooms*. Using the Room Combine Processor, you lay out the room configuration and designate which walls are movable. You then choose one of the rooms and configure its inputs, outputs, and controls. You then choose another room, and configure its inputs, outputs, and controls. You continue this process until you've configured all five rooms. This simple procedure combined with the streamlining provided by the Distributed Program Bus

CHAPTER 3: Key Audio Design Features

and the HAL Paging System make it possible for you to complete a room combine design with a minimum amount of wiring and time ... without creating a single preset!

How is this possible? The Room Combine Processor includes the underlying flexibility in DSP behavior required for rerouting and processing audio when the room configuration changes. In addition, the block includes the logic required to understand the different wall configurations and how to reconfigure the audio based on the current configuration. The complexities you've experienced in the past are still there, but they're handled backstage, leaving you applauding in the audience at the flawless performance of this amazing block!


What are the basics of working with this block?

The information below provides the basic concepts and high level work flow you need to understand before working with the Room Combine Processor block. Subsequent sections of this topic dig a bit deeper into specific aspects of working with the block.

The first step? Understand the Room Combine Processor block's key building blocks ... and how to create them.

To understand how the Room Combine Processor works, you must first understand its key building blocks: base rooms, the base room arrangement, and movable walls.

Base Rooms

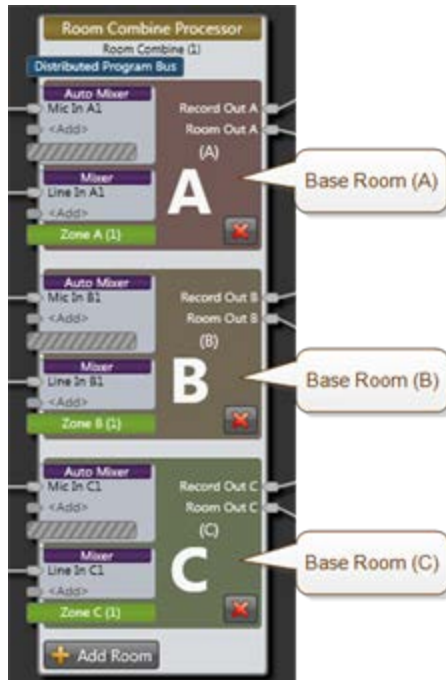


To the left is an image of a Room Combine Processor block (hover over it to enlarge it). The block displays the base rooms in your room combine (as well as providing connection points for wiring inputs and outputs, but we'll get to that in a moment). A base room is a room that cannot be subdivided. It can be combined with other base rooms to form new rooms, but it cannot be broken down any further. While this example contains three base rooms (Room A, Room B, and Room C), you can add up to three more base rooms by clicking the **Add Room** button at the bottom of the block.

Base Room Configuration

The block now knows how many base rooms there are, but to make sense of them, it also needs to know how the rooms are arranged. You provide this information in the block's properties dialog box (on the **Layout & Control** tab) by simply dragging the rooms into a drawing area and arranging them appropriately. In our example, the rooms are arranged as

shown here:

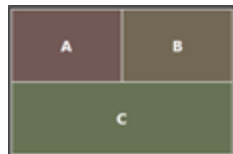


Designation of Movable Walls


The final key piece of information needed by the Room Combine Processor block is which walls are movable. Knowing both the arrangement of the rooms and which walls can be opened and closed, the block is able to determine how many actual room configurations are possible. To provide this last key piece of information, you simply drag a movable indicator (in the block's properties dialog box) onto the room arrangement and use it to specify which walls are movable. The result looks like this:




The dark blue lines indicate that the wall between Rooms A and B is movable and the long wall separating Room C from Rooms A and B is movable. Using this information, the block calculates that there are three possible room combinations (A|B|C, A+B|C, and A+B+C), producing a total of five rooms that need to be configured (as shown here from the **Room Processors** tab):

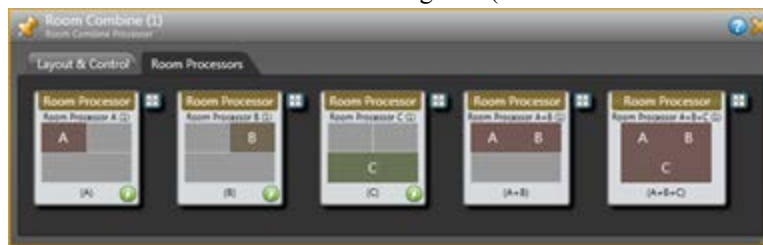

Note also, in the room arrangement graphic, that each movable wall has a checkbox and a control associated with it:

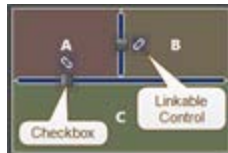


Selecting a checkbox (manually or via a linked remote control) tells the HAL System that the associated wall is open. The system then activates the room configuration that results from the opening of the wall. On the **Room Processors** tab, a green lightning bolt indicator tells you which rooms are currently active:

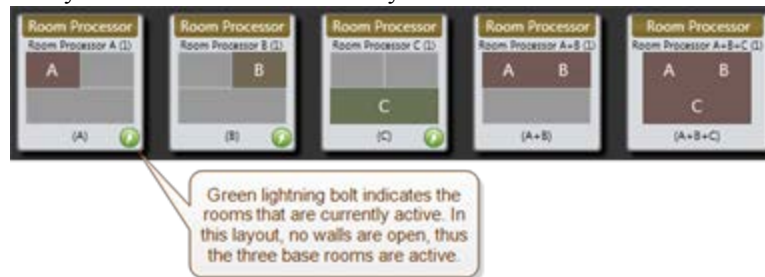

Next? Designate the inputs and outputs for each of your base rooms.

In reality, you would probably wire in your inputs and outputs before arranging your base rooms and specifying which walls are movable—the process described above. But we wanted to be sure you understood those key concepts before moving further into the room combine process. So we'll back up a bit and return to the original Room Combine Processor block—the place where you specify how many base rooms you have. On the following page is its picture again, with its key components clearly marked.

CHAPTER 3: Key Audio Design Features

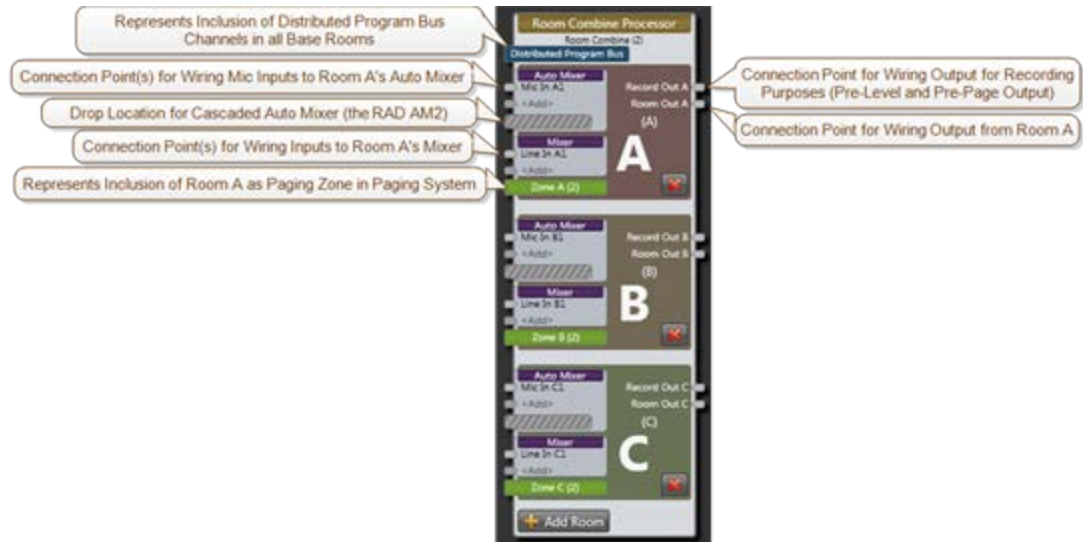

As you can see, each base room includes an Auto Mixer and a Mixer. You wire microphone input(s) to the Auto Mixer and can also add one or more cascaded Auto Mixers (namely, the AM2 RAD). You wire all other local inputs to the Mixer. You can add more inputs to both the Auto Mixer and the Mixer by wiring to or clicking its <Add> node. Each base room also includes all the Distributed Program Bus channels (if any have been configured)—as noted by the blue **Distributed Program Bus** rectangle at the top of the block. In addition, each base room is automatically included as a paging zone in the HAL paging system and automatically shows up in the Paging Manager—as noted by the green **Zone** rectangle in each room. On the output side, each base room has two outputs: **Record Out** and **Room Out**. Just as it says, Record Out is intended for routing output for recording purposes. The Record Out node sends pre-level and pre-page output to its destination—thus avoiding volume changes or page interruptions from being recorded. The Record Out is also useful as an overflow output into zones that have their own paging zone and volume control. The Room Out is the output you want reinforced in the room.

The beautiful thing (or ONE of the beautiful things!) about this Room Combine Processor block is that you don't have to think about any other room combinations when setting up the inputs and outputs to a base room. You can simply focus on that room only.


Then—configure each *room*.

Now that you've wired your inputs and outputs, created your room arrangement, and designated which walls are movable, you can configure the details of each possible *room*. We'll continue with the example we used at the beginning of this section (with a few additional inputs added for good measure). The example includes three base rooms arranged in such a way that five different rooms are possible. Your job now is to configure the audio for each of these five rooms. And again, although we've stated this already, we want to emphasize once more that you can focus entirely on the room you're configuring without even considering the needs of the other rooms! What signals should be heard in this room? What audio processing is needed for this space? How should the digital remotes work in this room?

Here again are the five possible rooms resulting from our room arrangement, as displayed in the block's properties dialog box (the **Room Processor** tab):




Each of the five possible rooms has its own **Room Processor** block, from which you can configure the appropriate settings for the room. We'll walk through two Room Processor configurations—a base room and a combined room. Let's start with Room A, a base room. Its properties dialog box (opened by double-clicking the Room Processor block or by hovering over it and clicking the properties icon that appears on its title bar) looks like this:

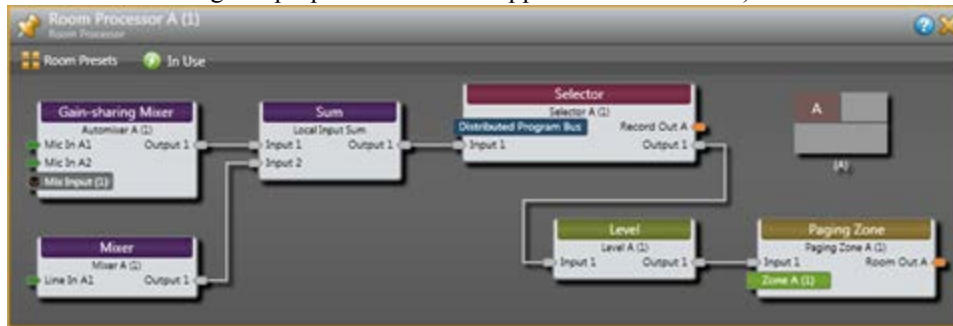


As you can see, the Room Processor contains the blocks (already routed appropriately) that are needed for configuring the room's audio. Configurable blocks included are the **Gain-sharing Mixer** and **Mixer** (displaying the inputs wired to the Room Combine Processor block), a **Selector** (containing the summed output from the two mixers as well as the Distributed Program Bus channels), a **Level** (for configuring the output volume), and a **Paging Zone** (for configuring ducker depth and page volume).

Now let's take a look at the room that results from opening the wall between Room A and Room B (or A+B):

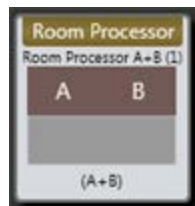

CHAPTER 3: Key Audio Design Features

The configuration process is the same, but you'll notice a few differences in the A+B Room Processor's blocks:

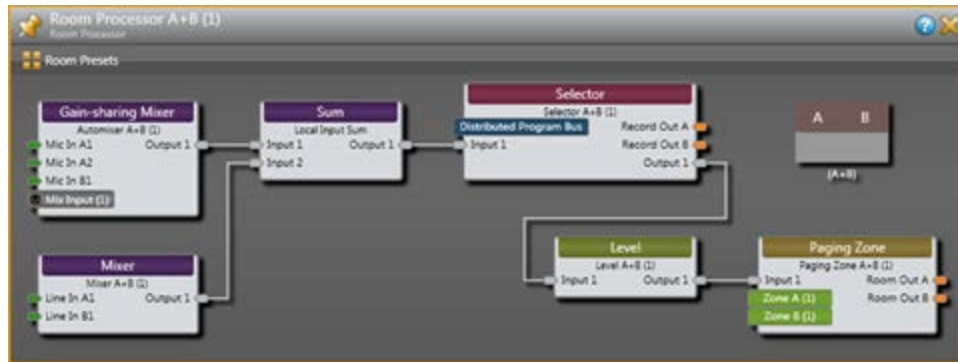

The same blocks are included, of course, but notice the additional inputs in the two mixers. The Room Combine Processor block has combined the inputs from the included base rooms. The Selector block contains Record Out nodes from both base rooms. And the Paging Zone block contains the paging zones and Room Out nodes from both base rooms. In essence, the inputs and outputs from the constituent base rooms now service the combined room and a page into either base room will be heard in the combined space.

The configuration process is the same regardless if you're working with a base room or a combined room. Subsequent sections of this topic cover the configuration steps in more detail, so we'll gloss over those details at this point. The key thing to understand is that each room operates as a separate, unique entity—each having its own configuration. Imagine that all the Room Processors are stored on a shelf (in this example, there would be five Room Processors on the shelf). When you open a wall, the Room Processors required by the room combination that is activated come off the shelf and Room Processors that preceded the wall opening go on the shelf. When you close the wall, or open another wall, the same exchange takes place. Whatever room combination is currently active dictates which Room Processors are active.

How do control links, paging, and the Distributed Program Bus behave in a room combine situation?

So you've linked a DR1 to a Level control in Room A and another DR1 to a Level control in Room B. What happens when those rooms are combined? How do you make sure the two DR1 devices track one another? What about paging? Does someone sending a page to this area need to know that Rooms A and B are now combined? And what about those Distributed Program Bus channels? How do they work in conjunction with the local inputs and what happens to all those inputs when the rooms are combined? Read through this section to learn the answers to all these questions.



TIP: The information in this section makes sense only after absorbing the basics of working with the Room Combine Processor block. If you have not reviewed *What are the basics of working with this block?* (located above), you should do so before continuing.

A key concept that helps answer each of these questions—and a concept that we have mentioned and will continue to mention again and again—is that you think about and configure each *room* as a separate and unique entity. This concept becomes clearer as you work with the various Room Processors. We'll begin with control linking.

Control Linking in a Room Combine


The linkable controls available to you within a Room Combine Room Processor include the following:

- Input and Output Mute controls in the Auto Mixer and
- Input Gain controls in the Mixer
- Output Gain controls in the Auto Mixer and
- Priority control in the Auto Mixer
- Selector control (for selecting input)
- Gain control (for controlling input volume)
- Page Gain control (for controlling page volume)

Let's take a look at how control linking works in a room combine situation—and what better way to illustrate than to use an example. We'll continue to work with the room arrangement introduced in the above section:




Focusing only on control linking, let's set up some remote volume controls for Room A, Room B, and Room A+B. You do so by opening the Room Processor for each room and configuring the link between the Level control and the remote device (we'll use a DR1), as shown in the following image:

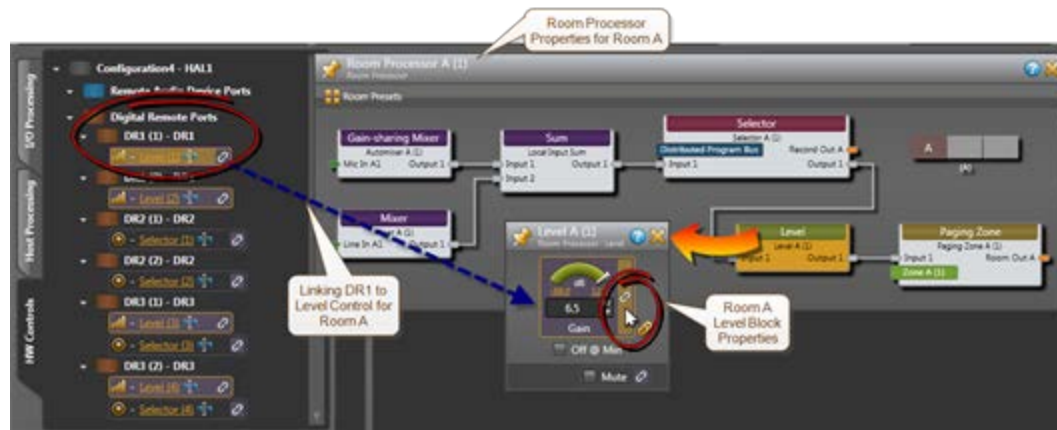

After creating this link, you do the same in the Room B Room Processor. You now have a DR1 in Room A that controls the volume in Room A and a DR1 in Room B that controls the volume in Room B.

So what happens when you combine the two rooms? Well, at this point, nothing. We haven't configured the Room Processor for Room A+B. Again, think of Room A+B as just another room—a room that doesn't need to know anything about Room A or Room B. With regard to control linking, we simply need to configure the control links we want for Room A+B. We want the two DR1s to control the volume in the space and to track one another. So we open the Room Processor for Room A+B, open its Level block properties, and create a single control link linking the Level control to both DRs, as shown here:

CHAPTER 3: Key Audio Design Features

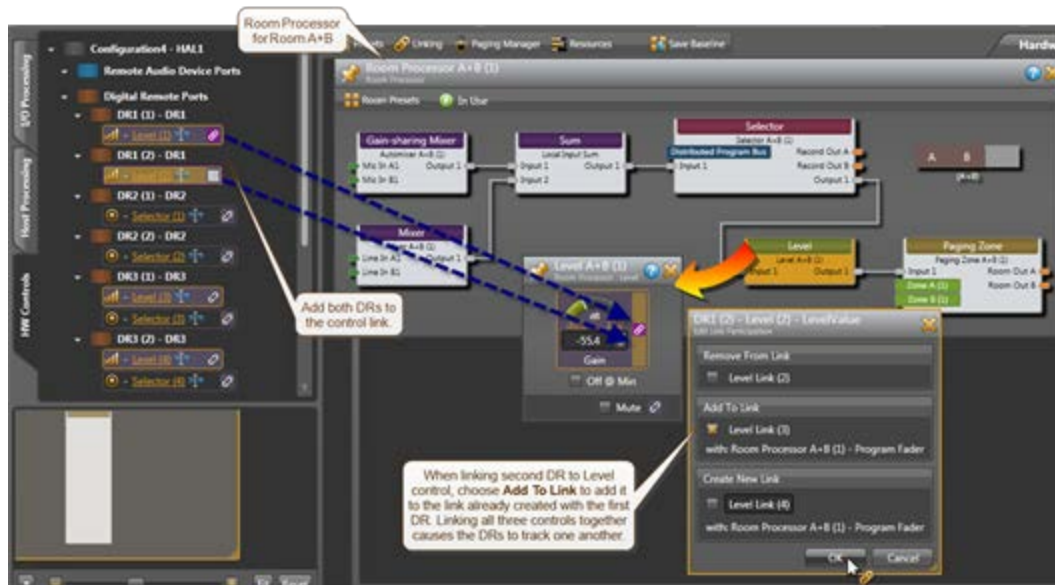

It's really as simple as that! Room A+B now has two DR1s that are linked together. When the wall between Rooms A and B is opened (resulting in Room A+B), this control link (along with the other Room Processor configurations for Room A+B) comes *off the shelf* and is activated.

In summary, creating control links in a room combine situation is no different from creating them in other situations. You simply work with each *room*, one at a time, creating the control links you need for that specific space. When that room is in use, its control links are activated.

Paging in a Room Combine


Imagine you're the receptionist at a large conference center and you receive an emergency call for a conference attendee named Jonathan Clark. The caller knows that Mr. Clark is currently in Session 3A. You look it up and see that Session 3A is being held in the Flamingo Room. But your paging system has three possible choices for the Flamingo Room—one as a stand-alone room, one in combination with the Palm Room, and another in combination with both the Palm and Dolphin Rooms. But you haven't a clue as to which walls they've opened or closed! So you page into the standalone Flamingo Room. Unfortunately, you guess wrong. The Flamingo Room has been combined with the other two rooms and the page is heard only in the Flamingo area. Luckily someone else hears it and notifies Mr. Clark that he has an emergency call. What a pain! There must be a better way!

And, of course, there is—the HAL System Room Combine Processor way! And guess what? It's automatic. You don't have to do anything—except configure your base rooms. Let's take a closer look.

If you've read about or used the HAL paging system, you know that when you drop a Zone Processor or Paging Zone on your Processing Map, that zone automatically shows up in the Paging Manager and is available to page into. The same is true for base rooms in a room combine. When you add a base room to the Room Combine Processor, that base room appears as a zone in the Paging Manager. When you combine two or more base rooms, their paging zones are merged behind-the-scenes such that a page into any of the combined base rooms is heard

in the entire space. Returning to our above example, if using the HAL System, the receptionist's page into the Flamingo Room would be heard in the entire area (Flamingo, Palm, and Dolphin).

Let's take a look. Following is the Room Processor properties dialog box for the combined Flamingo, Palm, and Dolphin rooms (A+B+C). Note that the Paging Zone block shows all three paging zones:

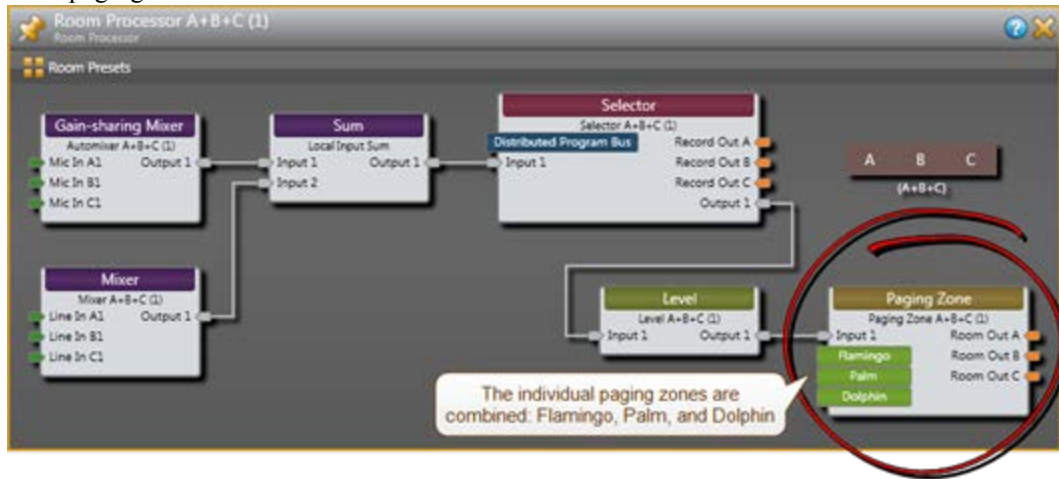

And this is how the three paging zones appear in the Paging Manager:



Paging into any of these zones will send the page to the appropriate output for the currently-active room configuration.

Distributed Program Bus in a Room Combine

The Distributed Program Bus behaves in a room combine just as it does in a Zone Processor. Its channels are automatically included in every room's inputs, regardless of the room combination. A Room Processor's Selector block includes the Distributed Program Bus channels along with the room's local input. Linking this selector control to a remote device such as a DR2 or DR3 gives end users the ability to choose between the local input or one of the Distributed Program Bus's channels.

NOTE: You cannot mix the Distributed Program Bus channels with the local input channel. To hear a Distributed Program Bus channel, you need to select it. If your situation requires the mixing of these channels, do not use the Distributed Program Bus. Instead, wire the channels as local input to the room's Mixer.

CHAPTER 3: Key Audio Design Features

What aspects of each *room* can I customize?

As discussed previously in this topic, each possible room in your room combine has a Room Processor block associated with it. You access these blocks by opening the Room Combine Processor block's properties and then clicking the **Room Processors** tab. From within a room's Room Processor, you can configure such things as the background music you want, the control links (or other links) that are needed, the volume for the room, the ducker depth and volume of pages, and so on. The Room Processor serves as a mini Processing Map for the room. You cannot drag and drop anything onto the map, but you can set many properties. Anything you customize in the Room Processor pertains to that room and that room only. You do not have to worry about a setting's impact on other room combinations. For more details on what you can configure and how to configure it, see *Configuring Individual Room Processors* in the Halogen Help System.

But what if you want to include processing that isn't available in the Room Processor? You can accomplish this by using one or more presets. Each Room Processor comes with its own *main* preset—and the ability to add more presets. These presets pertain only to the room represented by the Room Processor. When the room is not available (in other words, the wall configuration has resulted in other rooms), its presets are deactivated. When the wall configuration changes, making this room available, its configuration comes off the shelf and its preset(s) is(are) activated.


The main preset included in each Room Processor cannot be deleted and is initially empty. When you create a link within the Room Processor, it is added to the preset with an activation state of true. (The link is also added to the Baseline, but with an activation state of false.) You can choose how to work with this main preset, as follows:

- If, when a room is activated, you want the room to return to its most recent state, you should leave the main preset mostly empty (except for control links).
- If, when a room is activated, you want the room to return to a known state, you should save the relevant blocks to the main preset.

You can add other presets to the room as well. For example, suppose a room could be arranged in one of three ways, with a head table on a different wall depending on the current needs. In this case, you could create a different preset for each possible arrangement. Remember, however, that the room's main preset is always active (as long as the room is active). To better understand the use of custom presets, you may want to review the example scenario in the Halogen Help System.

How does an end user notify the system which room configuration is in use?

When you designate in the Room Combine Processor **Layout & Control** tab that a wall is movable, that wall then contains a Toggle control for designating if the wall is open or closed:

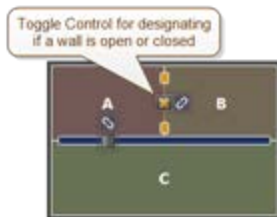

As with all controls, you can test these wall controls before any hardware is installed by manually selecting or deselecting them within the Halogen software. But you eventually need to provide end users with the ability to designate which walls are open or closed. To do so, you simply link these Toggle controls to a DR or to some other remote control hardware. The end user can then designate which walls are open and which ones are closed. With this information, the HAL System then knows which rooms to activate (in other words, which configurations to take *off the shelf*).

Another option for providing control to end users is to link the Selector control associated with the list of possible Room Combinations to a DR2 or DR3:



Using the Selector control method, the end user selects which configuration is currently active (instead of selecting which walls are open or closed).

NOTE: If there are more than 20 possible room combinations, you cannot link this Selector control to a DR, as the DR cannot display more than 20 selections. In this case, it would be best to link to the Toggle controls associated with each movable wall.

What is the typical work flow for designing a HAL System room combine?

Following is a typical work flow (in the form of questions) that you would follow when creating a room combine configuration:

1. Do you have background music sources? If yes, add a Distributed Program Bus block to your Processing Map as well as the input to the block.
2. Are you paging from anywhere? If yes, add one or more PAGER1 blocks or Paging Station blocks.
3. How many rooms are in your room combine? Add a Room Combine Processor and then add more rooms to it, if necessary.
4. What are the inputs to each room? Add the inputs and wire them to the appropriate room.
5. What processing do room outputs require? Add EQ, Compression, and so on. Wire the room outputs to the appropriate output block.
6. What is the layout of the rooms in your room combine? Open the Room Combine Processor block and configure the layout of the rooms as well as which walls are movable.
7. Do you need to customize the audio processing in one or more rooms? Open the relevant Room Processors to do so.

In reality, you could stop here and have a functioning room combine system. But it's likely you will want to configure remote control of the room configuration and you may also want to customize the processing for each possible room. Open the Room Combine Processor properties dialog to perform these functions.

8. Do you want to change any blocks outside of the Room Combine Processor when rooms are activated? Set up the PEQ blocks, output blocks, and any other blocks you want to associate with the room. Add these blocks to the room's main preset.

About Presets

This topic contains the background information you need to work effectively with HAL System presets. In addition to reviewing these conceptual details and best practices, we highly recommend that you review the included preset examples and the detailed descriptions of the various preset tasks you can perform.

What is a preset and why would I use one?

A preset is basically a snapshot of one or more system blocks with their parameters set to specific values. After adjusting relevant block parameter values to fit a specific need (for example, audio for a speech-only event), you can then save those settings to a preset. Then, when it's time to set up your space for a speech-only event, the end user simply pushes a button and—like magic—the system parameters are configured correctly. Without presets, either the designer would have to configure a remote control for all relevant, configurable parameters in the system or the end user would have to go into Halogen and tweak the appropriate parameter values every time a speech-only event was scheduled—a bit impractical!

Presets are a valuable and powerful tool. Use them ... because without them, there is no way to bring back a specific group of settings.

What can I store in a preset?

Because the purpose of presets is to make system changes *on the fly*, they can only contain objects that, when changed, do not require a recompile of HAL's DSP configuration.

A preset CAN contain the following:		A preset CANNOT contain the following:
All of the blocks in the Processing Workspace:		Wiring changes
	I/O Processing blocks	Addition to or deletion from the Processing Map of I/O processing or host processing blocks
	Host Processing blocks	Addition or deletion of control link participants
	HW Controls blocks	Link Master designation
Activation state of one or more control links		Control link priority

Presets and Block Parameters

Presets store blocks, not individual parameters. In other words, when creating a preset, you customize a block's parameter values to meet your needs, and then drag the entire block into the preset (which then stores all of the block's parameter values). You cannot specify an individual block parameter to be saved in a preset.

Presets and Control Links

Presets can also store a control link's activation state. In other words, you can use a preset to activate or deactivate a control link, which can be handy in a variety of situations. For example, if you want a single DR to behave differently depending on how a room is being used, you can accomplish this behavior change by using a preset to activate and deactivate the appropriate control links. Remember, however, that you cannot use a preset to change the control link's participant list, its Link Master designation, or its priority.

NOTE: If a block that you add to a preset contains a control that is a participant in a control link, that control link's activation state is automatically saved to the preset. If, however, you want to store only a control link's activation state to a preset without having to store any of its associated blocks, you can do so.

BEST PRACTICE: Because a preset cannot change a control link's priority, it is very important to confirm that your control links are prioritized correctly for the behavior that you want. It is always a good idea to double-check the control link priority list before, during, or after your creation of presets. Of course, testing your presets also helps you determine if your links are working according to plan when the presets are activated.

What happens when a preset is applied to the system?

NOTE: To apply a preset to a system, you either *activate* it or *assert* it. The difference between these two actions is described in detail here. For now we'll use the term *apply* as a generic term for turning on a preset. When you apply a preset, that preset is known as *active*.

To fully understand the impact of applying a preset, it's helpful to also understand the concept of *working values*, which are nothing more than the current active settings in a HAL System. In other words, what you currently hear or what you currently see in the Halogen Processing Map (when connected to the HAL) are the working values. The term itself is unimportant—what matters most is understanding the relationship between preset values and working values.

When you apply a preset to a system, the preset's block parameter values become the current working values for the corresponding blocks in your system. For example, let's assume your system contains a Level block called LobbyVolume and a preset (called Lobby) that contains the LobbyVolume block. The configuration of the block in each situation is as follows:



CHAPTER 3: Key Audio Design Features

The following table lists the parameter values for both the current system and for the preset:

	Gain parameter	Off @ Min parameter	Mute parameter
Current Working Values	-35.2 dB	Selected	Deselected
Lobby Preset	-6.5 dB	Selected	Deselected

When you apply the preset, all of the preset's LobbyVolume block parameters become the current working values. But only one of those parameters has a different value (the **Gain** parameter) and is, therefore, the only system parameter that will actually change.

Now let's assume the system contains four other Level blocks: DiningVolume, KitchenVolume, OfficeVolume, and RestroomVolume. Let's also assume that you apply another preset (called Dining) that contains the DiningVolume block, but no other blocks. After applying this second preset, the working values in the LobbyVolume block reflect the Lobby preset, the working values in the DiningVolume block reflect the Dining preset, and the working values in the remaining blocks remain unchanged from their beginning values.

You should now have a basic understanding of how a preset affects the working values of a system. But there's more to learn before you can work effectively and efficiently with presets. For example, as you have seen in this example, you can layer presets on top of one another, with each preset affecting only the blocks it contains. All other working values remain the same. But what happens if the same parameter is contained in multiple active presets with a different value in each one? And here's another question: Once you turn a preset on, can you turn it off?

Keep reading to learn more!

What happens if the same block exists in multiple active presets?

You can include the same block in as many presets as you want (although we recommend against including the same block in different preset types—see the next section for details). So what happens if more than one of those presets is active? How do you know which preset values are used by the system?

The preset values that take precedence are always the ones most recently applied to the system. In other words, the system keeps track of the presets as they are applied and places them in priority order. If you apply PresetA, then PresetB, then PresetC, the **Active Presets list**¹ (which you can view in the **All Presets** dialog box) would like this:



¹A dynamic list of active presets maintained by the system that changes as presets are asserted, activated, and deactivated. The presets are listed in priority order. When a preset is asserted or activated, it goes to the top of the list and its parameter values overlay the current working values for the corresponding system parameters. When a preset is deactivated it is removed from the list.

As you can see, the most recently applied preset has the highest priority. So how does that play out for block parameters that exist in multiple presets? To find out, let's follow the life of a single block as multiple presets are applied. We'll use a RAD1 Mic Input block for this example. Following is a screen shot of its properties dialog box, showing all of its parameters:



As you can see, this block contains the following parameters:

- Sensitivity Gain (slider control)
- +24V Phantom power (checkbox control)
- Level Gain (slider control)
- Off @ Min (checkbox control)
- Mute (checkbox control)

Let's assume there are three presets, each of which contains this RAD1 Mic Input block. The preset values for the block parameters are as follows:

Block Parameters	PresetA	PresetB	PresetC
Sensitivity Gain	26	37	26
+24V Phantom Power	Not Checked	Checked	Checked
Level Gain	-60	-41	-60
Off @ Min	Checked	Not Checked	Not Checked
Mute	Not checked	Not Checked	Checked

Now let's look at what happens to each block parameter as a new preset is applied. We'll apply PresetA, then PresetC, and then PresetB. Each table below shows the working values before and after the preset is applied.

CHAPTER 3: Key Audio Design Features

Apply PresetA

Block Parameters	Working Values Before Applying Preset	Working Values After Applying PresetA
Sensitivity Gain	43	26
+24V Phantom Power	Not Checked	Not Checked
Level Gain	-34.6	-60
Off @ Min	Checked	Checked
Mute	Not Checked	Not Checked

Apply PresetC

Block Parameters	Working Values Before Applying Preset	Working Values After Applying PresetC
Sensitivity Gain	26	26
+24V Phantom Power	Not Checked	Checked
Level Gain	-60	-60
Off @ Min	Checked	Not Checked
Mute	Not Checked	Checked

Apply PresetB

Block Parameters	Working Values Before Applying Preset	Working Values After Applying PresetB
Sensitivity Gain	26	37
+24V Phantom Power	Checked	Checked
Level Gain	-60	-41

Block Parameters	Working Values Before Applying Preset	Working Values After Applying PresetB
Off @ Min	Not Checked	Not Checked
Mute	Checked	Not Checked

In essence, when working with presets, simply remember that the working values of a system block always reflect the values found in the most recently applied preset *that contains that block*. If no preset has affected a specific block, that block continues to reflect its original (or default) values.

Are there different ways of controlling presets? If so, what are the different control types? Which approach should I use?

There are three preset control types—*Toggle*, *Selector*, and *Command*. Regardless of its control type, each preset accomplishes the same thing—it overwrites the system's current working values with its stored values. So why are there different control types? The primary reason is to provide flexibility in how you and your end users can control the preset. The control type you choose determines some of the preset's characteristics, which in turn affects control of the preset.

For a better understanding of the three preset control types, review the sections below:

Asserting Versus Activating/Deactivating a Preset

One of the first things to understand and one of the first things to decide when creating HAL System presets is whether you want to *assert* Command presets or *activate* and *deactivate* Toggle and/or Selector presets. The difference between these two approaches is really quite simple. Whereas you can turn Toggle and Selector presets on (activate) and off (deactivate), you can only turn Command presets on (assert).



NOTE FOR DRAG NET USERS: Asserting a Command preset is the same as recalling a Dragnet preset.

Whether you assert a Command preset or activate a Toggle/Selector preset, the system does the same thing. It places that preset at the top of the **Active Presets list**¹—which means its parameter values overwrite the current working values for the corresponding system parameters. When you deactivate a Toggle/Selector preset, the system removes it from the Active Presets list. You cannot, however, remove or *un-assert* a Command preset. The Command preset remains at the top of the list until you assert another Command preset or activate a Toggle or Selector preset, which is then placed above it in the list. But even though the original Command preset drops in the priority list, it is still active. The working values changed by the Command preset remain the same until another preset changes them.

¹A dynamic list of active presets maintained by the system that changes as presets are asserted, activated, and deactivated. The presets are listed in priority order. When a preset is asserted or activated, it goes to the top of the list and its parameter values overlay the current working values for the corresponding system parameters. When a preset is deactivated it is removed from the list.

CHAPTER 3: Key Audio Design Features



NOTE: If a preset, regardless of its control type, appears anywhere in the Active Presets list, that preset is active. The working values of the parameters for a specific block reflect the values in the highest priority preset that contains that block.

To thoroughly understand what happens when you activate and deactivate presets, you need to understand what the Baseline preset is and how it works. You can find details about the Baseline in the next section, but for now you can think of the Baseline as your default system settings. The Baseline is a Command preset, is customizable, and is always present and active. Therefore, if no other presets are active when you deactivate a preset, the system falls back to its default settings (the Baseline), because the Baseline is always active and cannot be deleted.

Although there may be times when a Command preset best fits your needs, there are distinct advantages to using presets that you can activate *and* deactivate. To illustrate these advantages, let's take a look at a simple example.

Example Illustrating Activate/Deactivate Behavior Versus Assert Behavior

Suppose you need a preset that mutes and un-mutes a specific output.



NOTE: In reality, you could use a simple control link for this scenario, but we'll use presets for now to help illustrate activate/deactivate versus assert.

Activate/Deactivate Approach: You could create a Toggle preset that contains the appropriate Level or Output block with its Mute parameter selected. When you activate the preset, the audio affected by that block is muted. When you deactivate the preset, the block parameter values fall back to the next preset in the priority list that contains this block. If no other preset is active that contains this block, it falls back to your system default settings (the Baseline). Assuming the default Baseline value for this Mute parameter is deselected (un-muted), deactivating the Toggle preset un-mutes the audio. In essence, you activate the preset to mute the audio and then deactivate the preset to un-mute the audio.

Assert Approach: If you were to use a Command preset in this scenario, you would assert the preset to mute the audio. But remember that you cannot *un-assert* a Command preset. So how would you un-mute the audio? You would need to create a second Command preset with the Mute parameter deselected. To un-mute the audio, you would assert this second preset. So, as you can see, when you use Command presets, you generally need to create them in pairs—one preset that contains the desired parameter values and another that returns you to the previous state. You can also assert the Baseline preset (the system default settings) over the currently active Command preset, but remember that the Baseline includes all blocks and would override ALL active presets no matter their control type. Further, since both Command presets become active, there is no way for an end user to know which preset is in effect without hearing the result. A Toggle or Select control displays the state of preset activation (on a checkbox or radio button), which shows the restaurant manager or bar owner the state of the audio system without forcing them to leave their office to wander around deducing the state of their audio system.

The Preset Types

So what are some other characteristics that distinguish the three different preset types from one another? And how do you decide which type to use? See the *About Presets* topic in the Halogen Help System to review a table comparing the different preset types.

What is the Baseline preset and why do I care?

The Baseline preset, which contains default settings and link activation states for all the processing and control blocks in your system configuration, serves as a foundation for your system. It is a Command preset and, therefore, can never be deactivated. Also, unlike other Command presets, the Baseline can never be deleted. It is always there to serve as the default fallback preset when no other presets are active. You can also configure the system to assert the Baseline on startup. (See the Halogen Help System for details.)



TIP: Here is an easy *rule* to remember: If no preset is currently acting on a particular block in your system, the block returns to the parameter values saved in the Baseline.

So how is the Baseline created? As soon as you open Halogen or click **New** on the system toolbar to begin a new configuration, Halogen creates the Baseline preset automatically (although it is initially empty). When you add a block to your Processing Map, that block is automatically added to the Baseline—with its default parameter values. When you add a control link, the Baseline stores the link's default activation state. Thus, the Baseline always contains every block, every hardware control, and the activation state of every control link that is present in your system.

Although Halogen creates the Baseline for you, the initial parameter values stored in the Baseline may not be appropriate for your particular system. No problem. You can easily customize all the Baseline parameter values. In fact, we highly recommend that you review and customize your Baseline before you begin creating other presets.



BEST PRACTICE: Early in your design process, decide what the default state should be for each block, hardware control, and control link in your system, configure these items accordingly, and save them to your Baseline. You can configure your entire system and save it to the Baseline all at once, or you can move from block to block, saving each block to the Baseline as you go. See *Customizing the Baseline Preset* for procedural details.

The Baseline in Action

So how do you actually work with the Baseline once your system is up and running? The answer depends on what it is you're doing and how you've configured your system presets.

Working in Conjunction with Toggle and Selector Presets

If most or all of your presets are Toggles or Selectors (presets that can be activated and deactivated), your Baseline will serve as the fallback position when none of your Toggle or Selector presets are activated. Let's say you have a Toggle preset that enables a DR in a room that is used only occasionally. When the room is not in use, you want the DR disabled. In this case, you would likely configure the DR as disabled in your Baseline. Then, when the room is in use, the end user activates the Toggle preset that enables the DR. When the room is no longer in use, the end user deactivates the Toggle preset, which causes the DR settings to fall back to their Baseline values—in this case disabling the DR. The behavior would be different, of course, if another

active preset containing this DR block existed above the Baseline in the **Active Presets list**¹.



BEST PRACTICE: Although you could *return* to the Baseline by asserting it over your activated Toggle and/or Selector presets, causing it to overlay every block in the system, we recommend against this practice. Because you cannot deactivate the Baseline, the only way to then get one of the lower priority Toggle or Selector presets above the Baseline is to deactivate and then activate it—a needless complication. The best way to return to the Baseline is to deactivate your Toggle and Selector presets.

Working in Conjunction with Command Presets

Command presets cannot be deactivated. They can only be asserted. Therefore, if you assert a Command preset (other than the Baseline) and want to return to the Baseline, you must assert the Baseline, which places it at the top of the preset priority list and overlays every setting of every processing block in your system.

System Startup Options: You can configure HAL to power up into one of two possible states: its most recent state or the baseline preset. For details, see *Configuring HAL Bootup Behavior* in the Halogen Help System.



WARNING! When you click **Save Baseline** in the Processing Workspace toolbar, *all blocks* in your Processing Map are saved to the Baseline with their current parameter values. If you only want to save the values for one block or a subset of blocks, do not click **Save Baseline!** You can instead update the Baseline for only that block or subset of blocks. For details, see *Updating the Baseline Preset* in the Halogen Help System.

How do I create a preset?

The first step when creating a preset is to decide how the preset should be controlled. Which approach do you plan to use—assertion or activation/deactivation? Will the preset be controlled by end users? If so, what type of remote hardware device are you using? Is the preset a standalone item or one of several choices? The answers to these questions help you choose which type of preset to create.

Once you have decided on a preset control type, you then open the **All Presets** dialog box and create the initial (empty) preset into which you will drag and drop the appropriately configured blocks and controls that are relevant to the preset. Depending on the type of preset you are creating, the procedure differs slightly. See *Creating Presets* in the Halogen Help System for details.



TIP: There are many ways to approach creation of a preset. You can set up the whole system and then drag the relevant blocks into the preset (remember that you can select and drag multiple blocks at once) or you can focus on one block at a time, dragging it into the preset when you finish the block's configuration. For particularly complex systems, the latter approach may prove easier to manage.

¹A dynamic list of active presets maintained by the system that changes as presets are asserted, activated, and deactivated. The presets are listed in priority order. When a preset is asserted or activated, it goes to the top of the list and its parameter values overlay the current working values for the corresponding system parameters. When a preset is deactivated it is removed from the list.

Once I've created my presets, how do I give the end user control over the preset?

This is the easy part! Once you've created your preset, you simply use control linking to provide end users with access to the preset. You create a control link that connects the preset to an appropriate remote hardware device. For example, if you created a Selector preset, you could link that preset to a DR2, DR3, or Logic In that is configured to behave as a Selector. If you created a Toggle preset, you could link it to a Logic In device, or to a Toggle control displayed on a DR2 or DR3. If you created a Command preset, you could link it to a Command control displayed on a DR2 or DR3 or to a Logic In configured as a Command control.

For procedural details, see *Linking a Preset to a DR or Other Remote Device* in the Halogen Help System.

If an end user remotely changes a preset value (for example, increases the volume), can I capture that new value for future use?

Yes you can. HAL System presets contain a handy feature called Scratch Pad, that tracks and stores changes made to any of the preset values.



NOTE: By *changes*, we mean changes made dynamically, usually by an end user, not changes actively saved to the preset itself.

Let's walk through an example to illustrate how Scratch Pad works. Suppose your system contains a preset that configures a room's audio for Friday Night Bingo. The same crowd usually shows up every Friday night and it seems they always have to turn up the volume to hear the announcer. Wouldn't it be nice if each time you activate your Friday Night Bingo preset, it could return the room to the settings as adjusted by the Bingo audience members instead of returning to the original preset values? With Scratch Pad, you can do this! You simply enable the Scratch Pad feature for the Friday Night Bingo preset. It then keeps track of any changes made to any of the preset's block parameters. The next time you activate Friday Night Bingo, it *remembers* the last change the Bingo attendees made to the volume and returns that value.

Scratch Pad works on a preset level, never affecting any preset other than its own. In other words, each preset has its own, dedicated Scratch Pad. By default, a preset's Scratch Pad is disabled. For details on enabling it, see *Enabling/Disabling Scratch Pad* in the Halogen Help System. You cannot enable the ScratchPad for a subset of the preset's blocks. Once enabled, it monitors the preset parameters for all of the preset's blocks and if one of them changes, it tracks the change. If the same parameter changes again, the ScratchPad overwrites the old change with the new one—thus it keeps only the last value for each changed parameter. When the preset is activated again, it uses the ScratchPad values.

Resetting or Disabling the ScratchPad

So what happens if, once the ScratchPad is enabled and begins saving changed parameter values, you want to return to your original preset values? Rest assured that those original values are safe and sound and never altered by the ScratchPad. The HAL System provides you with two options for returning to those values:

- **Disable the ScratchPad:** When you disable the ScratchPad, the preset returns to its original values the next time it is applied, the ScratchPad values disappear, and the ScratchPad no longer tracks changes to the preset values.

CHAPTER 3: Key Audio Design Features

- **Reset the ScratchPad:** When you reset the ScratchPad, its values return to those of the original preset, but it is still enabled and will continue tracking any changes to those values. You should always deactivate a preset before resetting its ScratchPad. If you tried to reset an active preset's ScratchPad (in other words, the preset's ScratchPad is tracking the current working values of the system), nothing would change. This may sound confusing, but it's actually quite simple. If you reset an active preset's ScratchPad, the ScratchPad's values return to the original preset values but the ScratchPad then immediately saves the current working values—as that's its job. So, in essence, you're back where you started before you reset the ScratchPad.



BEST PRACTICE: Avoid performing a ScratchPad reset when the preset is active.

Controlling the ScratchPad

If you decide to use the ScratchPad feature, you will likely control it from within the Halogen software. If, however, you need to expose a control for enabling, disabling, and/or resetting the ScratchPad, you can do so using control links. The ScratchPad's two controls—the Enable/Disable Toggle control and the Reset Command control—can be linked to a DR or some other remote hardware device. We do not recommend exposing this control to end users, however, unless they have a thorough understanding of the ScratchPad's purpose and behavior.

Is there a recommended work flow for creating presets?

There are a variety of work flows you can use when creating presets, but we recommend the following:

1. Establish your Baseline preset by creating the default parameter values for all the blocks in your system, creating and testing the control links you want in your system (in its default state), and then saving everything to your Baseline preset.
2. Decide what preset control type best fits the scenario for which you are creating a preset.
3. Open the **All Presets** dialog box and add a new preset (of the control type you have decided upon).
4. For each block you want to save to the preset, configure its parameters appropriately and test the behavior (including relevant control links). When all blocks and control links are created and tested, select the relevant blocks and drag them into the preset.
5. Test the preset.
6. Return to (or assert) your Baseline preset and begin at step 3 to create your next preset.
7. Repeat steps 3 through 6 until you have created all the presets you need.
8. If several presets contain the same block or control link, test their interactions and make any necessary adjustments in to get the behavior you want. Be sure to review the control link priorities.
9. Test all presets.

An alternate approach:

1. Create your Baseline preset as outlined in the above procedure.
2. Create all your anticipated presets in the **All Presets** dialog box. These presets will be empty until you add the relevant blocks.
3. Drag a block into all the presets that should contain it.

4. Click the square in the middle of the blue preset bar at the bottom of the block to open the block's **Preset References** dialog box.
5. Configure that block appropriately for one of the presets.
6. In the **Preset References** dialog box, click **Update** for the relevant preset.
7. Reconfigure the block for another of the presets and then click **Update** for that preset.
8. Continue until you have added the properly-configured block to all the presets that contain it.
9. Repeat steps 3 through 8 for each system block contained in one or more of your presets.
10. If more than one of your presets contain control links, review the control link priority list to adjust their priorities, if necessary.
11. Test all presets.

What are some best practices when designing and working with presets?



BEST PRACTICE: Early in your design process, decide what the default state should be for each block, hardware control, and control link in your system, configure these items accordingly, and save them to your Baseline. You can configure your entire system and save it to the Baseline all at once, or you can move from block to block, saving each block to the Baseline as you go. See Customizing the Baseline Preset for procedural details.



BEST PRACTICE: Name your presets as soon as you create them. This helps alleviate confusion later. Note that all preset names must be unique.



BEST PRACTICE: When creating presets, a good approach is to think through and configure blocks for the entire preset, test the functionality, and then select all the relevant blocks and drag them to the preset.



BEST PRACTICE: Try to avoid including the same blocks in different types of presets (with the exception of the Baseline, of course, as it contains every block in the system. Including the same block in different types of presets makes management of the presets and the block parameters values much more difficult. It's okay to use different preset types as long as they are independent from one another (again, the Baseline is an exception).



BEST PRACTICE: Avoid asserting the Baseline unless you are using only Command presets. Asserting the Baseline over a Toggle or Selector preset creates a dilemma. To then place the Toggle or Selector above the Baseline (in the **Active Presets list**¹), you would have to deactivate and then re-activate it. In this scenario, the best way to return to the Baseline is to deactivate the Toggle and Selector presets.

¹A dynamic list of active presets maintained by the system that changes as presets are asserted, activated, and deactivated. The presets are listed in priority order. When a preset is asserted or activated, it goes to the top of the list and its parameter values overlay the current working values for the corresponding system parameters. When a preset is deactivated it is removed from the list.

CHAPTER 3: Key Audio Design Features



BEST PRACTICE: Because a preset cannot change a control link's priority, it is very important to confirm that your control links are prioritized correctly for the behavior that you want. It is always a good idea to double-check the control link priority list before, during, or after your creation of presets. Of course, testing your presets also helps you determine if your links are working according to plan when the presets are activated.



BEST PRACTICE: Avoid performing a ScratchPad reset when the preset is active.



WARNING! When you click **Save Baseline** in the Processing Workspace toolbar, *all blocks* in your Processing Map are saved to the Baseline with their current parameter values. If you only want to save the values for one or a subset of blocks, do not click **Save Baseline**! You should instead update only those specific blocks in the Baseline. For details, see Updating the Baseline Preset in the Halogen Help System.

CHAPTER 4: Designing and Installing Your HAL System

Now that you understand the basics of the HAL System (assuming you have read the preceding pages), you're likely anxious to get rolling with this amazing product. Well, hold on for just a few more pages. This section of the Design Guide provides some final bits of information to help you get started. We highly recommend that you review the work flow presented next. Although, there are multiple paths you can take when designing and installing your HAL System, we present here our recommended work flow. Following the work flow discussion are some helpful tips the designer should consider when preparing the system for installation. For the actual details of installing a HAL System, see the *HAL System Installation Guide*.



NOTE: A hardcopy of the *Installation Guide* is included in the product box. You can also find a PDF version on the product DVD as well as on Rane's website.

Recommended Workflow for Creating a HAL System

Although there is a great deal of flexibility built into the HAL System, we can recommend a workflow for most efficiently designing and configuring a HAL System. Here we explore this work flow, providing a high level view of its steps as well as tips on where to find more detailed information.



TIP: Planning up front is the key to a successful deployment. Notice that you don't actually need to create anything in the Halogen software application until Step 4 (although you can use the software to help you with the earlier steps if desired).

Workflow Details

Step	Task	Location
1	Learn about the HAL System. Review the HAL System documentation. We recommend that you initially focus on high level overview information. The Getting Started section of this guide as well as in the Halogen Help System is a good place to begin. If you've already read all the preceding pages, however, you can check this item off your list!	HAL Documentation
2	Create preliminary design. As is true with any audio product, it is essential that you identify your requirements and have a basic system design in place before setting up and configuring the details of your HAL audio system. How many zones will you need? Where will you be placing your speakers? How many inputs will be needed? Will the system need remote control capability?	Outside of HAL System (although you can use Halogen to help with this step)

CHAPTER 4: Designing and Installing Your HAL System

Step	Task	Location
3	<p>Choose physical hardware.</p> <p>Decide which physical hardware components you will need to implement your design. Will you be using RADs? If so, which ones and how many do you need? If you need more than four RADs, you may need an Expansion Unit. How about remote control? Do you need some DRs?</p> <p>As a convenience, you may want to open the Halogen software at this point and use its Hardware Workspace to experiment with and quickly test different hardware configurations.</p> <p>To learn more about the hardware available for your HAL System, see "Introduction to the HAL System" on page 6.</p>	<p>Inside or Outside of Halogen</p>
4	<p>Specify hardware in Halogen.</p> <p>Open the Halogen software application. In this step, you'll be working in the Halogen Hardware Workspace specifying the hardware components of your audio system. You drag hardware objects from the hardware palette onto the appropriate hardware port displayed in the Hardware Workspace, and then configure the hardware as desired.</p> <p>For more details, see Working in the Halogen Hardware Workspace in the Halogen Help System.</p>	<p>Halogen Hardware Workspace</p>
5	<p>Specify inputs and outputs.</p> <p>You now open the Halogen Processing tab and begin working in the Processing Workspace. First up is the I/O Processing. The I/O palette in Halogen is populated with all the inputs and outputs resulting from your selection of hardware. You simply find the input and output blocks you plan to use and drag them into the Processing Workspace. You can drop them anywhere you like, but we recommend placing them on the left side of the Processing Map. You'll be setting up the actual audio routing in a later step.</p> <p>You can work with these input/output blocks any way you like. For example, some designers prefer setting up all of their inputs first and then setting up their outputs, while others prefer to configure all the way from input to output at the same time.</p> <p>For more details, see Working in the Processing Workspace and Working with the I/O Processing Palette in the Halogen Help System.</p>	<p>Halogen Processing Workspace</p>

Step	Task	Location
6	<p>Specify processing.</p> <p>Staying in the Processing Workspace, you now move to Host Processing palette, where you drag over the processing blocks you want to use in your system. The Host Processing palette includes blocks for controlling dynamics, filtering, mixing, paging, room combine configuration, and more. Simply drag the blocks you want and drop them anywhere in the workspace area.</p> <p>For more details, see <i>Working in the Processing Workspace</i> and <i>Working with the Host Processing Palette</i> in the Halogen Help System.</p>	Halogen Processing Workspace
7	<p>Wire everything together.</p> <p>Now that you have placed all (or most) of the ingredients for your audio system on the Halogen Processing Workspace, you can now wire the blocks together to achieve your desired routing and processing. To wire two blocks together, you click a block output node and then click the input node of the other block.</p> <p>For more details, see <i>Connecting Blocks</i> in the Halogen Help System.</p>	Halogen Processing Workspace
8	<p>Configure, adjust, and fine-tune your system.</p> <p>Still working in the Processing Workspace, you can now configure detailed settings for each block, customize your Baseline Preset, configure specialized presets, set up control linking between audio processing parameters and controls in the HW Controls palette, configure the details of your paging system, and more.</p> <p>For more details, see <i>Working with the HW Controls Palette</i> and <i>Presets</i> in the Halogen Help System.</p>	Halogen Processing Workspace
9	<p>Test and troubleshoot.</p> <p>After you've completed these design and configuration steps and have connected all the physical hardware, it's time to test and troubleshoot your system. The HAL System contains numerous features that make the testing and troubleshooting process much easier than in days gone by.</p> <p>For details, see <i>Troubleshooting</i> in the Halogen Help System as well as in the <i>HAL System Installation Guide</i>.</p>	Outside of and within HAL System and Halogen
10	Relax!	Outside of HAL System—maybe even outside of work!

A Few Design and Installation Tips

Following are a few simple tips to consider when designing your HAL System and preparing the system for installation:



TIP: Review the HAL System features before you begin your design! The key features are explained in this guide as well as in the Halogen Help System.



TIP: In your system diagrams, use the HAL System CAD drawings provided by Rane. These CAD files are in the .dwg format, a format for AutoCAD. You can obtain these files from the Rane website as well as on the HAL System product DVD. Also included (in both places) are more detailed color pictures of the hardware in a .jpg format.



TIP: This may seem obvious, but we'll say it anyway. Create your design and save it to a Halogen configuration file prior to the installation of the hardware. Provide this configuration file to your installer. Loading this file into the HAL during the installation increases the efficiency and accuracy of the installer's work. Simply include the configuration file along with the other drawings and documentation that you give to your installers. See "About Halogen Configuration Files" on page 87 for more details.



TIP: Use the Halogen *Notes* feature to add comments and special instructions to a configuration. These notes can often be of great use to an installer. For more details, see "Creating, Viewing, and Modifying Notes about a HAL System Configuration" on page 88.



TIP: Generate labels for the RADs in your system and insert them prior to handing the system over to the installer. Performing this simple task up front will make the installer's job much easier—and yours too as there is less likelihood of a RAD being installed in the wrong location. For details on generating labels, see "Generating Device Labels" on page 89.



TIP: Before completing your design and handing it off to an installer, review the *HAL System Installation Guide*. It contains valuable information about the installation work flow as well as details on troubleshooting an installation.

Installing and Starting the Halogen Software


A DVD containing the Halogen software is included with your HAL System hardware. If you're like most people, however, that DVD is gone – accidentally tossed in the recycle bin along with the cardboard box. If that's the case, no need to worry. Simply go to the Rane website at rane.com/hal and download the software, free-of-charge.



NOTE: You must be logged in with administrator rights to install this software.

1. Insert the DVD in your computer (or click the Halogen download button on the Rane website).
2. If downloading the software, on the **File Download** box that appears, click **Run**. If you want to save the installation file to your computer, click **Save**.

3. When the download completes (or after inserting the DVD), click **Run** to begin the installation. The installation program first verifies the contents of the setup package. This may take a few moments.
4. When the verification completes, the **Welcome** screen appears. Click **Next**.
5. The License Agreement appears. After reading the agreement, check the box that indicates you accept the terms, and then click **Next**.
6. Indicate the location in which Halogen should be installed. By default, Halogen is installed in C:\Program Files\Rane Corporation\Halogen. Select or deselect the options to create a desktop icon and/or a quick launch icon. Click **Next**.
7. Click **Next** again to begin the installation of Halogen. The installation application uninstalls the previous version of Halogen (if necessary), installs any needed components, and then installs the Halogen application. This process may take several minutes.

 **NOTE:** There are a number of processes that are required for Halogen to function properly. It is important to verify that none of these files were blocked by your firewall or virus protection software. For details, see "Required Processes " on page 30.


8. When the installation is complete, the following dialog box appears:




Click **Finish** to complete the installation and open Halogen.

Starting Halogen

1. On the Start menu, point to All Programs > Rane Corporation > Halogen.
2. From the choices that display, select the Halogen application:

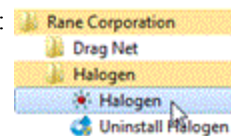

A splash screen displays until the application loading completes, then the Halogen Hardware Workspace displays.

 **NOTE:** If the application fails to start, verify that all required ports are available and that all required processes are installed and available. For details, see "Required Ports" on page 29 and "Required Processes " on page 30.

About Halogen Configuration Files

For the HAL System to properly operate your audio system, you must, of course, configure it first—specifying your system's hardware components, inputs and outputs, processing blocks, control links, audio flow, and so on. You have two options for configuring your system—one option that absolutely requires saving the configuration to a file, and the other option where saving to a file is highly recommended:


Create a configuration file and then apply it to the appropriate device.


This is the recommended approach, especially when initially designing and installing a system. You can create this configuration file without having the hardware on hand, which makes this approach convenient for the designer. When you apply the file to a HAL device, its settings are actually saved to the device. The saved configuration file then serves as a backup in case you want to restore the device to a known configuration at a later time. The file also comes in handy if you are configuring the same audio system for multiple locations. You can simply create one design, save it to a file, and apply the file to the HAL device at each location.


There are two ways to get your configuration file onto the HAL: apply it or load it. You can also, of course, save the configuration on a live HAL to a file.

 
Configure the HAL device directly.

Using Halogen, you can view and directly edit the current configuration of a live HAL device. Any changes you make to a live HAL's configuration are immediately saved to the device (but not to a file). The changes take effect immediately.

 **WARNING!** There are certain changes that, if made on a live HAL device, cause a recompile of HAL's DSP configuration: Wiring changes, addition or deletion from the Processing Map of I/O Processing or Host Processing blocks, changes to the maximum delay value in the Delay Host Processing blocks. If a recompile is required, Halogen disconnects from HAL. We recommend avoiding this situation unless you're sure it is what you want to do!

 **TIP:** When making changes on a live device, it is certainly possible to inadvertently make changes that you did not intend. Been there before? Therefore, we highly recommend that you always maintain a backup configuration file containing the desired settings for your HAL.

 **NOTE:** Halogen configuration files have an extension of `.hal` and, by default, are stored in `C:\Users\\Documents\Halogen Configs`.

 **NOTE:** HAL automatically mutes its outputs whenever a new configuration is loaded or applied.

Creating, Viewing, and Modifying Notes about a HAL System Configuration

Halogen provides a simple text editor in which you can capture notes about a specific HAL configuration that may help you remember or help other people understand the details of that particular configuration and its associated devices. These notes are associated with the specific configuration, not with the HAL device itself.



NOTE: You can add notes specific to the HAL device that are stored on the device. See the HAL Properties reference topic for details.

To create notes about a HAL System configuration:

1. From the **Edit** menu in the application toolbar, click **Notes**:



2. In the text editor that appears, click **Insert Date-Time** and begin typing your notes:




3. When you have finished entering your notes, click the **X** in the upper right corner to close the dialog box. The notes are automatically saved.



NOTE: To later view and/or modify the notes, simply click **Notes** in the application toolbar to display the notes once again. From there you can read the notes, add new entries, or modify existing text.

Generating Device Labels


Most RADs (with the exception of the RAD16, AM1, and AM2) contain an area near its top in which you can insert a custom label. We recommend that you use these labels to identify the channel associated with the corresponding jack. The following graphic illustrates the placement of the labels:

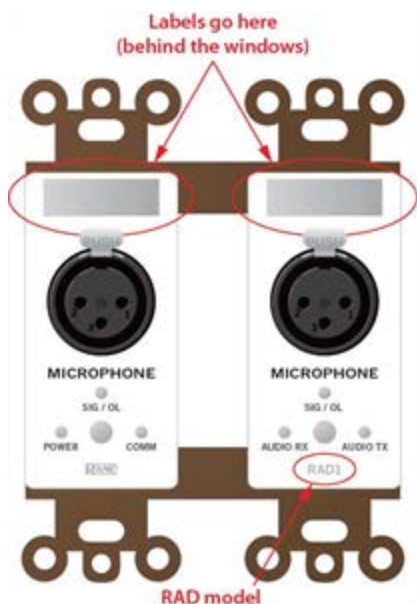

To eliminate confusion and also streamline audio routing and troubleshooting, the channel names on the physical RADs should match the channel names in Halogen. To help ensure this consistency, Halogen includes a label generation feature that produces a PDF document of labels based on the channel names you've entered in the software. We highly recommend that you use this feature to create your RAD labels.

The timing of this label creation is up to you. It may be helpful to create the labels at the same time you create the configuration file and insert them in the physical RADs (if they are available). If you label the RADs early in the process, it may help the installers confirm that they are installing the right RADs in the right places.

To generate RAD labels:

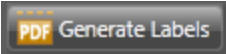1. Within Halogen, open the configuration file from which you want to generate labels. Alternatively, if you have applied the configuration to a HAL device, you can open the device itself.
2. In the Hardware Workspace, confirm that the RADs are configured appropriately. At a minimum, enter the names for the channels as this is needed for the generation of labels.
3. In the Hardware Workspace toolbar, click **Generate Labels** :  The **Generate Device Labels** dialog box displays.
4. In **Name and Location**, browse for or type the location and file name you want for the PDF file you are generating. If you type the name of a folder that does not exist, the software will create it for you. By default, the file is named `DeviceLabels.pdf` and is placed in `C:\Users\\Documents\HalogenLabels`, although this location may vary depending on your operating system.

5. In **Label Color**, select the color you want your labels to be (to match the RADs you will be using). The choices are white (with black text), black (with white text), and ivory (with black text).
6. Click **Create**. Halogen generates the PDF file and, once it is complete, enables the **View** button.
7. Click **View** to open the file.
8. When you are satisfied with the results, print the PDF file. It is best to use 24# paper.
9. Cut out the labels and insert them behind the Lexan window on the appropriate RADs. To help with the alignment of the labels, we recommend that you wait until after inserting the labels before trimming off the excess paper (using an Exacto or box knife).



NOTE: If you want to use different fonts or colors for the label text, you will need to create the label document yourself. To do so, download the Microsoft Word template from the Rane website. Enter the channel names, apply the appropriate fonts and/or colors, print the document, and cut and insert the labels.

Upgrading Halogen Software and HAL Firmware

For the HAL System to function, Halogen and the firmware located on your hardware devices must be the same version. When you install a new version of Halogen, firmware updates are also installed (on your computer). To actually install the new firmware on the devices themselves, you must then manually launch the firmware update process. The following procedures explain how to upgrade both the Halogen software and the firmware for your HAL and peripheral devices.

To upgrade the Halogen software:

Several options are available:

- By default, when Halogen starts, it checks for the availability of updates to the software (if an Internet connection is present). If an update is available, Halogen displays a link you can click to launch the update. You can disable this functionality (checking for updates on startup) within the **Application Settings** dialog box.
- You can request an immediate update check at any time by selecting **Check Web for Updates** on the **Help** menu.
- Open the **Connect to Device** dialog box by clicking **Connect** on the application toolbar. If a HAL contains firmware that is newer than the version of Halogen you are running, a link is provided to the latest version of Halogen.

To upgrade the firmware on your HAL device and peripheral devices:

1. Open the **Connect to Device** dialog box. If a detected HAL device contains firmware that is older than the version of Halogen running on that computer, an **Update Firmware** button associated with that HAL displays in the **Operations** column:



CHAPTER 4: Designing and Installing Your HAL System



NOTE: If the firmware is newer than the software, a **Roll Back Firmware** button displays. Instead of rolling back your firmware, however, we strongly recommend downloading the latest version of Halogen, ensuring that you have the latest functionality available to you.

2. Click the **Update Firmware** button to perform the update. As part of the firmware update, HAL also updates the firmware on all peripherals (RADs, DRs, EXPs). During an update, each device signifies in some way that its firmware is updating:
 - HAL—LEDs on front panel (Mic/Line and Output LEDs) display a racing pattern of green lights. In the **Operations** column for this HAL (in the **Connect to Device** dialog box), the button text displays **Updating Firmware**. When the update completes, the HAL reboots, reappears in the **Connect to Device** dialog box, and its Mic/Line and Output LEDs become solid green. At this point, HAL begins the update of its peripheral devices.
 - RAD—LEDs on front of RAD display a racing pattern of green lights; RAD LEDs on front panel of HAL also display a racing pattern. The racing pattern ceases when the update is complete.
 - DR—Backlight is off, progress bar displays on LCD screen along with the text *Updating firmware ...*. The DR screen displays *Connecting ...* when the update has completed. On the HAL, the DR LED blinks, then becomes solid when the update is complete.



WARNING! A HAL update can take up to ten minutes to complete. Of course, during the update the audio system does not function. Therefore, it is best to perform a firmware update during off hours or a scheduled downtime.

Uninstalling the Halogen Software

To uninstall Halogen:


1. On the Start menu, point to All Programs > Rane Corporation > Halogen > Uninstall Halogen.
2. When prompted, click **Yes** to confirm that you want to completely remove Halogen and all of its components. A dialog box appears showing the status of the uninstall. When the uninstall completes, a dialog box appears confirming that the uninstall completed successfully.
3. Click **Finish** to close the wizard.

APPENDIX A: Transitioning from Drag Net

If you are moving from the Drag Net world to the HAL System world, your transition will be smoother if you read through this topic. Explained below are some of the key differences between the two systems.

Understanding Key User Interface Differences

As a Drag Net user, you're accustomed to using a Processing Map to design your system. You'll be glad to know that this concept lives on in the Halogen software—but there's now more! Not only is there a Processing Map, there is also a Hardware Map.

 **NOTE:** The Processing Map is part of a larger area of the user interface known as the Processing Workspace. The same is true for the Hardware Map, which is part of a larger area known as the Hardware Workspace.

As the name suggests, you select and configure your hardware devices in the Hardware Workspace while you use the Processing Workspace to select and configure your inputs and outputs, configure the processing you want, and set up the appropriate audio flow.

As a Drag Net user, you're also used to working with a Remote Map for setting up control linking. Halogen does not contain a Remote Map. Instead, you configure your control links directly in the Processing Workspace. These differences are explained more thoroughly below.

Working with Presets

The handling of presets is perhaps the area that has changed the most between the two systems. A key result of these differences is a significant reduction in the need for presets in the HAL System. Whereas in Drag Net, control linking, paging, and room combining required the use of presets, this requirement does not exist in Halogen. You will now use presets primarily to dictate how the audio is processed. Ironically, although presets are required less often in Halogen, you can create many more of them than you could in Drag Net (which has a preset limit of 24). You can also now customize your preset names, which you could not do in Drag Net.


Another key difference centers on how presets are *turned on*. In Drag Net, you would *recall* a preset. In Halogen and the HAL System, there are some new terms for this process—because there are new ways of performing this function. This Help System contains detailed explanations of working with presets in the HAL System, but, for you Drag Net users, we'll mention some of the key differences here:

- In Drag Net, you could recall a preset, but you could not then remove it (or *un-recall* it, if you will). For example, if you wanted a preset for muting the audio, you would need another preset for unmuting the audio. In the HAL System, depending on how you define your presets, you can activate a preset and then, when it is no longer needed, you can deactivate it. (To mute the system, activate the preset. To unmute the system, deactivate the preset.) The system then falls back to the next preset in the preset priority list. Whenever you activate a preset, it goes to the top of this priority list.


A HAL System feature that makes this preset behavior possible and viable is its Baseline preset—another new concept for you Drag Net users (although it has some similarity in functionality to Drag Net's Preset Zero). The Baseline preset, which is

APPENDIX A: Transitioning from Drag Net

automatically created for you but can be customized by you, contains all the blocks you have included in your audio system. It provides the foundation, the fallback position, for your system. Therefore, when you deactivate a preset, there is always a configuration for the system to fall back to.

 **TIP:** As a Drag Net user, were you often tempted to include every relevant block in every preset, even if the preset didn't change a value in the block—just to be sure of every parameter value when recalling the preset? Rest assured that, in the HAL System, this practice is not necessary. You should include in a preset, only those blocks containing a parameter value to be changed by the preset.

- The ability to activate and deactivate presets greatly simplifies their use as you no longer need to worry about the layering effect of recalling one preset over another. However, if that layering is what you want, you can still accomplish it by using the appropriate preset types or by simply not deactivating a preset if you want to layer another one over it. For example, in Halogen, a Command preset behaves like the presets you're accustomed to in Drag Net. You can *assert* the Command preset (equivalent to recalling a Drag Net preset), but you cannot *un-assert* a Command preset. The disadvantages of a Command preset are the same as the disadvantages of presets in Drag Net—it's hard to know at any given time what state the system is actually in, you often need to create pairs of presets, and these preset types generally require more time to configure. For these reasons, we recommend the use of the newer preset types (Toggle and Selector). But if you're used to the *Drag Net way* and want to stick with what's familiar, Command presets are there for you.

 **TIP:** Our advice to you? Read the details on preset types and working with presets before getting started with your design!

- In the HAL System, just like in Drag Net, you need to provide end users with remote control over the activation (and deactivation) of presets. This process is very different in Halogen. For more details, see the section on control linking below.
- A new preset feature in the HAL System that we know you will LOVE is the ability to test your presets offline, from within the software! How great is that?! You no longer have to wait until your hardware is installed to find out if your preset configurations work correctly.

Working with Control Links

You're going to love configuring control links in Halogen! The process has been simplified and streamlined. Following are some of the key differences:

- As previously mentioned, you no longer use a separate Remote Map to create your system's control links. Instead, you use a simple drag-and-drop operation in Halogen's Processing Workspace—the same location where you configure all aspects of your audio processing.
- You no longer have to define and manually create the behaviors for your remote controls. Instead, you simply choose the appropriate remote control device (Digital Remote, or DR) and, if necessary, select in Halogen the appropriate control mode for your purpose. See Digital Remotes for details.
- In Drag Net, you set the volume range on the remote device itself. In Halogen, you configure this range on the level control and then link this control to the remote device, or DR. The DR always goes from 0% to 100%, but that range is defined in the level control.

- Speaking of level controls, in Drag Net, you always had to drag in an extra Level block to align with an input or output block. This step is no longer needed as Halogen's Input and Output blocks contain their own level controls.
- Regarding terminology changes, Drag Net control links contained a *Group Master*, which defined the control that the other linked controls would match when the link was activated. This same concept exists in the HAL System, but uses a different term: *Link Master*. Another terminology change is the broad term for the overall functionality: *Group* in Drag Net means *Control Link* in Halogen.
- We save the best for last! Just like with presets, you can now test your control links off-line—from within the Halogen software! This is a tremendous benefit for you, the designer. You will know long before your hardware is installed if all your remotes are linked and working correctly.

Configuring Remote Device Hardware

Configuring your HAL System remote devices is much simpler than in Drag Net. Following are a few reasons:

- What good is a remote device without a display showing possible selections to the end user? To provide such a display for your remote devices in Drag Net, you had to create and load a bitmap onto each device. You will be happy to know that in Halogen, you simply specify the text that should be displayed on a specific device and, voila, it appears on the device's LCD screen. It could not be simpler!
- Another complexity in Drag Net was the requirement to specify an address for each remote. But in the HAL System? Nope—remote device addresses are no longer needed. Each HAL System DR connects to HAL via a homerun. In other words, every DR is connected directly to its own DR port on the back of the HAL device. There is no daisy chaining or star wiring. In addition there is no termination required and no need for termination switches.
- Each HAL DR port is capable of powering any DR produced by Rane—at a cable length up to 1000'. What does this mean for you? No more power calculations or external power supplies!
- In summary, because of these differences, you will be able to implement much more complex situations with regard to remote control devices than was ever possible with the RPM (Drag Net) products.

Setting up Zones and Paging

Remember the Automixer/Ducker block in Drag Net? Such a beast does not exist in Halogen. Instead, Halogen offers some terrific new blocks that combine to accomplish the same applications of the Drag Net Automixer/Ducker block, but with far simpler configuration and vastly superior features. These blocks include:

- Distributed Program Bus—provides a central place for configuring all background music channels and any other audio that you want distributed to all zones
- Paging System—a central place for configuring paging needs for your entire system, automatically includes ducking functionality
- Zone Processor—defines a specific audio zone, automatically includes the Distributed Program Bus channels as well as paging

Index

A

- Administrative rights requirements ... 4
- AM1 and AM2 RADs..... 17
- Asserting
 - vs. activating presets..... 74

B

- Base Rooms..... 59
- Baseline preset..... 76
- Best Practices
 - control links..... 56
 - for HAL Paging System..... 43
 - for presets..... 80
- Blocks
 - contained in Zone Processor..... 35
 - Emergency Paging Zone..... 41
 - in multiple active presets..... 71
 - purpose of Room Combine Processor..... 58
- Busy status, paging..... 41

C

- CAT 5 cable
 - how HAL System uses it..... 13
- Caution status, paging..... 41
- Command control..... 47
- Command preset
 - concept..... 76
- Communications between Halogen and HAL..... 29
- Computer requirements for running Halogen 3

Configuration files

- adding notes..... 88
- overview..... 87

Connections

- maximum on HAL1..... 8

Control Links

- and presets..... 48
- best practices..... 56
- components of..... 47
- creating..... 48
- in a room combine..... 63
- including a switch..... 50
- including three or more controls... 51
- Link Master..... 53
- overview..... 44
- priority..... 52
- types of..... 45

Controlling presets..... 74

Controls

- participating in multiple control links..... 52

Creating

- Distributed Program Bus..... 33

D

- Device labels, generating..... 89
- DHCP, using with HAL..... 30
- Digital Remotes See DRs
- Distributed Program Bus
 - creating..... 33
 - in a room combine..... 63

overview.....	32
Documentation overview.....	4
Drag Net, transitioning from.....	92
DRs	
available models.....	20
overview.....	19

E

Emergency Paging Zone	
configuring.....	41
Ethernet communications.....	29
Expansion Units	See EXPs
EXPs	
EXP1 hardware description.....	24
overview.....	23

F

FireWire.....	23
Firmware, upgrading.....	90
Front panel description, HAL1.....	8

G

Generating device labels.....	89
-------------------------------	----

H

HAL System	
documentation.....	4
introduction.....	6
HAL1 device	
front panel description.....	11
maximum connections.....	8

overview.....	8
rear panel description.....	9

Halogen

installing and starting.....	85
introduction.....	6, 27
requirements for running.....	3
uninstalling.....	91
upgrading.....	90

Hardware components, introduction... 6

Help

System.....	4
-------------	---

I

Installation

installing Halogen.....	85
Introduction to HAL System.....	6
IP addresses, using static.....	30

L

Labels, generating for RADs..... 89

Level

block	
in Zone Processor.....	36
control.....	45

Link Master.....53

M

Maximum connections on HAL1..... 8

N

Notes	
adding to a Halogen configuration file	88

O

Overview	1
Distributed Program Bus	32
DRs	19
EXPs	23
Halogen	27
Halogen configuration files	87
of control links	44
of presets	69
Paging	38
Room Combine	58
Zone Processing	34

P

Pager1	
LED status indicators	41
Pager1 device	16
Paging	
configuring emergency zone	41
in a room combine	63
overview	38
Paging Manager	39
Paging Scenario	39
working with priorities and numbers	40
Paging Station	38
Paging status	41

Paging System

best practices	43
components	38
paging status	41
recommended work flow	42

Paging Zone

block	
in Zone Processor	37

Ports required

Presets

and control links	48
asserting vs. activating	74
Baseline	76
best practices	80
control types	74
creating	77
giving end users control over	78
overview	69
saving changes made by end user	78
ScratchPad	78
work flow for creating	79

Priority

in control links	52
------------------	----

Priority Selector block

in Zone Processor	36
-------------------	----

R

RADs

description of hardware	14
generating labels	89

overview.....	13
using as portable devices.....	18
RADs, generating labels.....	89
RADX.....	18
Ready status, paging.....	41
Rear panel description, HAL1.....	8
Remote Audio Devices	See RADs
Requirements	
Administrative rights.....	4
system.....	3
Room Combine	
and control links, paging, and Distributed Proj	
base rooms.....	59
controlling room configuration.....	67
overview.....	58
recommended work flow.....	59, 68
Room Processors.....	67
Room Combine Processor	
purpose.....	58
Room Processor.....	67
Routers, using with HAL.....	30

S

Scenario, paging	See Paging Scenario
Scratch Pad.....	78
Selector control.....	45
Selector preset	
concept.....	76
Starting Halogen.....	85
Static IP addresses, using with HAL..	30

Status	
paging.....	41
Switches, in control links.....	50
System Overview.....	1
System requirements.....	3

T

Toggle control	
concept.....	44
Toggle preset	
concept.....	76

U

Uninstalling Halogen.....	91
Upgrading Halogen/HAL firmware...	90

W

Workflow	
for configuring HAL Paging System	42
for creating presets.....	79
for creation of entire HAL audio system	82
Room Combine.....	59, 68

Z

Zone Processing	
overview.....	34
Zone Processor	
blocks contained within.....	35
Level block.....	36
Paging Zone block.....	37
Priority Selector block.....	36

Glossary

A

Active Presets list

A dynamic list of active presets maintained by the system that changes as presets are asserted, activated, and deactivated. The presets are listed in priority order. When a preset is asserted or activated, it goes to the top of the list and its parameter values overlay the current working values for the corresponding system parameters. When a preset is deactivated it is removed from the list.

AES3

A standard from the Audio Engineering Society used for the transport of digital audio signals between professional audio devices.

Assert

To "turn on" a Command preset. For Drag Net users, note that "assert" is the equivalent to "recall".

B

Base Room

A room that cannot be subdivided. A base room can be combined with other base rooms to form new rooms, but the base room itself cannot be broken down any further.

Baseline Preset

Containing the default settings and link activation states for all the processing and control blocks in your system configuration, the Baseline serves as a foundation for your system. It is a Command preset and, therefore, can never be deactivated. Also, unlike other Command presets, the Baseline can never be deleted. It is always there to serve as the default fallback preset when no other presets are active.

Block

A processing or control element available for use in your audio system. You drag and drop I/O and Host Processing blocks from the Processing Workspace palettes to the Processing Map. Most blocks have input and output nodes on them that you use to wire the block into your signal path. Blocks also have properties associated with them that are accessed by double-clicking the block. Some blocks are quite simple while others are very complex.

C

Command control

Has no state. A Command control simply allows you to initiate an action. Unlike a Toggle, you cannot undo a Command. The most common usage of Command controls is to assert a preset.

Control Link

A link between two or more system controls that causes the controls to track one another. The control link contains the link participants, activation state, current value, Link Master designation, and priority.

Control Link Activation State

A user-configurable state that dictates the enabled state of a link. When a link is not Active, it is disabled.

control link priority

Determines what to do when a control is a participant in more than one active control link. The control is only active in the highest priority active link.

control link source

The control that you drag onto the control link target.

control link target

The control onto which you will drop one or more other controls to create a control link. Think of the control link target as a bucket into which you place all the other controls participating in the link.

Control Link Type

The HAL System includes four types of control links (Level, Selector, Toggle, and Command). All controls participating in a control link must be the same type. Level controls, which are generally associated with volume, have a continuous series of states that are represented by a slider. Selector controls allow the end user to select an item from a list. Toggle controls allow you to switch between two states — on or off. A Command control has no state. It simply allows you to initiate an action.

Control Link Value

The value maintained by a control link and shared by all participants in the link. For example, a Level link maintains a Level value, a Selector link maintains a specific selection, and a Toggle link maintains the toggle state (on or off). A Command link has no value.

D

DHCP

Short for "Dynamic Host Configuration Protocol," a protocol for assigning dynamic IP addresses to devices on a network.

Digital Remote

Digital Remote (DR) hardware devices, a variety of which are available for your HAL System, provide system users with easy control of volume, audio selection, preset recall, and more—out in the locations where the control is needed.

DNS

Short for Domain Name System, DNS is a directory service that translates domain names or host names into IP addresses.

F

FireWire

A form of connectivity similar to USB, meant to connect peripherals such as MP3 Players and digital cameras to the computer. The HAL System uses FireWire to connect Expansion Units to the HAL device. FireWire operates around 30 times faster than a USB 1.1 connection. FireWire is technically known as IEEE-1394.

I

Inverted option

An option for a Toggle link participant that, when selected, reverses the behavior of the Toggle control with respect to the link value. When the link's value is true, the participant's value is false (and vice versa).

L

Level control

Generally associated with volume, Level controls have a continuous series of states that are represented by a slider.

Link Master

The control link participant that dictates the values of the other link participants when the link becomes active. Pertains to Level, Toggle, and Selector control links only. Command control links do not have a Link Master.

Link Name

A customizable name identifying a particular control link.

M

MAC address

Media Access Control address - a unique value associated with a network adapter. MAC addresses are also known as hardware addresses or physical addresses. They uniquely identify an adapter on a LAN (local area network).

O

offline mode

When you are not connected to a HAL device, you are in offline mode.

online mode

When you are connected to a HAL device, you are in online mode.

P

Paging Scenarios

One or more paging zones treated as a group for paging purposes. Paging Scenarios are defined and named by the designer, who then also assigns specific Scenarios to specific Paging Stations. End users always page into Scenarios.

Paging Zone

A destination for paging input. Paging Zones are the components that make up a Paging Scenario.

Palette

The area on the left side of Halogen's Hardware Workspace and Processing Workspace that contains elements available for use in your audio design. The Hardware Palette contains hardware devices available for use while the Processing Workspace palettes contain blocks and controls available for use.

Participants

The set of controls participating in a control link. A single control can participate in multiple links but can only be active in one link at a time (determined by link priority).

Preset

A snapshot of one or more system blocks (with their parameters set to specific values) that you or an end user can apply to the audio system at any given time - typically for a specific event or purpose.

Preset Control Type

Determines how you and your end users can control the preset. The control type you choose also determines some of the preset's characteristics, which in turn affects control of the preset. There are three preset control types—Toggle, Selector, and Command. Regardless of its control type, each preset accomplishes the same thing—it overwrites the system's current working values with its stored values.

Processing Workspace

The area of the Halogen user interface in which you configure your audio processing, signal flow, and control links.

R

RaneLink II

A service needed by Halogen to establish a connection with HAL.

Recall

An old term used in the Drag Net product that means to "turn on" a preset. The equivalent term in Halogen is "assert."

Remote Audio Device

Also called a RAD. Primary purpose is to amplify, digitize, and transmit a digital audio signal via CAT 5 cable to a HAL host device. RADs can also receive a digital signal from the HAL and then convert it to analog before sending it to its attached audio equipment. RADs are capable of transmitting and receiving up to four channels of digital audio (two in each direction). To better fit your needs, however, Rane offers various RAD models. Most RAD models are designed to fit in a standard U.S. two, three, or four gang switchbox.

S

Scratch Pad

A preset feature that, when enabled, tracks and stores changes made to any of the preset values.

Selector control

Allows the end user to make a selection from a list. Uses for a Selector control might include selecting a music channel, a preset, a room combination, and so on.

static IP addresses

An IP address that does not change. Static IP addresses must be manually assigned to devices.

T

Toggle control

Allows the user to switch between two states — on or off. A common usage of a Toggle control is to mute/unmute audio. Another common usage is to activate/deactivate a preset.