

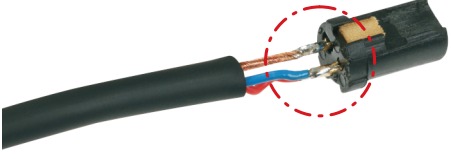
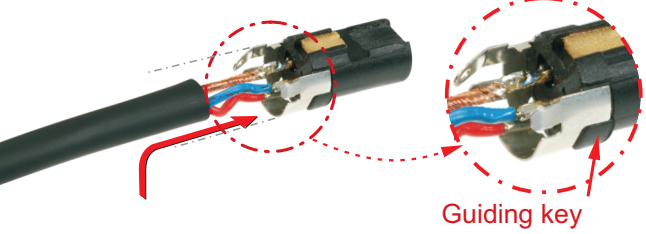


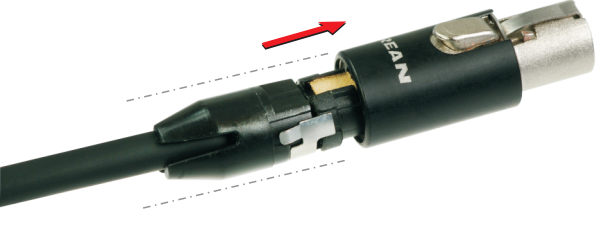



ASSEMBLY INSTRUCTION

TINY xlr | Cable Connector - RT*FC-B & RT*FC-B-W

- A**  Slide the rubber sealing (1) (RT*FC-B-W only) and the boot (2) onto the cable.
- B**  Prepare cable as shown.
- C**  Insert wires into the terminals and solder them.
- D**  Apply the grounding to the cable and position it on the insert.
Attention: Pay attention to the key.
- E**  Grounding Option: Ground with housing, solder #1 to the solder lug of the grounding.
- F**  Put chuck onto the cable.
Attention: Pay attention to the guiding key.
Black chuck: O.D. 2.0 - 3.5 mm
Blue chuck: O.D. 3.0 - 4.5 mm
- G**  Slide insert and chuck together into the housing.
- H**  Screw the bushing onto the connector. The RT*FC-B type is ready.

Rubber sealing assembly on page 2.

SINGLE BAG PACKAGING:

The rubber sealing can be easily applied by hand.



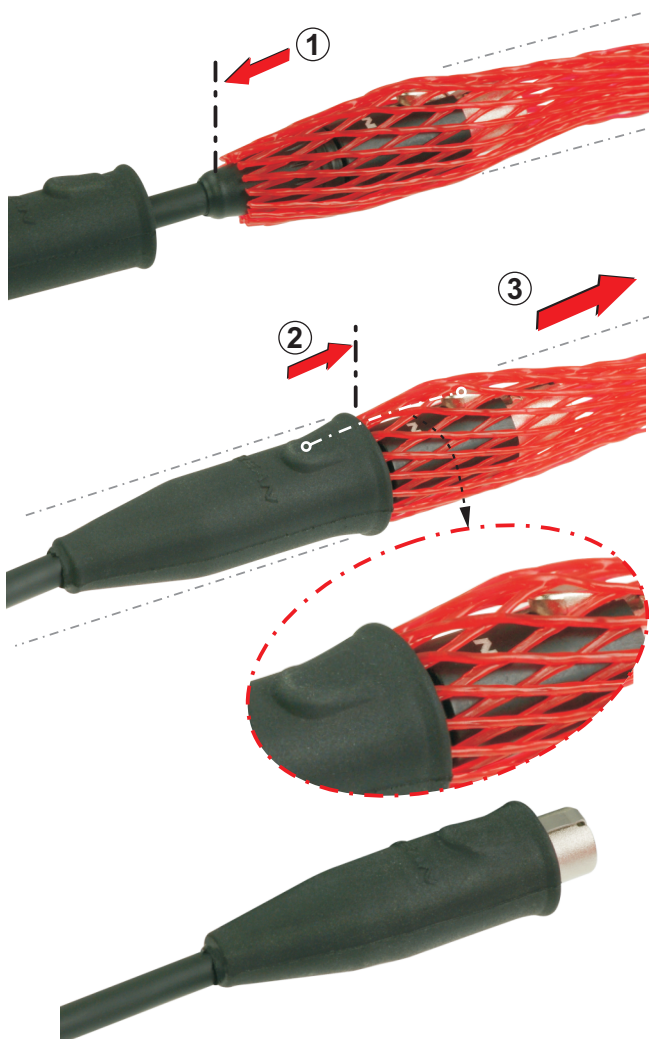
► Finish



Attention: Pay attention to the position of the latch (see the picture).

BULK PACKAGING:

For large quantity assemblies an assembly hose is supplied with bulk packaging (-D).



① Put the assembly hose onto the connector over the end of the boot (as shown in picture).

② Push the rubber sealing onto the assembly aid.
Attention: Pay attention to the position of the latch (see the picture).

③ Hold the cable and pull the assembly tool jerkily off the connector (the sealing jacket is pulled in position).

► Finish

NEUTRIK AG	LI	T: +423 / 237 24 24	F: +423 / 232 53 93	NEUTRIK France	FR	T: +33 1 / 4131 6750	F: +33 1 / 4131 0511
NEUTRIK USA Inc.	USA	T: +1 704 / 972 3050	F: +1 704 / 438 9202	NEUTRIK Tokyo Ltd.	JP	T: +81 3 / 3663 4733	F: +81 3 / 3663 4796
NEUTRIK (UK) Ltd.	UK	T: +44 1983 / 811 441	F: +44 1983 / 811 439	NEUTRIK Hong Kong Ltd.	HK	T: +852 / 2687 6055	F: +852 / 2687 6052
NEUTRIK Vertriebs GmbH	DE/NL/AT/DK	T: +49 8131 / 280 890	F: +49 8131 / 280 830				