


ROBE

ROBIN[®] CycFX 8

ROBIN[®] CycFX 8

Wireless DMX
CRMX[™]

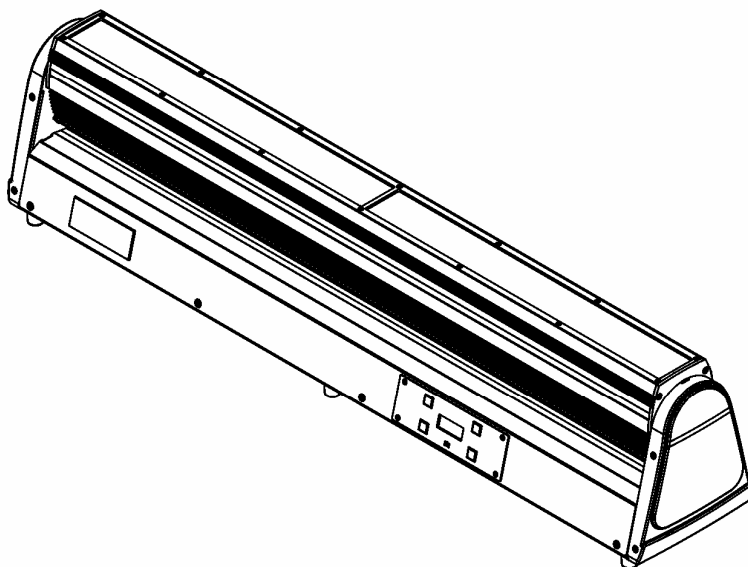

USER MANUAL

Version 1.2

ROBE[®] Lighting s.r.o. • Czech republic • www.robe.cz

Table of contents

1. Safety instructions	3
2. Fixture exterior view	5
3. Installation	5
3.1 Rigging the fixture.....	5
3.2 Connection to the mains	6
3.3 DMX 512 connection	6
3.4 Wireless DMX operation.....	7
Robin CycFX 8- DMX protocol.....	8
5. Control menu map.....	15
6. Control menu.....	18
6.1 Addressing (DMXA).....	18
6.2 Fixture information (Info)	18
6.3 Personality (Pers).....	19
6.4 Manual Control (Manual)	20
6.5 Test program (Test Prg)	20
6.6 Stand-alone (St Alone).....	20
6.7 Reset	21
6.8 Special functions (Special)	21
7. RDM	22
8. Technical specifications	23
9. Cleaning and maintenance	28
9.1 Replacing a fuse	28

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE POWERING OR INSTALLING YOUR Robin CycFX 8!
Save it for future reference.**

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Please consider that damages caused by manual modifications to the device are not subject to warranty.

1. Safety instructions

DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT!

Make sure that the available voltage is not higher than stated on the rear panel of the fixture. This fixture should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized distributor or local power company.

Always disconnect the fixture from AC power before cleaning, removing or installing the fuses, or any part.

Do not overload wall outlets and extension cords as this can result in fire or electric shock.

Make sure that the power cord is never crimped or damaged by sharp edges. Check the fixture and the power cord from time to time.

Do not install the unit near naked flames.

During the operation the housing becomes hot (up to 80°C)

Refer servicing to qualified service personnel.

This fixture falls under protection class I. Therefore this fixture has to be connected to a mains socket outlet with a protective earthing connection.

Do not connect this fixture to a dimmer pack.

**LED light emission. Risk of eye injury.
Do not look straight at the fixture's LEDs during operation. The intense light beam may damage your eyes.**

Keep combustible materials at least 20 cm away from the fixture.

If the fixture has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

Avoid brute force when installing or operating the fixture.

The fixture was designed for indoor use only.

Robin CycFX 8

When choosing the installation spot, please make sure that the fixture is not exposed to extreme heat or dust.

Avoid using the unit in locations subject to possible impacts.

The fixture body never must be covered with cloth or other materials.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Do not block the front objective LEDs with any object when the fixture is under operation.

The fixture becomes very hot during operation. Allow the fixture to cool approximately 30 minutes prior to manipulate with it.

Operate the fixture only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the fixture. Most damages are the result of unprofessional operation!


Do not attempt to dismantle or modify the unit.

Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!


Please use the original packaging if the fixture is to be transported.

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock etc.

2. Fixture exterior view

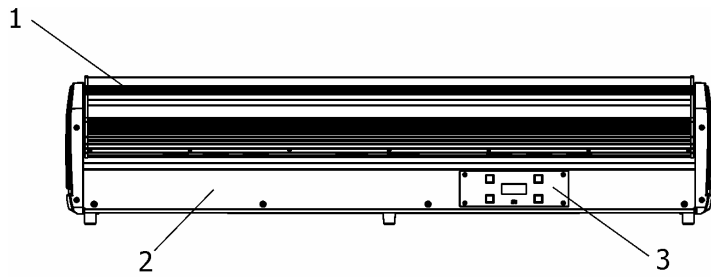

- 1. Moving head
- 2. Base of fixture
- 3. Control panel

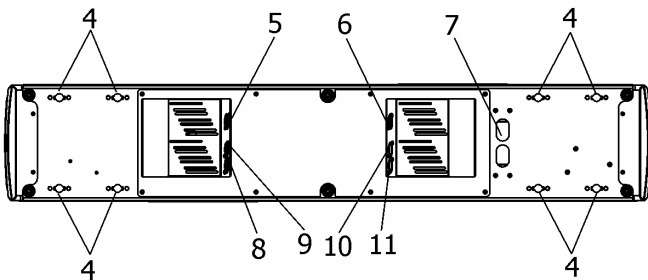


- 4. ¼- turn locks
- 5. Power OUT (Neutrik PowerCon)
- 6. Power IN (Neutrik PowerCon)
- 7. Attachment point for safety wire
- 8. DMX OUT (3-pin XLR)
- 9. DMX OUT (5-pin XLR)
- 10. DMX IN (5-pin XLR)
- 11. DMX IN (3-pin XLR)

3. Installation

3.1 Rigging the fixture

The Robin CycFX 8 can be rigged in any orientation on a truss without altering its operation characteristics. Installation on a truss allows the mounting adapters (1) fastened to the fixture base with ¼-turn quick locks. Also standard Omega holders for Robe fixtures or mounting bar CF8 (optional accessory) can be used instead mounting adapters. Pull the safety wire through the attachment point (2) and around the truss.


For overhead use, always install a safety wire that can hold at least 10 times the weight of the fixture. You must only use safety wire with screw-on carbine.

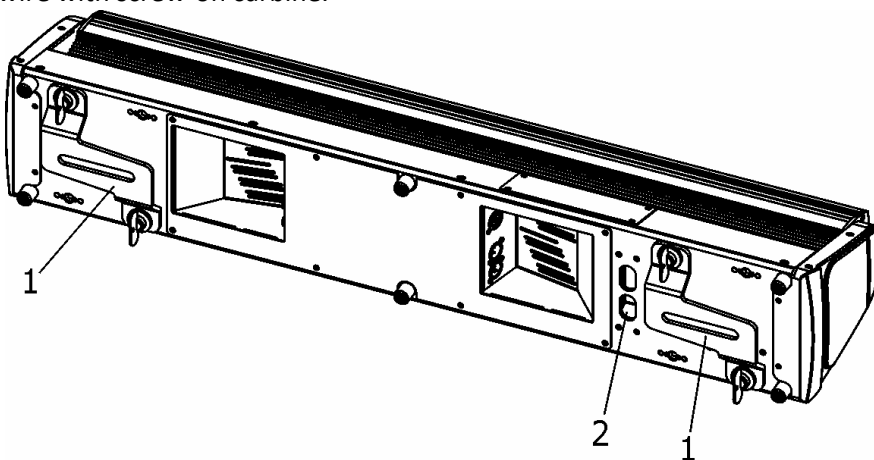

Ensure that the structure (truss) to which you are attaching the fixture is secure

Caution: Fixtures may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do not install the device and consult installation with an expert.

Tilt position concerning DMX values is shown on the picture below.

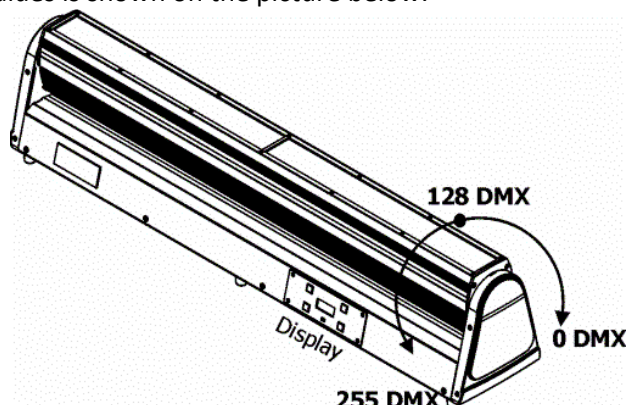

3.2 Connection to the mains

Fixtures must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

Install a suitable plug on the power cord, note that the cores in the power cord are colored according to the following table.

Core (Eu)	Core (US)	Connection	Plug Terminal Marking
Brown	Black	Live	L
Light blue	White	Neutral	N
Yellow/Green	Green	Earth	

This device falls under class one and must be grounded!

Design of the Robin CycFX 8 allows to connect several fixtures to AC mains power in one interconnected daisy chain using power input and throughput connectors. Needed daisy chain cords are stated in the chapter “Technical specifications “

The max. number of connected fixtures depends on the AC mains power voltage:

15 fixtures at power supply= 230V

7 fixtures at power supply= 120V

Do not overload the supply line and the connecting leads.

3.3 DMX 512 connection

The fixture is equipped with two 5-pin XLR connectors for DMX input/output. Only use a shielded twisted-pair cable designed for RS-485 and 5-pin XLR- connectors in order to connect the controller with the fixture or one fixture with another.


Wiring of the XLR connectors:

DMX output
XLR socket (rear view):



1 – Shield 2 - Signal (-) 3 - Signal (+) 4 – Not connected


DMX input
XLR plug (rear view):

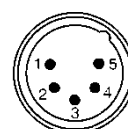

5 – Not connected

To build a DMX chain

1. Connect the DMX output of the controller directly with the DMX input of the first fixture in the DMX chain.
2. Connect the DMX output of the first fixture in the DMX chain with the DMX input of the next fixture.
3. Always connect the DMX output with the input of the next fixture until all fixtures are connected.
Do not overload the link. Max. 32 fixtures may be connected on a DMX link.

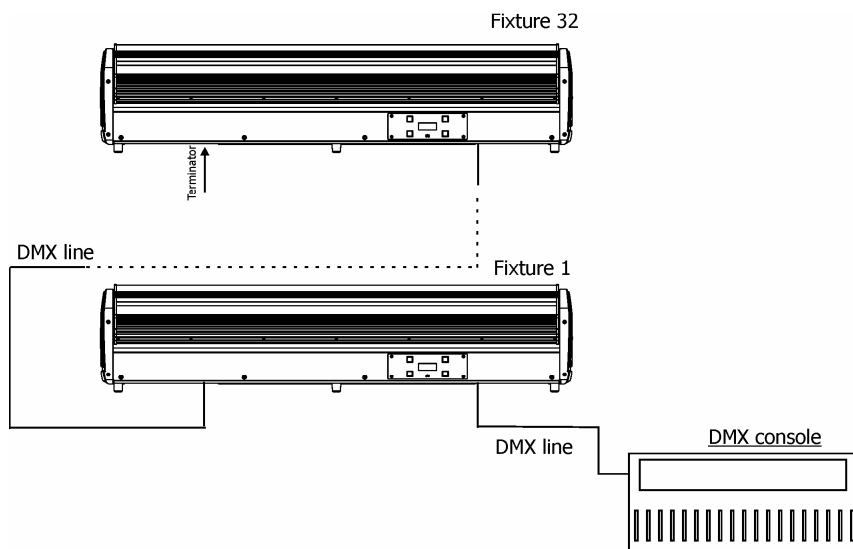

Caution: Terminate the link by installing a termination plug in the output of the last fixture. The termination plug is a male 3-pin XLR plug with a 120 Ohm resistor soldered between Signal (-) and Signal (+).

3.4 Wireless DMX operation

The wireless version of the Robin CycFX 8 (Robin CycFX 8/W) is equipped with the Lumen Radio CRMX module and antenna for receiving DMX signal. CRMX module operates on the 2.4 GHz band.

1. Select wireless DMX input from the menu **PErS** (PErS-->dM.IM.-->dM.UL.).
2. To link the fixture with DMX transmitter.
The fixture can be only linked with the transmitter by running the link procedure at DMX transmitter .
After linking , the level of DMX signal (0-100 %) is displayed in the menu item "**r.InF**" (SPEC-->rAdI.--> r.InF.)
3. To unlink the fixture from DMX transmitter.
The fixture can be unlinked from receiver via the menu item "**r.UnL.**" (SPEC-->rAdI.--> r.UnL.).

Robin CycFX 8- DMX protocol

Version 1.1

Mode/Channel				Value	Function	Type of control
1	2	3	4			
1	1	1	1	0-255	Tilt (8 bit) Tilt movement by 270°	proportional
-	2	2	2	0-255	Tilt (16 bit) Fine movement of tilt	proportional
2	3	3	3	0	Tilt speed (time) Standard mode	Step step
				1	Max. Speed mode	
				2-255	Tilt speed Speed from max. to min.	proportional
				2-255	Tilt time Time from 0.2 s to 25.5 s.	proportional
3	4	4	4	0-9	Special functions Reserved <i>To activate following functions , stop in DMX value for at least 3 sec. and shutter must be closed at least 3 sec. (Shutter channel 13/19 must be at range of 0-31 DMX). Corresponding menu items are temporarily overridden except DMX Input.</i>	step step
				10-14	DMX input: Wired DMX *	
				15-19	DMX input: Wireless DMX* * function is active only 10 seconds after switching the fixture on	
				20-29	Reserved	step step step step step step step step step step
				30-39	RGBW colour mixing mode	
				40-49	CMY colour mixing mode	
				50-59	Tilt speed mode	
				60-69	Tilt time mode	
				70-79	Blackout while tilt moving	
				80-89	Disabled blackout while tilt moving	
				90-99	Silent zoom On	
				100-109	Silent zoom Off	
				110-119	White counting On	
				120-129	White counting Off	
				130-139	Reserved <i>To activate following reset function, stop in DMX value for at least 3 sec.</i>	step step step
				140-149	Tilt reset	
				150-179	Reserved	
				180-189	Zoom reset	
				190-199	Reserved	
200-209	Total reset	step				
210-255	Reserved					
4	5	5	5	0-255	Red (Cyan) coarse - all pixels ** Red LEDs saturation control (0-100%)	proportional
-	6	6	6	0-255	Red (Cyan) fine - all pixels ** Red LEDs saturation fine control min.—>max.	proportional

Robin CycFX 8

11	16	16	16	0-63 64-127 128-191 192-255	Pixel effects speed Speed from min. —>max. without fade time Speed from max. —>min. without fade time (op. direction) Speed from min. —>max. with fade time Speed from max. —>min. with fade time (op. direction)	proportional proportional proportional proportional
12	17	17	17	0-255	Zoom coarse Zoom from min. to max. beam angle	proportional
-	18	18	18	0-255	Zoom fine Fine zooming from min.—>max.	proportional
13	19	19	19	0-31 32-63 64-95 96-127 128-143 144-159 160-191 192-223 224-255	<u>Shutter/ Strobe (All pixels)</u> Shutter closed Shutter open Strobe-effect from slow to fast Shutter open Opening pulses in sequences slow--> fast Closing pulses in sequences fast --> slow Shutter open Random strobe-effects from slow to fast Shutter open	step step proportional step proportional proportional step proportional step
14	20	20	20	0 - 255	<u>Dimmer coarse (All pixels)</u> Dimmer intensity from 0% to 100%	proportional
-	21	21	21	0 - 255	<u>Dimmer fine (All pixels)</u> Dimmer intensity from min.—>max.	proportional
-	-	22	22	0-255	Red pixel 1 Red LED saturation control (0-100%)	proportional
-	-	23	23	0-255	Green pixel 1 Green LED saturation control (0-100%)	proportional
-	-	24	24	0-255	Blue pixel 1 Blue LED saturation control (0-100%)	proportional
-	-	-	25	0-255	Dimmer 1 Dimmer intensity from 0% to 100%	proportional
-	-	25	26	0-255	Red pixel 2 Red LED saturation control (0-100%)	proportional
-	-	26	27	0-255	Green pixel 2 Green LED saturation control (0-100%)	proportional
-	-	27	28	0-255	Blue pixel 2 Blue LED saturation control (0-100%)	proportional
-	-	-	29	0-255	Dimmer 2 Dimmer intensity from 0% to 100%	proportional
-	-	28	30	0-255	Red pixel 3 Red LED saturation control (0-100%)	proportional
-	-	29	31	0-255	Green pixel 3 Green LED saturation control (0-100%)	proportional

Robin CycFX 8


-	-	30	32	0-255	Blue pixel 3 Blue LED saturation control (0-100%)	proportional
-	-	-	33	0-255	Dimmer 3 Dimmer intensity from 0% to 100%	proportional
-	-	31	34	0-255	Red pixel 4 Red LED saturation control (0-100%)	proportional
-	-	32	35	0-255	Green pixel 4 Green LED saturation control (0-100%)	proportional
-	-	33	36	0-255	Blue pixel 4 Blue LED saturation control (0-100%)	proportional
-	-	-	37	0-255	Dimmer 4 Dimmer intensity from 0% to 100%	proportional
-	-	34	38	0-255	Red pixel 5 Red LED saturation control (0-100%)	proportional
-	-	35	39	0-255	Green pixel 5 Green LED saturation control (0-100%)	proportional
-	-	36	40	0-255	Blue pixel 5 Blue LED saturation control (0-100%)	proportional
-	-	-	41	0-255	Dimmer 5 Dimmer intensity from 0% to 100%	proportional
-	-	37	42	0-255	Red pixel 6 Red LED saturation control (0-100%)	proportional
-	-	38	43	0-255	Green pixel 6 Green LED saturation control (0-100%)	proportional
-	-	39	44	0-255	Blue pixel 6 Blue LED saturation control (0-100%)	proportional
-	-	-	45	0-255	Dimmer 6 Dimmer intensity from 0% to 100%	proportional
-	-	40	46	0-255	Red pixel 7 Red LED saturation control (0-100%)	proportional
-	-	41	47	0-255	Green pixel 7 Green LED saturation control (0-100%)	proportional
-	-	42	48	0-255	Blue pixel 7 Blue LED saturation control (0-100%)	proportional
-	-	-	49	0-255	Dimmer 7 Dimmer intensity from 0% to 100%	proportional
-	-	43	50	0-255	Red pixel 8 Red LED saturation control (0-100%)	proportional
-	-	44	51	0-255	Green pixel 8 Green LED saturation control (0-100%)	proportional

Robin CycFX 8

-	-	45	52	0-255	Blue pixel 8 Blue LED saturation control (0-100%)	proportional
-	-	-	53	0-255	Dimmer 8 Dimmer intensity from 0% to 100%	proportional

*Halogen lamp effect during dimming

Tilt movement direction:

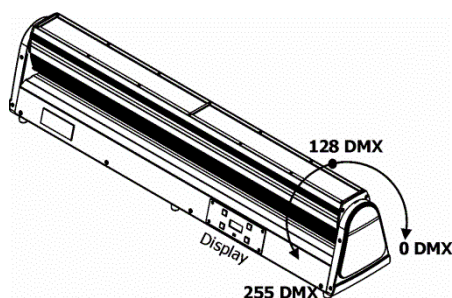

Channel Pixel effects

DMX value	Effect	Type of Control
0-2	No function	Step
3-4	Effect 1	Step
5-6	Effect 2	Step
7-8	Effect 3	Step
9-10	Effect 4	Step
11-12	Effect 5	Step
13-14	Effect 6	Step
15-16	Effect 7	Step
17-18	Effect 8	Step
19-20	Effect 9	Step
21-22	Effect 10	Step
23-24	Effect 11	Step
25-26	Effect 12	Step
27-28	Effect 13	Step
29-30	Effect 14	Step
31-32	Effect 15	Step
33-34	Effect 16	Step
35-36	Effect 17	Step
37-38	Effect 18	Step
39-40	Effect 19	Step
41-42	Effect 20	Step
43-44	Effect 21	Step
45-46	Effect 22	Step
47-48	Effect 23	Step
49-50	Effect 24	Step
51-52	Effect 25	Step
53-54	Effect 26	Step
55-56	Effect 27	Step
57-58	Effect 28	Step
59-60	Effect 29	Step

Robin CycFX 8

61-62	Effect 30	Step
63-64	Effect 31	Step
65-66	Effect 32	Step
67-68	Effect 33	Step
69-70	Effect 34	Step
71-72	Effect 35	Step
73-74	Effect 36	Step
75-76	Effect 37	Step
77-78	Effect 38	Step
79-80	Effect 39	Step
81-82	Effect 40	Step
83-84	Effect 41	Step
85-86	Effect 42	Step
87-88	Effect 43	Step
89-90	Effect 44	Step
91-92	Effect 45	Step
93-94	Effect 46	Step
95-96	Effect 47	Step
97-98	Effect 48	Step
99-100	Effect 49	Step
101-102	Effect 50	Step
103-104	Effect 51	Step
105-106	Effect 52	Step
107-108	Effect 53	Step
109-110	Effect 54	Step
111-112	Effect 55	Step
113-114	Effect 56	Step
115-116	Effect 57	Step
117-118	Effect 58	Step
119-120	Effect 59	Step
121-122	Effect 60	Step
123-124	Effect 61	Step
125-126	Effect 62	Step
127-128	Effect 63	Step
129-130	Effect 64	Step
131-132	Effect 65	Step
133-134	Effect 66	Step
135-136	Effect 67	Step
137-138	Effect 68	Step
139-140	Effect 69	Step
141-142	Effect 70	Step
143-144	Effect 71	Step
145-146	Effect 72	Step
147-148	Effect 73	Step
149-150	Effect 74	Step
151-152	Effect 75	Step
153-154	Effect 76	Step
155-156	Effect 77	Step
157-158	Effect 78	Step
159-160	Effect 79	Step
161-162	Effect 80	Step
163-164	Effect 81	Step

Robin CycFX 8

165-166	Effect 82	Step
167-168	Effect 83	Step
169-170	Effect 84	Step
171-172	Effect 85	Step
173-174	Effect 86	Step
175-176	Effect 87	Step
177-178	Effect 88	Step
179-180	Effect 89	Step
181-182	Effect 90	Step
183-255	Reserved	

5. Control menu map

Default settings=Bold print

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7
DMXA	Set DMXA	001-255				
Info	POn Time	Total				
		Reset				
	DMX In	Tilt	0-255			
		:				
		Dimm F	0-255			
	Temp	Current				
		High Res				
		Highest				
	Sw Ver	IC-1				
		IC-2				
		IC-3				
		IC-4				
Pers						
	DMX Pres	Mode 1				
		:				
		Mode 4				
	DMX In	Wired				
		Wireless				
	Tilt Rev	On, Off				
	T. Mode	Speed				
		Time				
	T. Feed	On, Off				
	BLC DMC	On, Off				
	Act BLC	T Mov	On, Off			
	Display	Turn				

Robin CycFX 8

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7
		On/Off T	On, Off			
		Contrast	0-100%			
		Backlight	0-100%			
	C Cal M	On, Off				
	C Mix M	RGBW, CMY				
	Whi Cnt	On, Off				
	Sil Zom	On, Off				
	Mic Sens	0... 10 ...19				
	I Ef Pos	Tilt				
		:				
		Dimm F				
		Store				
	Defaults					
Manual	Tilt					
	:					
	Dimm F					
Test Prg						
Sta Alone	Music T	On, Off				
	Auto Run	Off				
		Test				
		User				
	Pr Play	Test Prg				
		User Prg				
	Pr Edit	Step 1	Prg End			
		:	Tilt			
		Step 42	:			
			Copy			


Robin CycFX 8

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7
Reset						
Special	RDM Low					
	RDM Hight					
	Wireless	Stat				
		Unlink				
	Adjust	DMX Val	Tilt	0-255		
			:			
			Dimm F	0-255		
		Calib	Cal Mech	Tilt C.	0-255	
				Store		
			Cal Col	R C 1	0-255	
				G C 1	0-255	
				B C 1	0-255	
				W C 1	0-255	
				:		
				R C 8	0-255	
				G C 8	0-255	
				B C 8	0-255	
				W C 8	0-255	
				Store		
			Cal Temp			
		Load d C				
	Sw Upd	On, Off				

6. Control menu

The Robin CycFX 8 is equipped with 2-line LCD display which allows to set the fixture's behaviour according to your needs, obtain information on its operation, control various range of effects and lastly program it, if it has to be used in a stand-alone mode.

Control board:

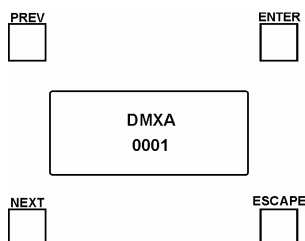

[ESCAPE] button used to leave the menu without saving changes.

[NEXT] , [PREV] buttons for moving between menu items and for value adjusting.

[ENTER] button used to enter the selected menu (menu item) and to confirm adjusted value.

After switching the fixture on, display shows current DMX address.

Note: to turn the display , press and hold the [ESCAPE].

6.1 Addressing (DMXA)

Set DMXA- Use this menu item to set the DMX start address of the fixture, which is defined as the first channel from which the Robin will respond to the controller.

If you set, for example, the address 15, the Robin CycFX 8 will use channels 15 - 58 for control (if Mode 1 is selected).

Please, be sure that you do not have any overlapping channels in order to control each Robin CycFX 8 correctly and independently from any other fixture on the DMX data link.

If there is no data received at the DMX input, the display will start to flash "0001" with actually stored DMX address.

6.2 Fixture information (Info)

POn Time - Power on time. Select this menu to read the number of fixture operation hours.

Total - The item shows the total number of the operation hours since the Robin CycFX 8 has been fabricated.

Reset - The item shows the number of the operation hours that the Robin CycFX 8 has been powered on since the counter was last reset.

In order to reset this counter to 0, press and hold both [NEXT] and [PREV] buttons and the [Enter] button at the same time.

DMX In - DMX readout. The menu is used to read DMX values of each channel received by the fixture.

Temp - Temperature. The menu shows temperature in the moving LED head.

Current - A current temperature of the moving LED head.

Highest - A maximum temperature of the moving LED head since the fixture has been fabricated.

High Res - A maximum temperature of the the moving LED head since the counter was last reset.

In order to reset this counter, press and hold both [NEXT] and [PREV] buttons and the [Enter] button at the same time.

Sw Ver - Software versions. Select this item to read the software version of the fixture modules.

IC-1 - A zoom processor.

IC-2 - A display processor.

IC-3 - LED driver processor.

IC-4 - LED control processor

6.3 Personality (Pers)

DMX Pres - DMX preset. Use the menu to select desired channel mode.

Mode 1 - 14 control channels

Mode 2 - 21 control channels

Mode 3 - 45 control channels

Mode 4 - 53 control channels

DMX In - DMX input. Use the menu to select mode of receiving DMX signal.

Wired - DMX signal is received by means of the standard DMX cable.

Wireless - DMX signal is received by means of the inbuilt wireless module.

Tilt Rev - Tilt reverse. The item allows to invert tilt movement of the LED head.

T Feed - Tilt Feedback. The menu item allows to return the mowing head to the required tilt position after changing the position by an external force if this option is set on.

Note. The Tilt Feedback should be permanent On, the option Off is not suitable for standard operation and the head of the fixture can be damaged!

BLC DMC - Blackout during movement correction. Set this option on if you wish to close light output during the time when the head goes to its correct position, which has been changed by an external force.

Act Blc - Active blackout. Use this menu if you wish to close the light output during effect changes.

P/T Mov - The menu item allows to close light output while the tilt coordinates are changing.

Display - Display adjusting. This menu allows you to adjust the display behaviour.

Turn - This function turns the display by 180°.

On/Off T - This function allows you to keep the display permanent on or turn it off two minutes after last pressing any button on the control panel.

Contrast - Use this function to adjust contrast of the display (0-100%).

Backlight - Use this function to adjust backlight of the display (0-100%).

C Cal M - Colour calibration mode. If the function is on, the white output (2700K-8000K) from the fixture (and also mixed colours) is more uniform. Each colour is dynamically corrected according to the value set in the menu "Calibrate Effects" (Special-> Adjust-> Calib).

C Mix M - Colour mixing mode. This item allows switching into RGBW or CMY mode. In the CMY mode, the white(8bit)/white (16) bit channels are not active.

Whi Cnt - White counting. If this function is On, the white LED of each pixel lights when a white colour is mixed. The light intensity of the white LED is in a proportion to the intensity of the rest of pixel's LEDs (red, Green, blue) and improves the white output of the pixel. The function influences "pixel modes" only - DMX mode 3 and 4 (and RGBW colour mixing mode has to be set).

Sil Zom - Silent zoom. If this function is on, a speed of the zoom movement is reduced and at the same time

a noise of this movement.

Mic Sens - **Microfon sensitivity.** Enter the menu if you want to adjust the microphone sensitivity (1-max., 19-min.).

Temp Uni - **Temperature unit.** Use the menu item to change temperature unit from °C to °F.

IEf Pos - **Init effect positions.** Use the menu to set all effects to the desired positions at which they will stay after switching the fixture on without DMX signal connected.

Defaults - The menu item allows to set all fixture parameters to the default (factory) values.

6.4 Manual Control (Manual)

Manual C - **Manual control.** Use the menu to control all fixture channels by means of the control panel. Displayed menu items depend on selected DMX mode.

6.5 Test program (Test Prg)

Use this menu item to run a special demo-test sequences without an external controller, which will show you some possibilities of using Robin CycFX.

6.6 Stand-alone (St Alone)

Auto Run - **Presetting playback.** This function allows you to select the program which will be played in the stand-alone mode after switching the fixture on. Selected program will be played continuously in a loop.

Off - The option disables „Auto Run” function.

Test - The option will start built-in test program.

User - The option will start user-created program

Pr Play - **Playing program.** Select this menu to run a user-created program in a loop.

Test Prg - The option runs built-in test program.

User Prg - The option runs user-created program

Select the program you wish and press [ENTER]. The selected program starts running. By Pressing [ENTER] again, program pauses running.

Pr Edit - **Editing program.** Select this menu to edit or create the program. The Robin CycFX 8 has one built-in program and one user-editable program up to 42 steps. Each program step has a step time during which effects last in the current step.

To edit program:

Procedure:

1. Press [NEXT] or [PREV] to select the menu "Pr Edit" and press [ENTER].
2. Press [NEXT] or [PREV] to select the desired program step and press [ENTER] button.
3. Press [NEXT] or [PREV] to select the desired item and press [ENTER] button. Now you can edit by [NEXT] or [PREV] buttons the DMX value (0-255) for selected item:

Prg End. a total number of the program steps (value 1-42). This value you should be set before starting of programming (e.g. if you want to create program with the 10 steps, set Prg End=10).

Tilt	a tilt movement	Stro	a strobe/shutter
Tilt S	a tilt speed	Dimm	a dimmer
Power	a power/special functions	R L 1	a red LED pixel 1
R L A	red LEDs (all pixels)	G L 1	a green LED pixel 1
G L A	green LEDs (all pixels)	B L 1	a blue LED pixel 1

B L A	blue LEDs (all pixels)	Dim 1	a dimmer for pixel 1
W L A	white LEDs (all pixels)	R L 8	a red LED pixel 8
CTO	a colour temperature correction	G L 8	a green LED pixel 8
Vir C	a virtual colour	B L 8	a blue LED pixel 8
Pix E	pixel effects	Dim 1	a dimmer for pixel 1
Px E S	a pixel effect speed	S.Tm	a step time (0-25.5 sec)
Zoom	a zoom movement	COPY	copying the current prog. step to the next prog. step

4. Press [ENTER] button to confirm adjusted value .
5. Press [ESCAPE] button, select next prog. step, press [ENTER] button and repeat steps 3 - 5).

6.7 Reset

This option enables the Robin CycFX 8 to index all effects and return to their standard positions.

6.8 Special functions (Special)

RDM Low - This menu item shows the first part of the RDM identification code.

RDM High - This menu item shows the second part of the RDM identification code.

Wireless - **Wireless DMX status**. The menu serves for reading of the wireless operation status.

Stat - **Wireless DMX information**. The menu item shows level of received signal in %.

UnLink - **Wireless DMX unlink**. The item serves for unlinking the fixture from transmitter.

Adjust - **Adjustment**. The menu allows the fine adjustment of colours.

DMX Val- **DMX values**. Use the menu to set DMX values of fixture's channels.

Calib - A calibration of tilt position of head and white colours.

Cal Mech - A calibration of tilt position.

Note: you can also use DMX controller for calibration of tilt position of head, calibration protocol is following:

Effect	Mode 1	Mode 2	Mode 3	Mode 4
Tilt- fine tilt movement	channel 15	channel 22	channel 46	channel 54

Cal Col - A calibration of colours.

Cal Temp - A setting of temperature of the control processor for LEDs calibration. This temperature has to be set before calibration of colours. Disconnect the fixture from mains and let it at room temperature (cca 25°C) until the fixture gets ambient temperature (as it can last 2 hours and more, better is used cold fixture before its operation). After that, set the ambient (room) temperature in this menu.

Sw Upd - **Software update**. The menu item allows you to update software in the fixture via either serial or USB port of PC.

The following are required in order to update software:

- PC running Windows 95/98/2000/XP/7 or Linux
- DMX Software Uploader
- Flash cable RS232/DMX No.13050624 (if you want to use a serial port of PC)
- Robe Universal Interface (if you want to use an USB port of PC)

Note 1: Software update should execute a qualified person. If you lack qualification, do not attempt the update yourself and ask for help your ROBE distributor.

Note 2: DMX address, programs 1-3 and all items in the menu "Pers" will be set to their default (factory) values.

To update software in the fixture:

I. Installation of the DMX Software Uploader.

1. DMX Software Uploader program is available from the ROBE web site at WWW.robe.cz.

2. Make a new directory (e.g. Robe_Uploader) on your hard disk and download the software to it.
3. Unpack the program to the directory.

II. Fixture software updating.

1. Determine which of your ports is available on your PC and connect it:

- with the DMX input of the fixture if you using the flash cable RS232/DMX
- with the DMX output of the Robe Universal Interface if you using the USB cable.

Disconnect the fixture from the other fixtures in a DMX chain. Turn both the computer and the fixture on. Make sure the lamp is switched off (only if the fixture involves a lamp).

2. Switch the fixture to the updating mode by selecting the "SW Upd " item and press [ENTER].

Note: If you do not want to continue in software update, you have to switch off and on the fixture to escape from this menu.

We recommend to cancel all running programs before starting the Software Uploader.

3. Run the Software Uploader program. Select desired COM and then click on the Connect button. (Select COM if the serial port is used or Robe Universal Interface if the USB port is used).

If the connection is OK, click on the "Start Uploading button" to start uploading. It will take several minutes to perform software update.

If the option "Incremental Update" is not checked, all processors will be updated (including processors with the same software version).

If you wish to update only later versions of processors, check the "Incremental Update box".

Avoid interrupting the process. Update status is being displayed in the Info Box window.

When the update is finished, the line with the text "The fixture is successfully updated" will appear in this window and the fixture will reset with the new software.

Note: In the case of an interruption of the upload process (e.g. power cut), the fixture keeps the updating mode and you have to repeat the software update again.

7. RDM

This fixture is ready for RDM operation. RDM (Remote Device Management) is a bi-directional communications protocol for use in DMX512 control systems, it is the new open standard for DMX512 device configuration and status monitoring.

The RDM protocol allows data packets to be inserted into a DMX512 data stream without adversely affecting existing non-RDM equipment. By using a special „Start Code,“ and by complying with the timing specifications for DMX512, the RDM protocol allows a console or dedicated RDM controller to send commands to and receive messages from specific moving lights.

RDM allows explicit commands to be sent to a device and responses to be received from it.

The list of commands for Robin 8 is the following.

Parameter ID	Discovery command	SET command	GET command
DISC_UNIQUE_BRANCH	*		
DISC_MUTE	*		
DISC_UN_MUTE	*		
DEVICE_INFO			*
SUPPORTED_PARAMETERS			*
SOFTWARE_VERSION_LABEL			*
DMX_START_ADDRESS		*	*
IDENTIFY_DEVICE		*	*

DEVICE_MODEL_DESCRIPTION			*
MANUFACTURER_LABEL			*
DEVICE_LABEL		*	*
SENSOR_DEFINITION			*
SENSOR_VALUE			*
DISPLAY_LEVEL		*	*
DEVICE_RESET		*	
DMX_PERSONALITY		*	*
DMX_PERSONALITY_DESCRIPTION			*
STATUS_MESSAGES			*
STATUS_ID_DESCRIPTION			*
DEVICE_HOURS			*

Please, see the Robe Universal Interface user manual for detail description of RDM operation.

8. Technical specifications

Power supply

- Electronic auto-ranging
 - Input voltage: 100 - 240V AC, 50-60 Hz
 - Fuse: T 5A
 - Max. power consumption*: 150W@230V (power factor=0,94; I=0,64A)
- *Allow for a deviation of +/-10%

Optic & Effects

- Light source: Array of 8 x 15W RGBW LED multichips
- Zoom range: x-axis: 12°-43°(at ½ beamu)
20°-67° (at 1/10 beamu)
y-axis: 8°-40°(at ½ beamu)
15°-62°(at 1/10 beamu)
- RGBW or CMY colour mixing
- Built-in colour macros and pixel effects
- Adjustable strobe sequences
- Typical Lumen maintenance: 70% @ 60.000 hours

Control

- Setting & Addressing: two-row LCD display & 4 control buttons
- Control: USITT DMX 512 (RDM support)
- DMX protocol modes: 4 (14,21,45,53 controll channels)
- Operations modes: DMX, Stand-alone
- Manual control of all effects via control panel
- One editable program, up to 42 steps

Wireless DMX/RDM module (only for Robin CycFX 8 Wireless DMX)

- Compliance with USITT DMX-512 (1986 & 1990) and 512-A

Robin CycFX 8

- Full DMX fidelity and frame integrity
- Auto sensing of DMX frame rate and frame size
- <5ms DMX latency
- Operational frequency range of 2402-2480 MHz
- Producer: LumenRadio

Strobe

- Strobe effect with variable speed (max. 20 flashes per second)
- Pre-programmed random strobe pulse-effects

Dimmer

- Smooth 16-bit dimming from 0 - 100 %

Connection

- DMX data in/out: Locking 3-pin & 5-pin XLR
- Power In: Chassis connector Neutrik PowerCon, A-type, NAC3MPA
- Power Out: Chassis connector Neutrik PowerCon, B-type, NAC3MPB

Rigging

- Via 2 mounting adapters

Temperatures

- Maximum ambient temperature: 40° C
- Maximum housing temperature: 70° C


Total heat dissipation

- 648 BTU/h (calculated)

Weight


- 12 kg

Dimensions (mm)

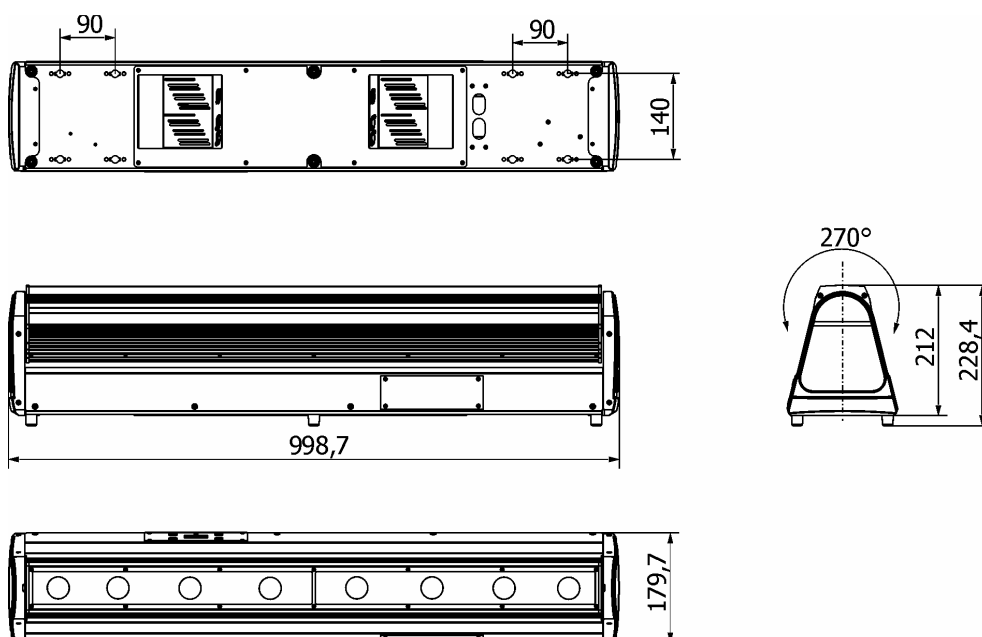

Robin CycFX 8

Mounting bar CF8 (optional)

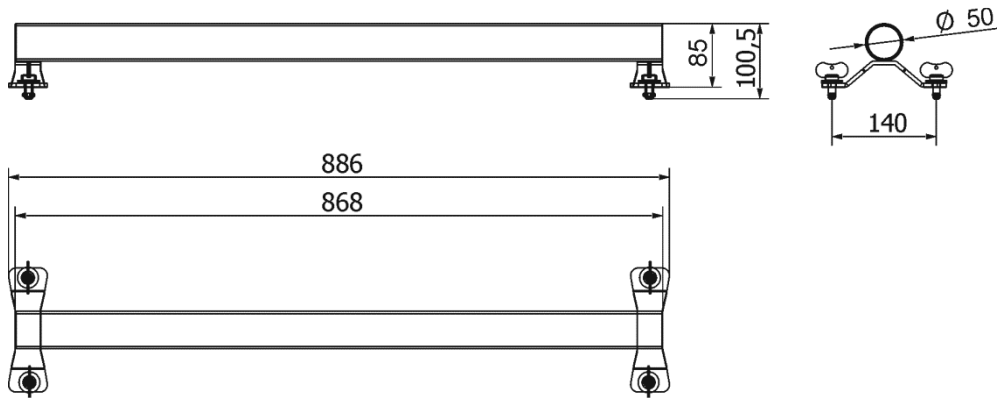

Included items

- 1 x Robin CycFX
- 2 x Mounting adapter (No. 99013990)
- 1 x User manual



Optional accessories

- (P/N 99010420) Omega holder
- (P/N1305 1731) Mains Cable PowerCon In/open ended, 2m
- (P/N 1305 1724) Mains Cable PowerCon In/Schuko, 2m
- (P/N 1305 1725) Mains Cable PowerCon In/CEE 16A, 2m
- (P/N 1305 1726) Mains Cable PowerCon In/US, 2m
- (P/N 1305 1727) Daisy Chain PowerCon In/Out, EU, 2m
- (P/N 1305 1728) Daisy Chain PowerCon In/Out, US, 2m
- (P/N 10980190) Mounting bar CF8

Robin CycFX 8


Beam distribution

Min. zoom

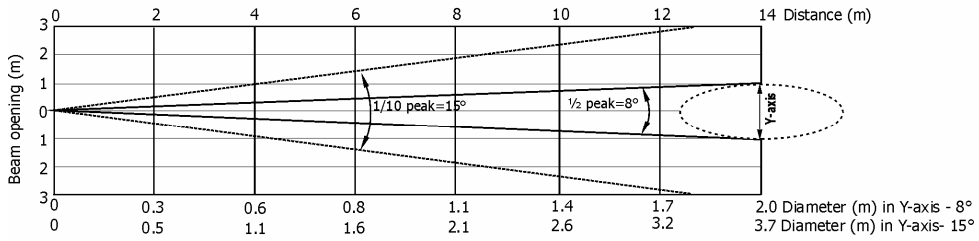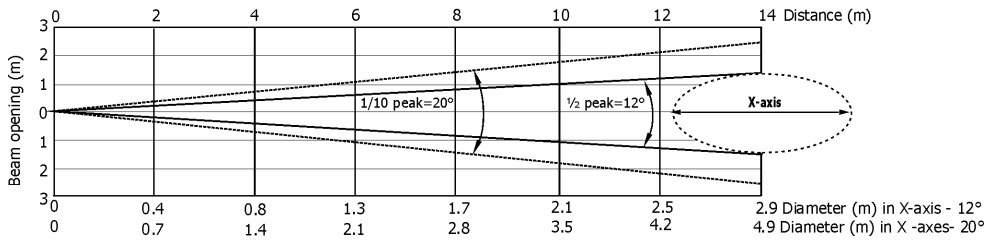


Distance (m)	2	4	5	6	8	10	12	14	
Red	2653/238	641/60	410/38	285/27	160/15	103/10	71/7	52/5	Intensity (Center) Lux/Footcandles
Green	5500/511	1375/128	880/82	611/57	344/32	220/20	153/14	112/10	
Blue	219/20	55/5	35/3.3	24/2.3	14/1.3	9/0.8	6/0.6	5/0.4	
White	6944/645	1736/161	1111/103	772/72	434/40	278/26	193/18	142/103	
R+G+B+W	14344/1333	3586/333	2295/213	1594/148	897/83	574/53	398/37	293/27	

Illuminance distribution in X-axis


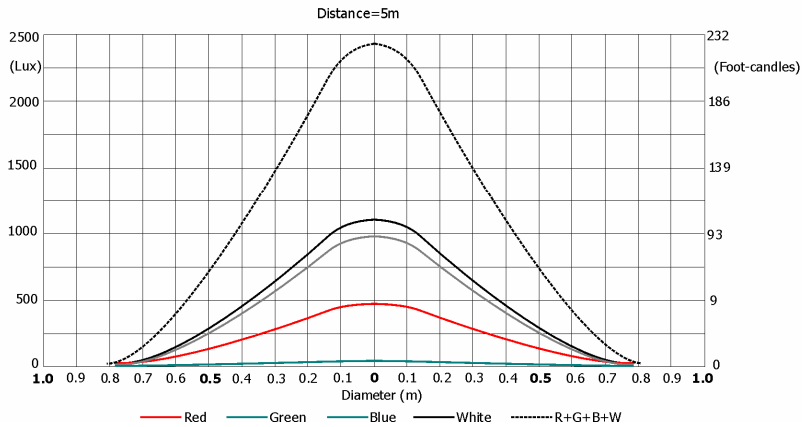


Illuminance distribution in Y-axis

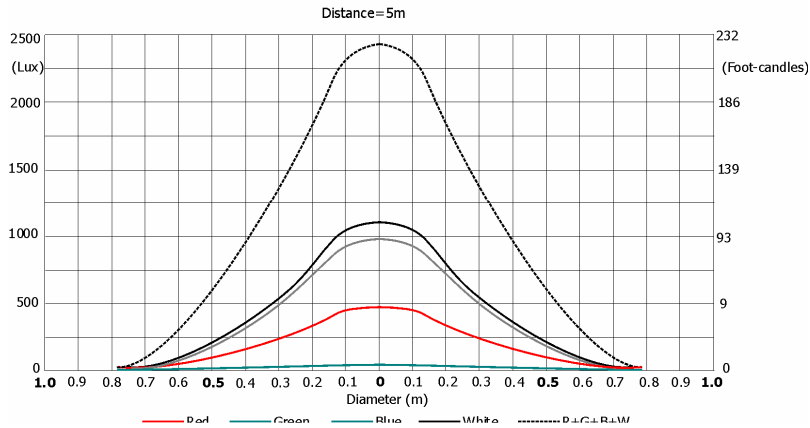


Robin CycFX 8

Max. zoom

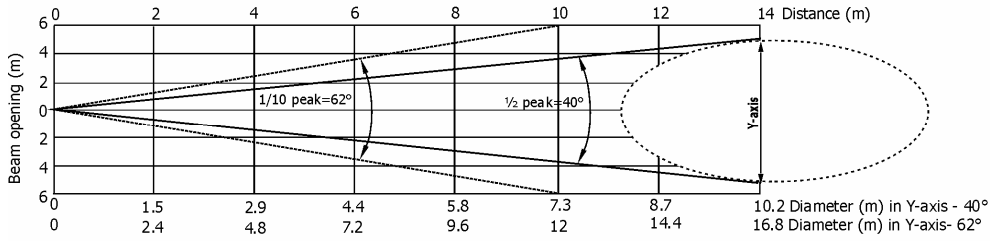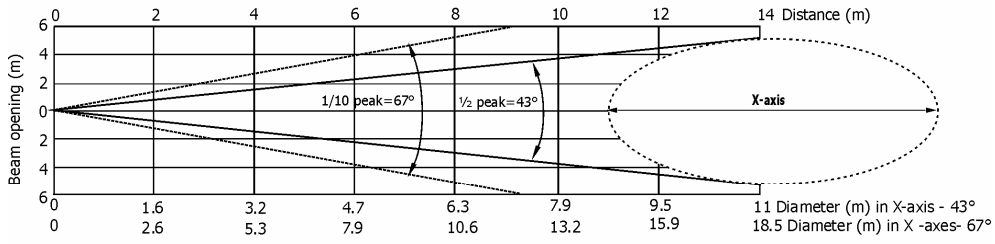


Distance (m)	2	4	5	6	8	10	12	14	
Red	138/13	34/3	22/2	15/1.4	9/0.8	6/0.5	4/0.4	3/0.3	Intensity (center) Lux/footcandles
Green	331/31	83/8	53/5	37/3	21/2	13/1.2	9/0.9	7/0.6	
Blue	19/2	5/0.4	3/0.3	2/0.2	1/0.1	0.8/0.1	0.6/0.08	0.4/0.06	
White	394/37	98/9	63/6	44/4	25/2.3	16/1.5	11/1	8/0.7	
R+G+B+W	825/76	206/19	132/12	92/9	52/5	33/3	23/2	17/1.6	

Illuminance distribution in X-axis

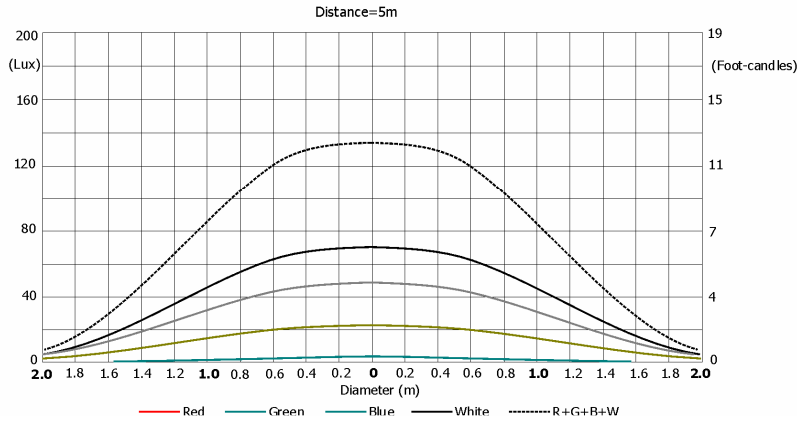

Illuminance distribution in Y-axis

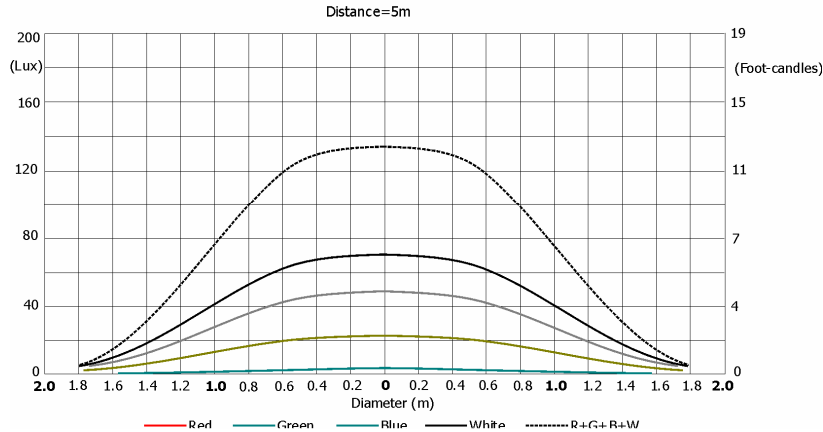

9. Cleaning and maintenance

DANGER !
Disconnect from the mains before starting any cleaning or maintenance work

The front transparent cover will require monthly cleaning as smoke fluid tends to build up residues, reducing the light output very quickly. For cleaning use a wet cloth or an air-jet. Do not use solvents or any other aggressive cleaning fluid.

Maintenance and service operations are only to be carried out by a qualified person. Should you need any spare parts, please use genuine parts.

9.1 Replacing a fuse

This replacement has to be realized by a qualified person or ROBE service worker only.

Specifications are subject to change without notice.

September 30, 2013